



DEWETRON

OPT-POWER

SOFTWARE MANUAL



ISO 9001

Copyright © DEWETRON GmbH

This document contains information which is protected by copyright. All rights are reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

All trademarks and registered trademarks are acknowledged to be the property of their owners.

OPT-POWER - OXYGEN R8.1
Software Manual - V8.1

Preface

The information contained in this document is subject to change without notice.

DEWETRON GmbH (DEWETRON) shall not be liable for any errors contained in this document. DEWETRON MAKES NO WARRANTIES OF ANY KIND WITH REGARD TO THIS DOCUMENT, WHETHER EXPRESS OR IMPLIED. DEWETRON SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

DEWETRON shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any other legal theory, in connection with the furnishing of this document or the use of the information in this document.

Technical Support

Please contact your local authorized DEWETRON representative first for any support and service questions.

For Asia and Europe, please contact:

DEWETRON GmbH
Parkring 4
8074 Grambach
AUSTRIA
Tel.: +43 316 3070-555^a
Fax: +43 316 3070-90
Email: support@dewetron.com
Web: <http://www.dewetron.com>

^aThe telephone hotline is available Monday to Friday between 08:00 and 17:00 CET (GMT +1:00).

For America, please contact:

DEWETRON, Inc.
2850 South County Trail
East Greenwich, RI 02818
U.S.A.
Tel: +1 401 398 7963^b
Fax: +1 401 284 3755
Email: us.support@dewetron.com
Web: <http://www.dewetron.com>

^bThe telephone hotline is available Monday to Friday between 08:00 and 17:00 GST (GMT -5:00).

Restricted Rights Legend

Use Austrian law for duplication or disclosure.

DEWETRON GmbH

Parkring 4
8074 Grambach
AUSTRIA

Please find further information at <https://www.dewetron.com>.

Document History

Document Type: Technical Reference Manual
Document Name: OPT-POWER Manual 8.1

Date	Author	Changes	Revision
15.12.2017	M. Oberhofer	first release version - Power-BASIC, -HARM and -FLUC	2.6
29.05.2018	M. Oberhofer	OXYGEN 3.1 update	3.1
08.04.2019	M. Oberhofer	OXYGEN 3.5 update - Rolling Computation added	3.5
21.06.2019	M. Oberhofer	OXYGEN 3.6 update	3.6
26.09.2019	M. Oberhofer	OXYGEN 3.7 update - Delay Compensation added	3.7
20.12.2019	M. Oberhofer	OXYGEN 5.0 update - Mechanical Power Computation added	5.0
30.03.2020	M. Oberhofer	OXYGEN 5.1 update	5.1
23.06.2020	M. Oberhofer	OXYGEN 5.2 update	5.2
09.03.2021	M. Oberhofer	OXYGEN 5.5 update - d/q Analysis added	5.5
15.12.2021	M. Oberhofer	OXYGEN 6.0 update	6.0
25.03.2022	M. Oberhofer	OXYGEN 6.1 update	6.1
28.09.2022	M. Oberhofer	OXYGEN 6.3 update - capacity calculation added	6.3
09.01.2023	M. Kaiss	OXYGEN 6.4 update - sensorless d/q Analysis added	6.4
26.04.2023	M. Kaiss	OXYGEN 6.5 update - fallback sync source added	6.5
11.07.2023	M. Kaiss	OXYGEN 6.6 update - Flicker impedance angles added	6.6
28.09.2023	M. Kaiss	OXYGEN 6.7 update	6.7
02.02.2024	M. Kaiss	OXYGEN 7.0 update - Power Screen Templates added	7.0
23.05.2024	M. Kaiss	OXYGEN 7.1 update	7.1
18.09.2024	M. Kaiss	OXYGEN 7.2 update	7.2
06.12.2024	M. Kaiss	OXYGEN 7.3 update - Machine Excitation added	7.3
06.02.2025	M. Kaiss	OXYGEN 7.4 update	7.4
02.05.2025	M. Kaiss	OXYGEN 7.5 update - Flicker Reporting added	7.5
31.07.2025	M. Kaiss	OXYGEN 7.6 update - Harmonics Limit Table added	7.6
31.10.2025	M. Kaiss	OXYGEN 7.7 update - Harmonics Faster Update option	7.7
30.01.2026	M. Kaiss	OXYGEN 8.0 update	8.0
12.05.2026	M. Kaiss	OXYGEN 8.1 update - Realtime option	8.1

Contents

1	Getting Started	11
1.1	General Features	11
1.2	Installation and Operation	13
1.3	Functional Check	16
1.4	Setting up sensors	17
1.5	Arrange Instruments	18
1.6	The Power Instrument	19
1.7	Power Screen Templates	20
2	Understanding Power Analyzer Functions	23
2.1	Power Analysis in General	23
2.2	Sub-Sampling Settings	23
2.3	Calculation Modes	24
3	Operating Basics	29
3.1	The PowerGroup Idea	29
3.2	Connection Types	30
3.3	Line-Line Conversion	34
3.4	Power Instrument	34
3.5	Load/Save Configuration Setup	44
3.6	Recording Data	44
3.7	Analyze Data	44
3.8	Export Data	44
4	Troubleshooting	45
5	Additional Information	47
5.1	Hardware Specific Settings	47
6	Basic Calculation Reference (OPT-POWER-BASIC)	49
6.1	Voltage (U)	51
6.2	Current (I)	55
6.3	Active Power (P)	58
6.4	Reactive Power (Q)	59
6.5	Apparent Power (S)	59
6.6	Power Factor (PF)	60
6.7	Energy (W)	60
6.8	Additional Channels	63
7	Harmonic Analysis Reference (OPT-POWER-ADV)	65
7.1	Settings	67
7.2	Harmonic Grouping	68

7.3	Interharmonic Grouping	70
7.4	Higher Frequency Grouping	71
7.5	Supraharmonics Grouping	72
7.6	Harmonic Element Extraction	74
7.7	Voltage Channels (U)	74
7.8	Current Channels (I)	76
7.9	Active Power Channels (P)	78
7.10	Impedance Channels (RXZ)	78
8	Voltage Fluctuation and Flicker Emission Analysis Reference (OPT-POWER-ADV)	81
8.1	Introduction	81
8.2	Perform Analysis	82
8.3	Flicker Emission	84
8.4	Short Term Voltage Fluctuations / d-Parameter	85
8.5	Channel Reference	87
9	Rolling Computation (OPT-POWER-EXP)	89
9.1	Channel Reference (Basic)	92
9.2	Channel Reference (Symmetrical Components)	95
10	Efficiency (OPT-POWER-ADV)	101
10.1	Channel Reference	102
11	d/q Analysis (OPT-POWER-ADV)	105
11.1	Quick Start	108
11.2	Angle Measurement	108
11.3	Channel Reference	109
12	Realtime (OPT-POWER-RT)	111

1 Getting Started

OXYGEN OPT-POWER (OXYGEN Power) is up to date Power Analyzer software option of the award winning OXYGEN Measurement Software from DEWETRON that you can use with most of the DEWETRON Hardware Devices.

In addition to the list of general features, this chapter describes how to perform the following tasks:

- Activate features
- Setting up transducers
- Perform simple measurement
- Save and load setups

INFORMATION

DEWETRON offers taylor made product and application trainings to support you with your measurement and analysis. Please contact us for more information

1.1 General Features

The following table shows the general functions. Overview of major devices and features.

Type	Hardware	Bandwidth	Samplerate	Phasecount
PA-TRIONet3	TRION3-1810-HV	5 MHz	1 MS/s	4
LITE[PA]	LITEPA-4	5 MHz	10 MS/s	8
DEWE3-A4/A4L/M4	TRION3-1810M-POWER-4	5 MHz	10 MS/s	8
DEWE3-PA8	TRION3-1810M-POWER-4	5 MHz	10 MS/s	16
DEWE3-RMx	TRION3-1810M-POWER-4	5 MHz	10 MS/s	32

The following configuration features are available to maximize flexibility and analysis comfort:

- Full flexible input configuration
- Simple setup within seconds
- Individual phase groups (up to 9 phases per PowerGroup)
- Free selectable sync channel
- Unlimited recording (only limited by harddisk space)

In addition to the great measurement functions of OXYGEN, the POWER-Option enables the detailed analysis of the phase values and total values in L-N configuration (each total and fundamental):

- Voltage (RMS, AVG, PHI, Peak-Peak)
- Current (RMS, AVG, PHI, Peak-Peak)
- Active Power (AVG, PHI)
- Reactive Power (AVG)
- Apparent Power (AVG)
- Power Factor (AVG)
- Fundamental Frequency (0.2 – 200 kHz)
- Harmonics (up to 1000th order)
- Interharmonic (up to 1000.5th order)
- Higher Frequencies (2-9 kHz Grouping)
- Supraharmonics (8-150 kHz with 2 kHz Grouping)
- Voltage Fluctuation Pst, Plt, dc, dmax, td (50 Hz, 60 Hz)
- Flicker Emission Pst_fic, Plt_fic (50 Hz, 60 Hz)
- Rolling Computation (Update every 1ms)
- Mechanical Power Computation and Efficiency
- D/Q Analysis

INFORMATION


The requirements for full functionality and maximum speed are:

- CPU: Intel Core i5 3rd Generation or better
- RAM: 8 GB or greater
- DAQ: TRION or Orion
- OS: Windows 7 64 Bit or newer (Linux Version on request)
- Preinstalled DAQ driver (TRION API or Orion driver)

1.2 Installation and Operation


1. Switch on your DEWETRON measurement device
2. Use the provided DEWETRON OXYGEN Installer if not installed already.
3. Start the OXYGEN measurement software (if not automatically)

After startup, you see the following measurement screen:

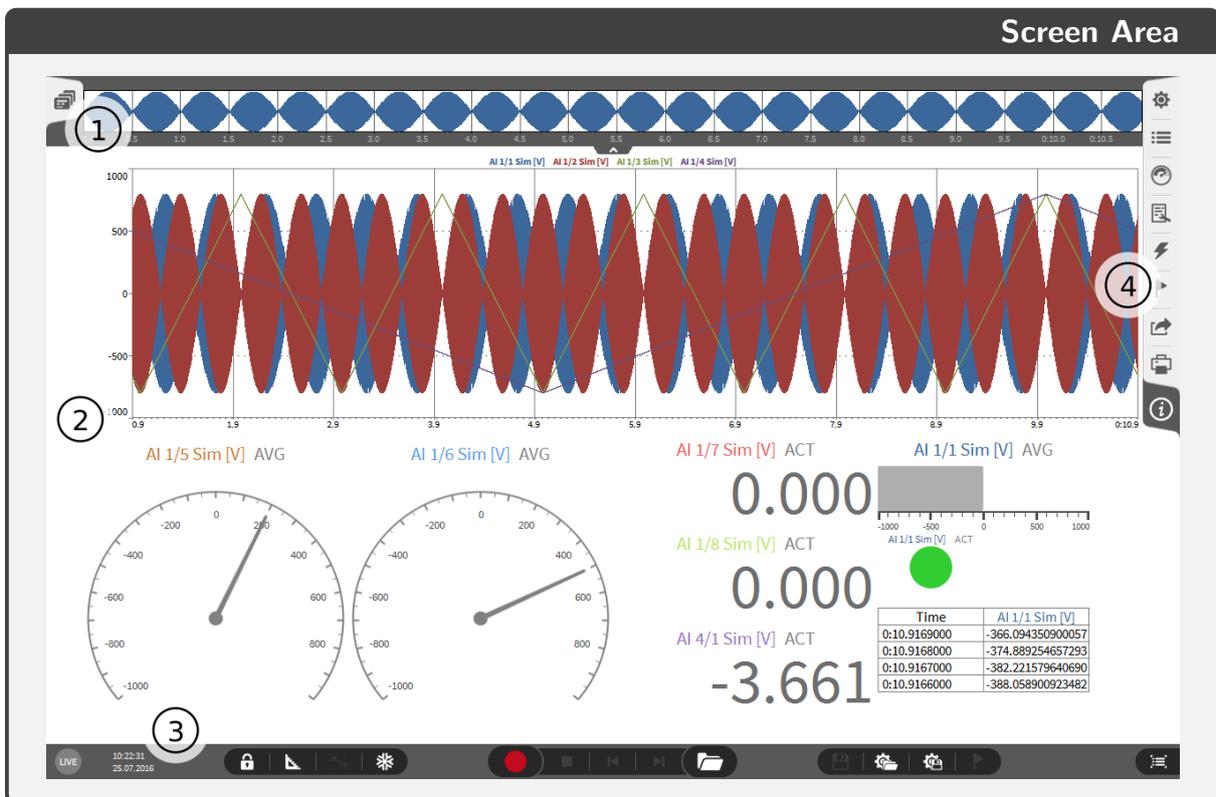


- | | |
|------------------------|--------------|
| ① Open screen overview | ③ Action Bar |
| ② Instrument area | ④ Menu Bar |


This is the "main" screen of the instrument to operate all measurements, readings, recordings and settings. There is not only one screen, you can define a couple of them, each with different instruments and views to stay focused during the measurement application. To open the screen overview, just click or slide ①. The instrument area ② is the place, where you can drag'n'drop all different instruments (recorder, scope, digital meter, gauge, power instrument...) and arrange them as you like. All actions can be performed in the "Action Bar" ③ to start/stop a recording, load and save data and configuration setups. The bar on the right side is the "Menu Bar" ④ contains the settings in logical groups.

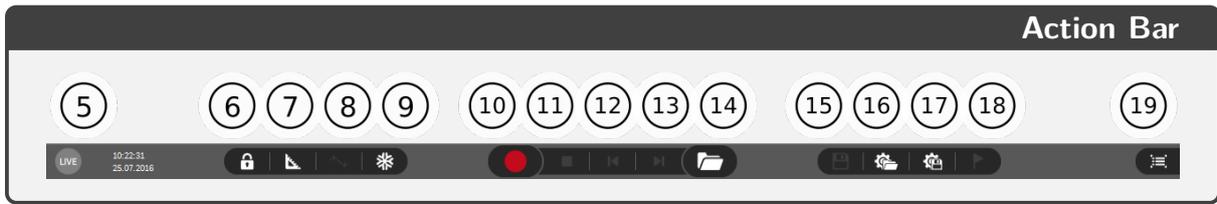


- ⑤ Instrument state indicator
- ⑥ Screen lock
- ⑦ Design mode
- ⑧ Activate/Deactivate cursor for active instrument
- ⑨ Freeze screen content
- ⑩ Start recording / Arm trigger
- ⑪ Stop recording
- ⑫ Jump backward
- ⑬ Jump forward
- ⑭ Open Data File for Analysis (.dmd)
- ⑮ Save changes in Data File (Play Mode)
- ⑯ Open configuration setup (.dms)
- ⑰ Save configuration setup (.dms)
- ⑱ Insert marker during recording
- ⑲ Open/Close channel overview list

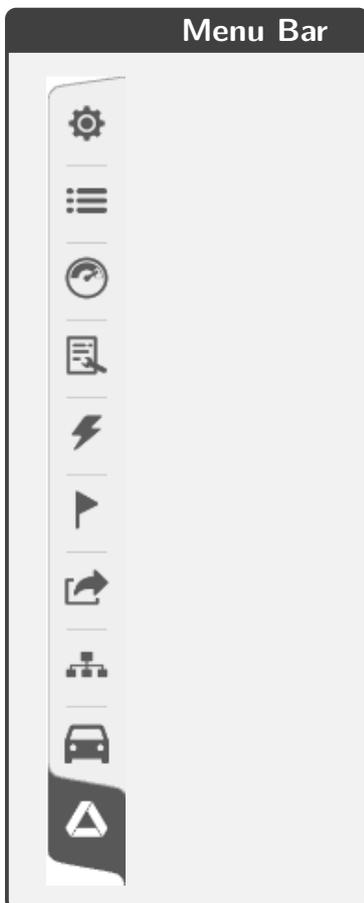

- ⑳ Open measurement settings and recording file name
- ㉑ Open channel overview list
- ㉒ Open instrument selection
- ㉓ Open current selected instrument properties
- ㉔ Open trigger and storing options menu
- ㉕ Open event list
- ㉖ Open export menu
- ㉗ Open print/screen copy menu
- ㉘ Open info screen and OXYGEN setup

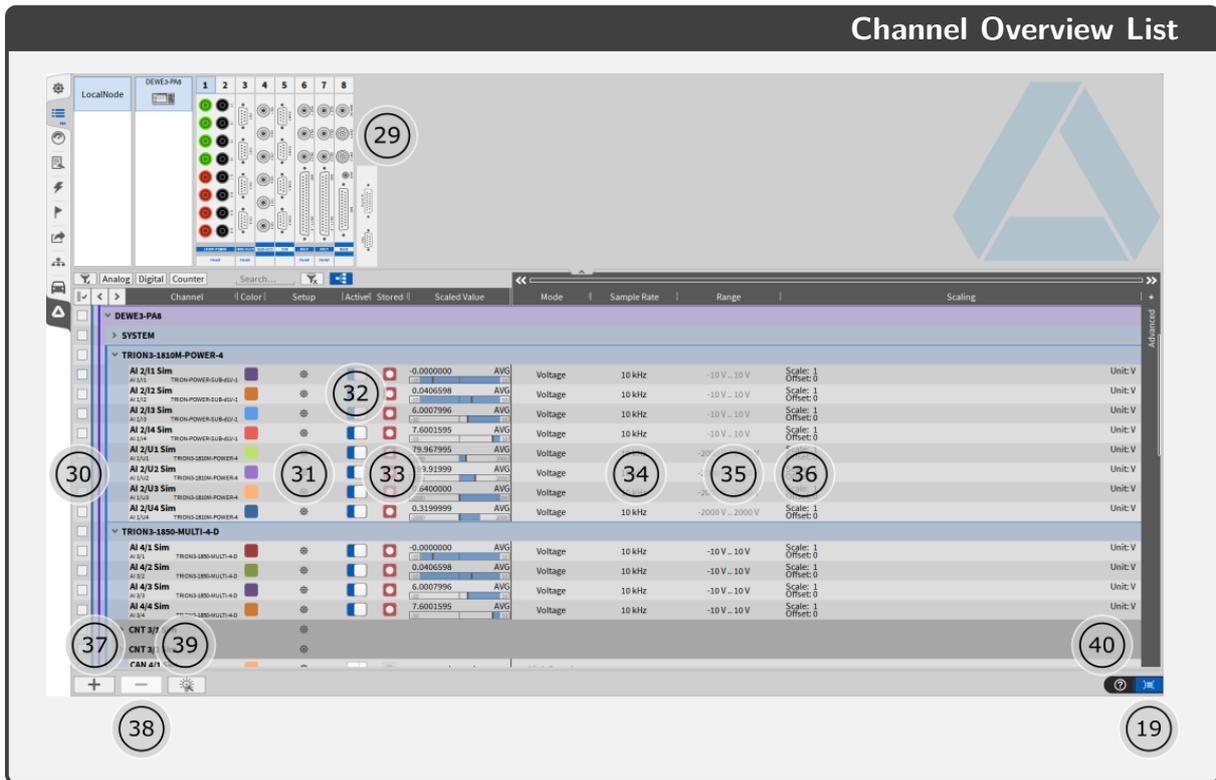

- 29 Graphical and interactive input view
- 30 Multi-Select indicator
- 31 Channel detail setup
- 32 Channel active slider
- 33 Storing indicator (red when stored, grey only for viewing)
- 34 Sample Rate selector
- 35 Range selector
- 36 Scaling settings
- 37 Add calculated channel (statistics, filter, formulas, etc.)
- 38 Delete selected channels (if possible)
- 39 Create PowerGroup with selected channels (channel count must be even number)
- 40 OXYGEN help and welcome tour
- 19 Open/Close channel overview list

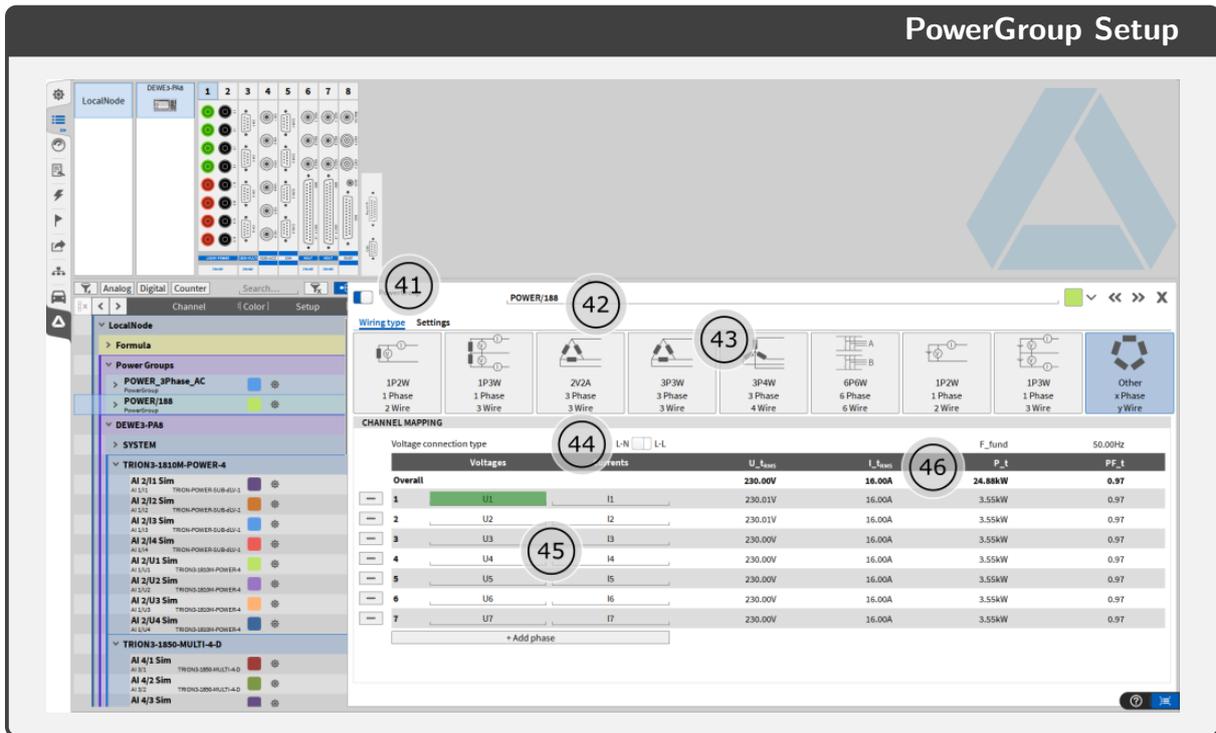

- 41 Switch between Wiring Type and advanced Settings
- 42 Name of PowerGroup (click to change)
- 43 Selected Wiring Type (choose one of the pre-defined or Other)
- 44 Voltage input connection type switch
L-N: Input is Line-Neutral Voltage,
L-L: Input is Line-Line Voltage
- 45 Phase input channels (drag'n'drop from left channel list)
- 46 Overview Table


1.3 Functional Check

For a quick functional check and first measurement experience, please use a test cable (mains plug with to safety banana plugs) and test voltage magnitude.

1. Switch on your DEWETRON device
2. Connect the mains plug of the test cable to a wall socket and the banana plugs to an voltage input of the DEWETRON device
3. Navigate to the channel list on the screen 19 or 21
4. Set Samplerate to at least 100 kHz
5. Press "Create Power Group" button 39
6. Select the Wiring Type **1P2W** in the selection above 43
7. Drag'n'Drop the Voltage Input channel into the U1 Field
8. Drag'n'Drop Current Input channel into the I1 Field

9. Check mains voltage in the preview

First Setup

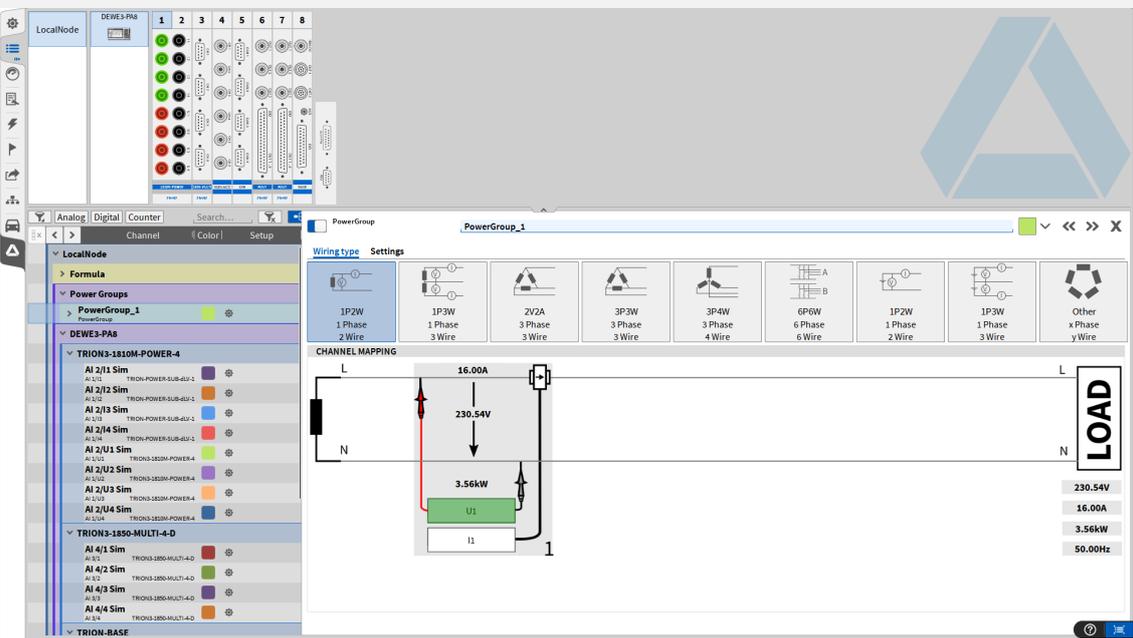

Info: The green highlighted box is the actually selected synchronisation source.

Wiring type	Settings
1P2W 1 Phase 2 Wire	
1P3W 1 Phase 3 Wire	
2V2A 3 Phase 3 Wire	
3P3W 3 Phase 3 Wire	
3P4W 3 Phase 4 Wire	
6P6W 6 Phase 6 Wire	
1P2W 1 Phase 2 Wire	
1P3W 1 Phase 3 Wire	
Other x Phase y Wire	

CHANNEL MAPPING	
L	L
N	N
	LOAD
	230.54V
	16.00A
	3.56kW
	50.00Hz


WARNING

Please make sure, that you use only an appropriate isolated input channel. Examples for this are TRION(3)-POWER and TRION(3)-HV boards.

1.4 Setting up sensors

To make properly measurements, the sensor scalings (e.g. current transducers) have to be set correctly. In the most cases, the sensor label gives information about the input/output scaling. This value is often known as "transducer factor", "ratio" or "sensitivity". Important is the unit of the scaling, e.g. 20mV/A or 50A/V or 1:50. The order to input the correct scaling is the following:

- Click/Touch the "Scaling" field of the concerning channel (35)
- The Channel Scaling pops up to change the defaults
- Change the unit to the primary measured unit (e.g. A for Amps)
- Enter the scaling value directly if given in the shown unit (e.g. A/V)
- If the sensitivity is given, select the sensitivity button and enter the value

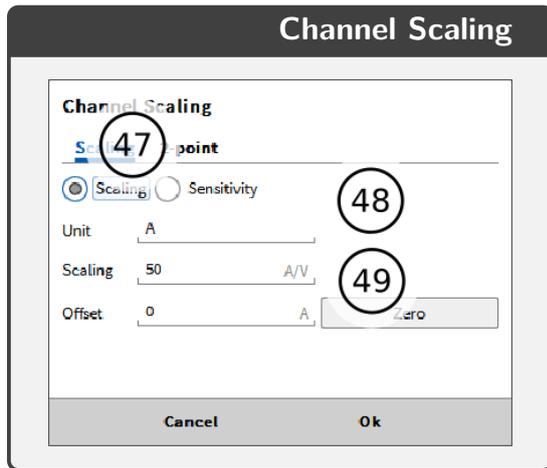

- (47) Scaling/Sensitivity selector (switch between modes)
- (48) Unit field, input physical value here
- (49) Scaling/Sensitivity input (according to shown unit)

1.5 Arrange Instruments

Now it is time to launch the measurement.

1. Leave the channel setup by pressing (19) (or sliding (21))
2. Clear the screen by opening the instrument selector (22) and pressing the button "Clear" at the bottom.
3. Create an instrument (e.g. Power Instrument) by changing to the channel list (press (21)) and drag'n'drop the PowerGroup channel onto the instrument area (Default Name of PowerGroup is POWER/Number).
4. Arrange and resize the instrument for a good view.
5. Add another instrument by moving to the instrument list (22) and drag'n'drop an item to the screen
6. Append Channels by selecting them from the channel list (21)

1.6 The Power Instrument


The screenshot displays the 'Power Instrument' interface. The main window shows a table titled 'POWER_3Phase' with columns for Phase 1, Phase 2, Phase 3, and Total. The table contains various power parameters such as U_tRMS, I_tRMS, P_t, Q_t, S_t, PF_t, F_fund, U_fundRMS, I_fundRMS, P_fund, Q_fund, and S_fund. A circled '51' is placed over the U_tRMS value in the Phase 1 column. To the right, a settings panel is visible with a circled '52' over the 'Color Theme: Mono' option. The settings panel includes sections for 'STYLE', 'HARMONICS', and 'HARMONICS TABLES'.

	Phase 1	Phase 2	Phase 3	Total
U_tRMS	237.19 V	236.91 V	237.25 V	237.12 V
I_tRMS	14.533 A	14.504 A	14.454 A	14.497 A
P_t	3.1611 kW	3.1522 kW	3.1365 kW	9.4498 kW
Q_t	-1.3742 kvar	-1.3668 kvar	-1.3842 kvar	-4.1281 kvar
S_t	3.4472 kVA	3.4364 kVA	3.4292 kVA	10.313 kVA
PF_t	0.9169	0.9172	0.9146	0.9163
F_fund				50.011 Hz
U_fundRMS	229.21 V	229.10 V	229.13 V	229.15 V
I_fundRMS	14.039 A	14.029 A	13.967 A	14.012 A
P_fund	3.1601 kW	3.1540 kW	3.1398 kW	9.4538 kW
Q_fund	-602.26 var	-613.79 var	-614.41 var	-1.8305 kvar
S_fund	3.2179 kVA	3.2140 kVA	3.2004 kVA	9.6323 kVA

- ⑤① Name of shown PowerGroup
- ⑤② Instrument view selector (Overview Table, Phasors, Harmonics)
- ⑤③ Instrument settings

You can also add other instruments to the screen, simply by drag'n'drop. To add a channel to specific instruments, just select them in the channel list and drag'n'drop on the instrument. Or simple select the instrument first and assign channels afterwards by selecting them in the channel list.

1.7 Power Screen Templates

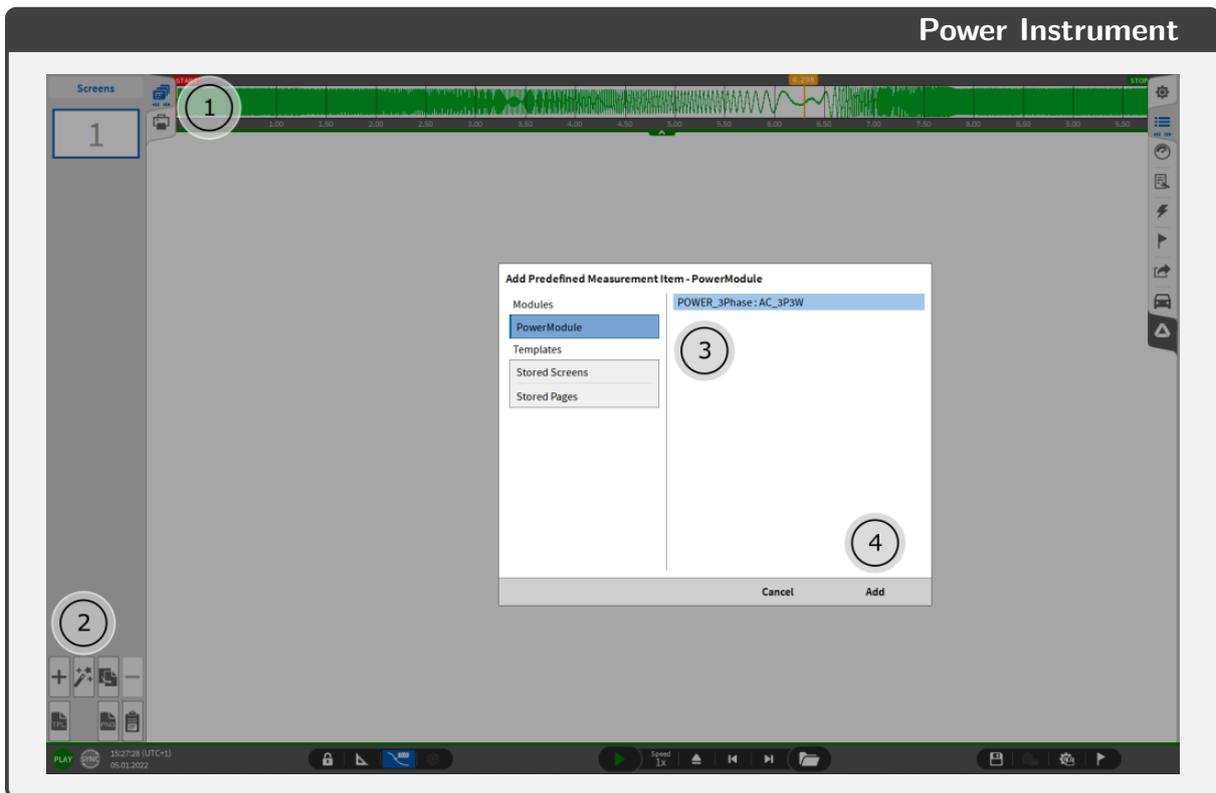

- ① Open Screens
- ② Add predefined item
- ③ Select Power Module Template
- ④ Add Power Screen Template

Adding the predefined PowerModule for a Power Group will add a new measurement screen with a prearranged group of instruments. This is available for each created Power Group in your setup. Templates are available for each wiring type.




- ① List display of the power instrument
- ② Vector diagram of the power instrument
- ③ Voltage Chart Recorder_3 in Range of 10 seconds
- ④ Current Chart Recorder in Range of 10 seconds

The Power Templates always consist of a group of 4 instruments. The top 2 instruments are displaying the calculated power values in list and vector form. The bottom two instruments are displaying the raw waveforms of voltage and current in chart recorders. The voltage signals and the current signals are displayed in one chart recorder respectively. The signals are displayed in a time range of 10s and automatically scaled to fit to the value-axis. The two chart recorders are linked, so scrolling in one recorder to change the time scale will also affect the other recorder in the same way.

Double clicking on any instrument on the template measurement screen will open the Instrument Group Settings. You can change the Instrument Group display name, visible on the top center of the screen and you can dismantle the group into each separate instrument. After dismantling the Group it is possible to resize and rearrange the instruments as well as changing individual instrument settings.

2 Understanding Power Analyzer Functions


This chapter contains the basic functionality of OXYGEN Power, its provided measurement capabilities and output channels.

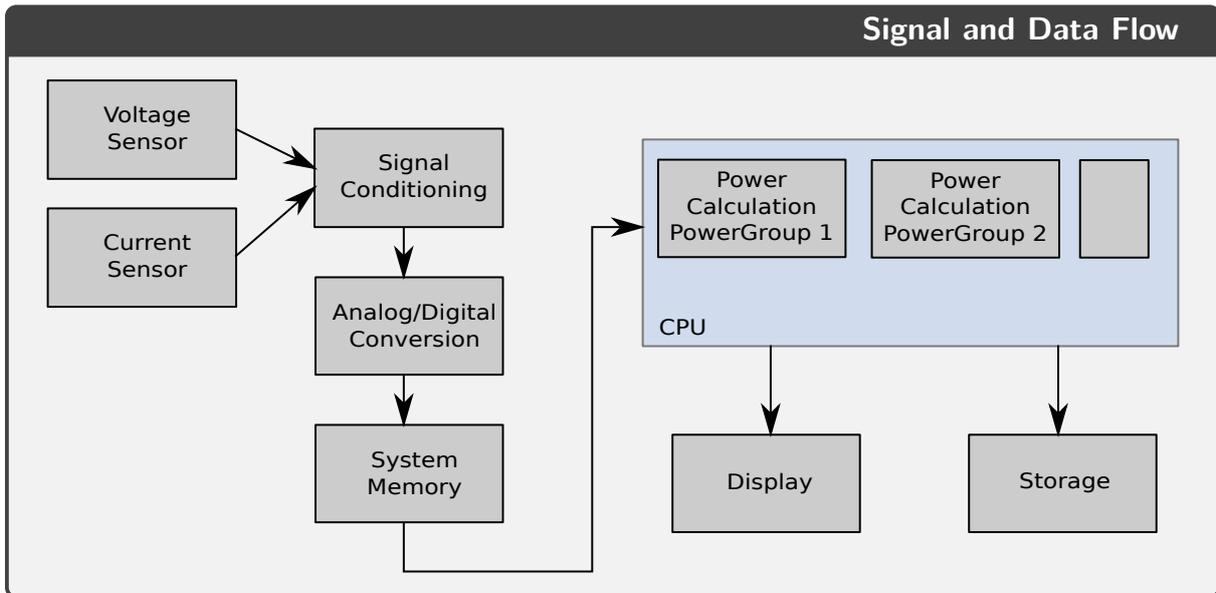

2.1 Power Analysis in General

Power Analysis basically consists of the following Topics:

- Analysis of Voltage and Current Magnitude
- Analysis of Active Power
- Analysis of Reactive Power

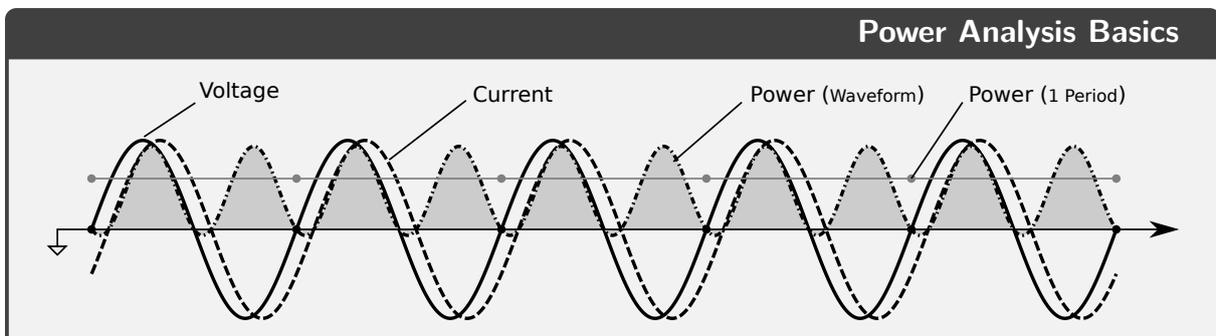

2.2 Sub-Sampling Settings

To Reduce the calculation load on the measurement device, it is possible to select a subsampling factor. This can be AUTO or a Number between 1 to 5. It reduced the data rate of the input

channel by the set factor via skipping algorithm. **Please only modify if necessary!**

Table 2.1: AUTO Subsampling Factors

Samplerate	Subsampling Factor
$\leq 2 \text{ MS/s}$	1 (= no Subsampling)
$> 2\text{MS/s} - 4 \text{ MS/s}$	2
$> 4\text{MS/s} - 6 \text{ MS/s}$	3
$> 6\text{MS/s} - 8 \text{ MS/s}$	4
$> 8\text{MS/s}$	5

2.3 Calculation Modes

The Calculation Cycles depends on the **SYNC Source** settings. This can be **Input Channel** (Waveform of the selected channel) or **Time Interval** (Fixed Interval, available only in DC or Other Wiring Types). The typically operation mode is Input Channel with the first voltage channel (U1).

2.3.1 Interval Mode

This mode is mainly for DC measurements and high fundamental frequencies.

2.3.2 Sync Channel Mode


The Sync Mode is typical for major periodic signals, like rotary field motors or grid connected appliances. In this mode, the calculation of all power output channels is synchronized to the selected channel's fundamental waveform Zero-Crossings. This guarantees a precise and highly dynamic measurement of all power channels. Most of the power values are updated every single period. The minimum update rate is 0.1ms but at least 1 fundamental period.

Frequency Measurement

The frequency measurement is done by zero-cross detection. A smart frequency input filter guarantees maximum accuracy, speed and stability.

Table 2.2: Minimum Fundamental Frequency depending on Samplerate

Samplerate	Minimum Fundamental
$< 10 \text{ kHz}$	None
$10 \text{ kHz} - 20 \text{ kHz}$	0.2 Hz
$20 \text{ kHz} - 1 \text{ MHz}$	0.2 Hz
$1 \text{ MHz} - 2 \text{ MHz}$	0.5 Hz
$2 \text{ MHz} - 4 \text{ MHz}$	1 Hz
$> 5 \text{ MHz}$	2 Hz

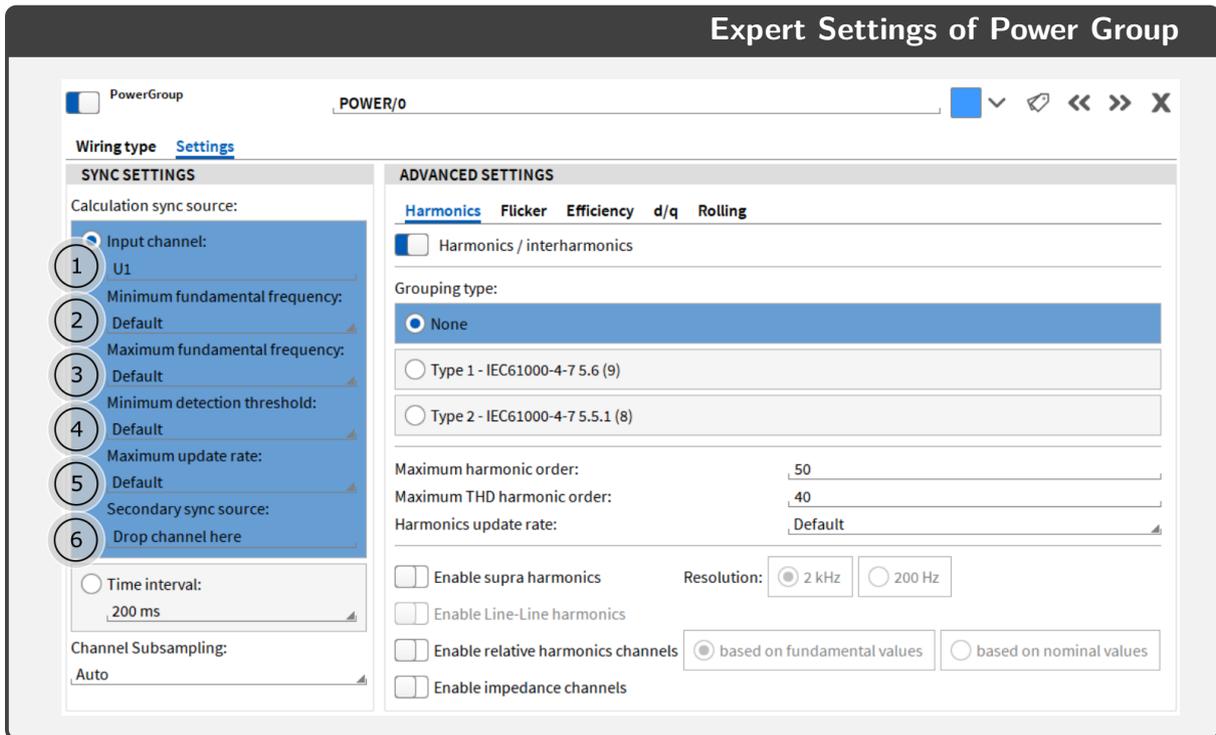

- ① Synchronisation channel, Drop channel from channel list, Default=First Voltage Channel of Power Group
- ② Minimum fundamental frequency input field (0.2 - f_{max})
- ③ Maximum fundamental frequency (f_{min} - $0.1 \cdot \text{Samplerate}$ Hz)
- ④ Minimum detection threshold (Default / 0.0% to 50% of Input Range)
- ⑤ Maximum update rate (Default / 1 - 5000 ms / 1-100 periods)
- ⑥ Secondary sync source, Drop channel from channel list, Default = Empty

Minimum fundamental frequency

This input field holds the setting for the minimum fundamental frequency in Hz which can be measured (lower limit). The following settings are available:

- **Default:** Standard setting, uses 0.2 Hz internally (up to 1MS/s) and >0.5 Hz above. The actual value is the lower bound of the F_{fund} channel range.
- **0.2 .. f_{max} Hz:** User defined setting, the possible range is between Default and 100 Hz.

Maximum fundamental frequency

This input field holds the setting for the maximum fundamental frequency in Hz which can be measured (upper limit) The following settings are available:

- **Default:** Standard setting, uses 1500 Hz internally (>20 kS/s). The actual value is the upper bound of the F_{fund} channel range.
- **Auto:** Uses $1/10$ of Samplerate
- **f_{min} .. Samplerate/10 Hz:** User defined setting, the possible range is between f_{min} and $1/10$ of Samplerate.

Minimum detection threshold


This input field holds the setting for the Minimum detection threshold in % of the sync channels input range. The following settings are available:

- **Default:** Standard setting, dynamically adapted to actual fundamental frequency and SNR level
- **0 - 50%:** Override setting for Zero Crossing detection threshold in % of range

Maximum update rate

The Maximum update rate is the maximum frequency of the calculated output channels. Input a time interval in millisecond or a number of periods. After entering a number **ms** or **periods** can be selected from a dropdown menu.

- **Default:** Standard setting, uses 1 ms internally
- **1 .. 5000 ms:** User defined setting
- **1 .. 100 periods:** User defined setting
- **SYNC to HARMONIC:** Synchronize basic calculation parameters to Harmonic Calculation update rate.

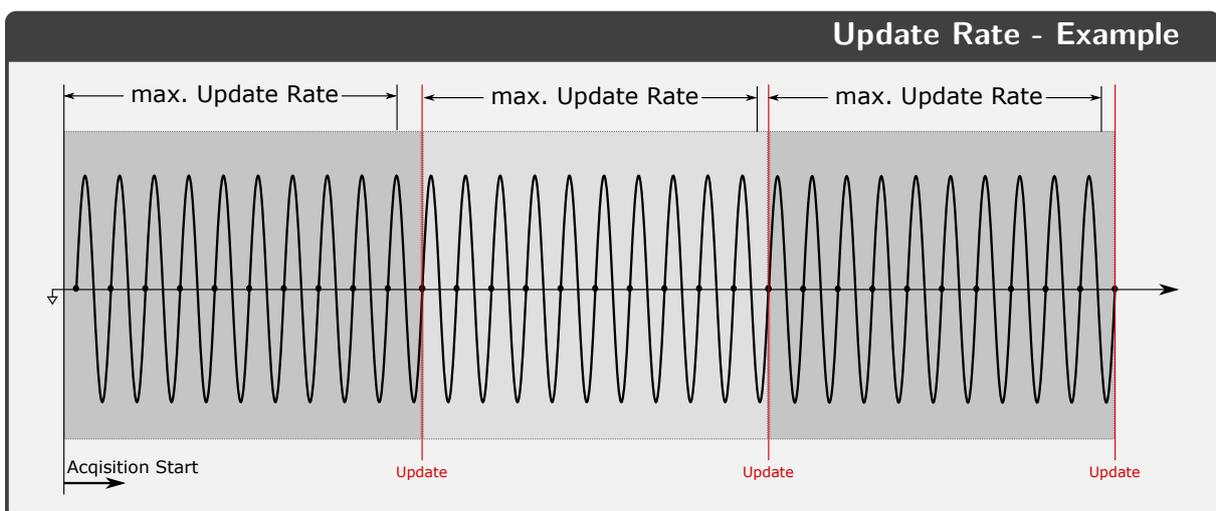

Secondary sync source

The secondary sync source is a fallback channel in case the fundamental frequency in the primary sync source in ① cannot be detected.

INFORMATION

If the fundamental Frequency value is out of range or the magnitude of the Sync Channel is lower than 0.2% of the input range, the calculation interval is set to fixed time until the signal is back in range.

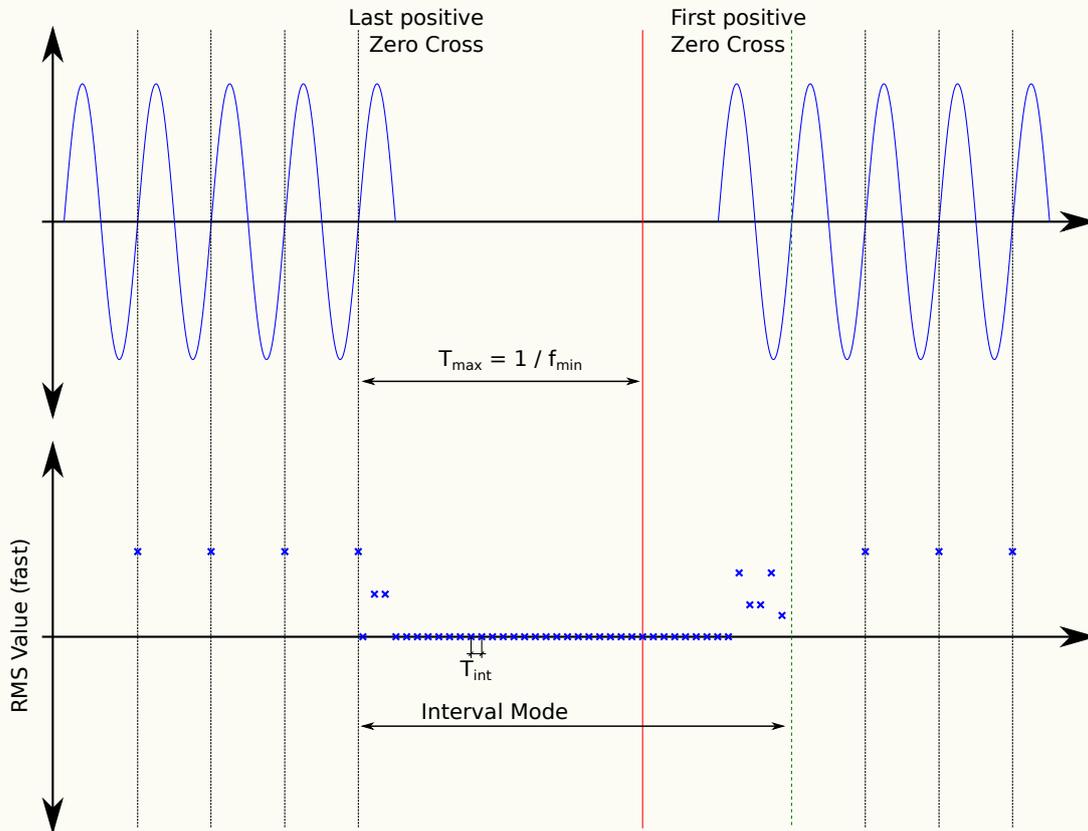



Figure 2.1: Calculation Intervals with Gaps. If the distance between two positive Zero Crossings is greater than the maximum detectable fundamental period time, the calculation interval is switched to fixed time base until a full period is detected again.

3 Operating Basics

The DEWETRON OXYGEN is arranged in different easy-to-use functional areas. This chapter provides a quick overview of the controls and visualisations.

3.1 The PowerGroup Idea

To understand the terminology of the PowerGroup and the PowerPhase, let's explain it with the following graphics: The PowerGroup consists of multiple PowerPhases which are Voltage-Current pairs. Each PowerPhase is evaluated individually and synchronously. The PowerGroup values are aggregated values from each PowerPhase and share their common fundamental frequency (Common Sync) which can be chosen separately.

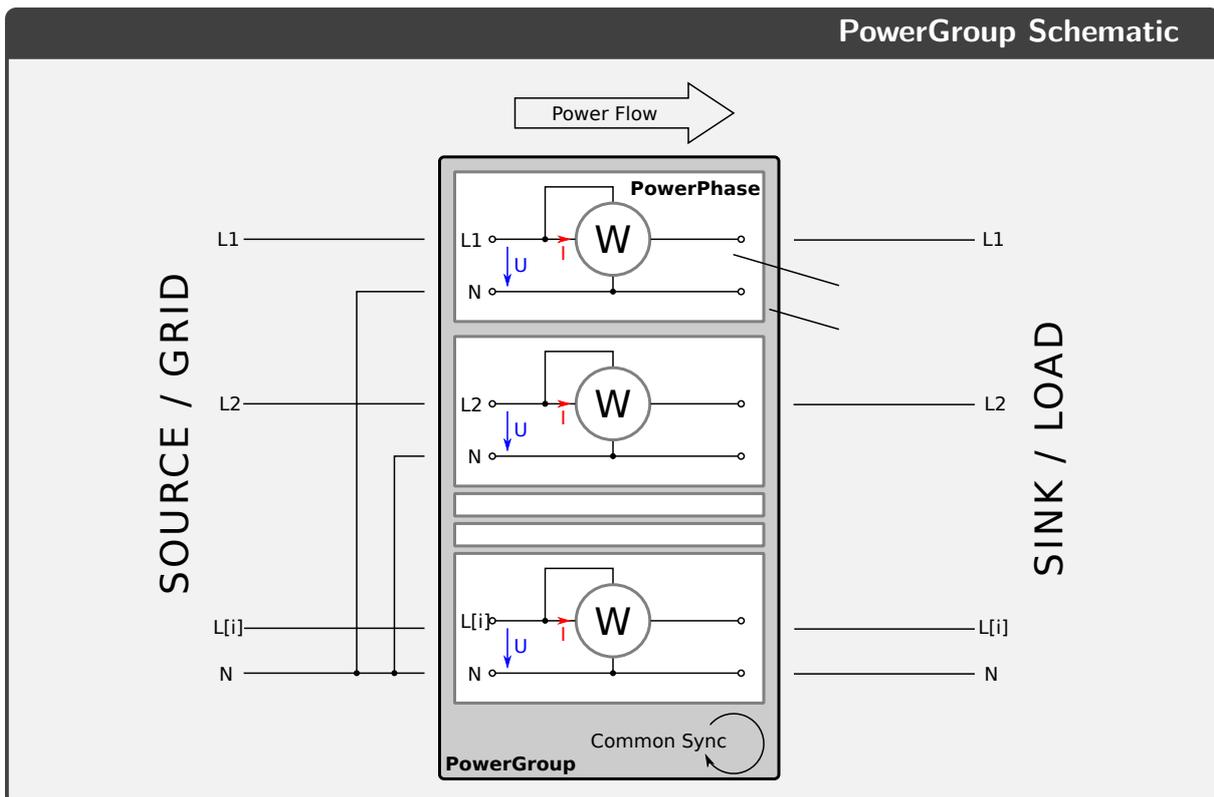


INFORMATION

- When the physical Power Flow leads the description in the schematic, the active power values are positive.
- The internal power calculation is always converted to separate phases with a virtual Star Point.


3.2 Connection Types




This design is open to be used with almost every connection type and phase count.



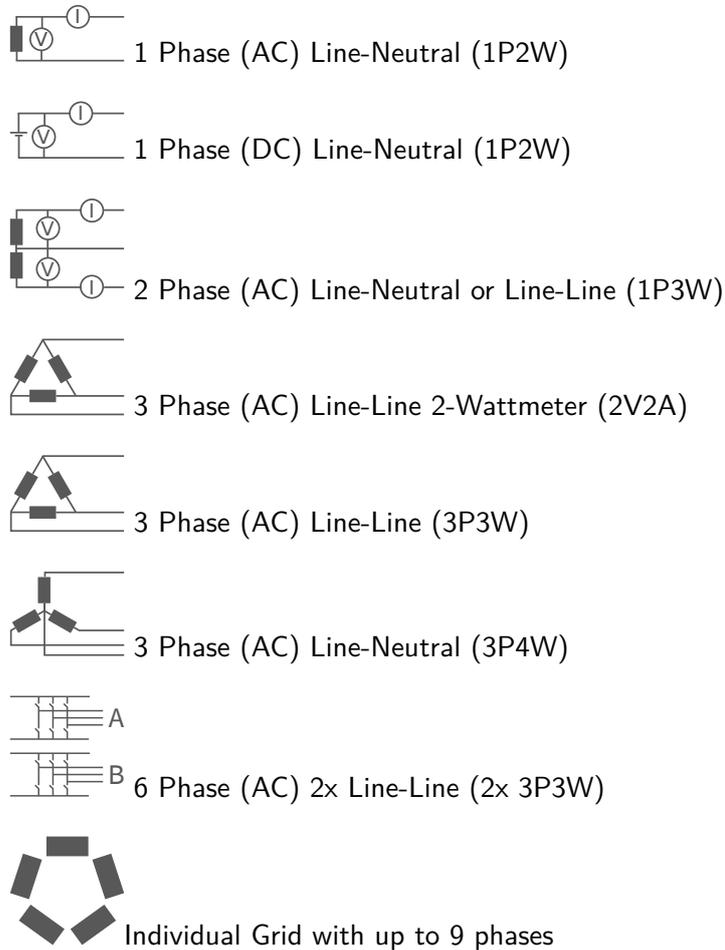



INFORMATION

Every PowerGroup can be used with any type of connection. This enables you, to do simultaneous measurements on different grid types and compare them online.

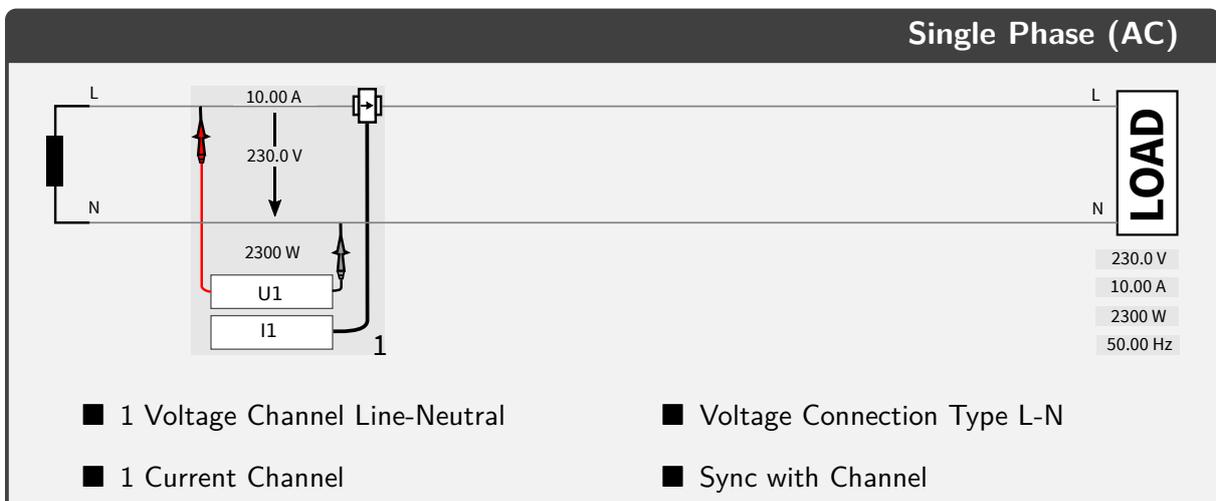

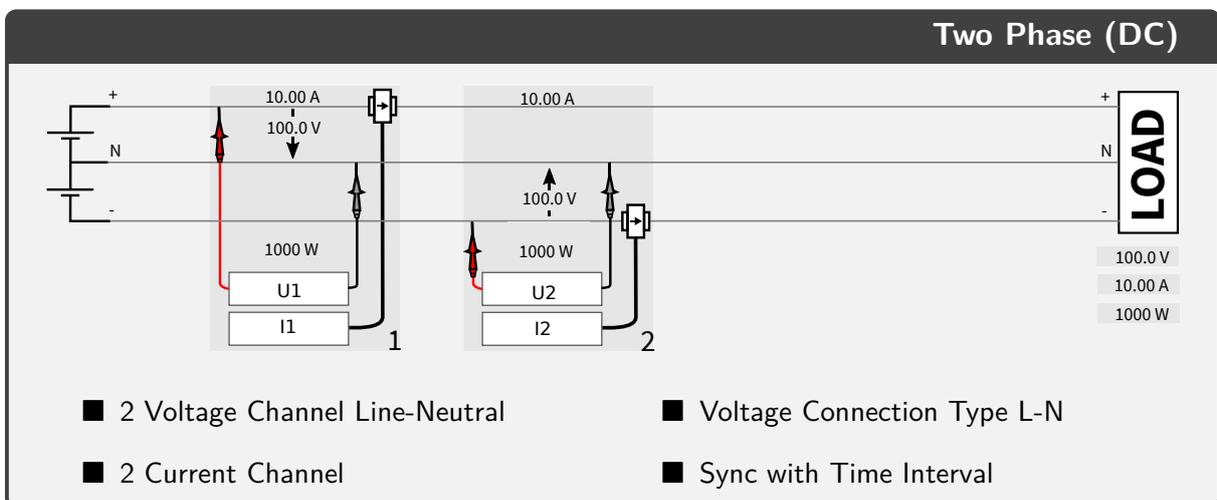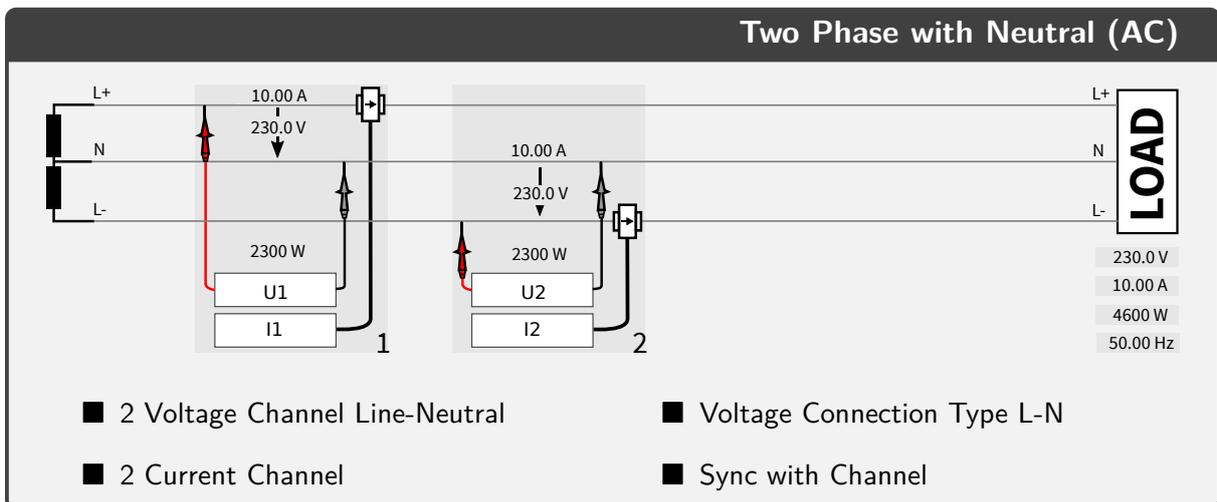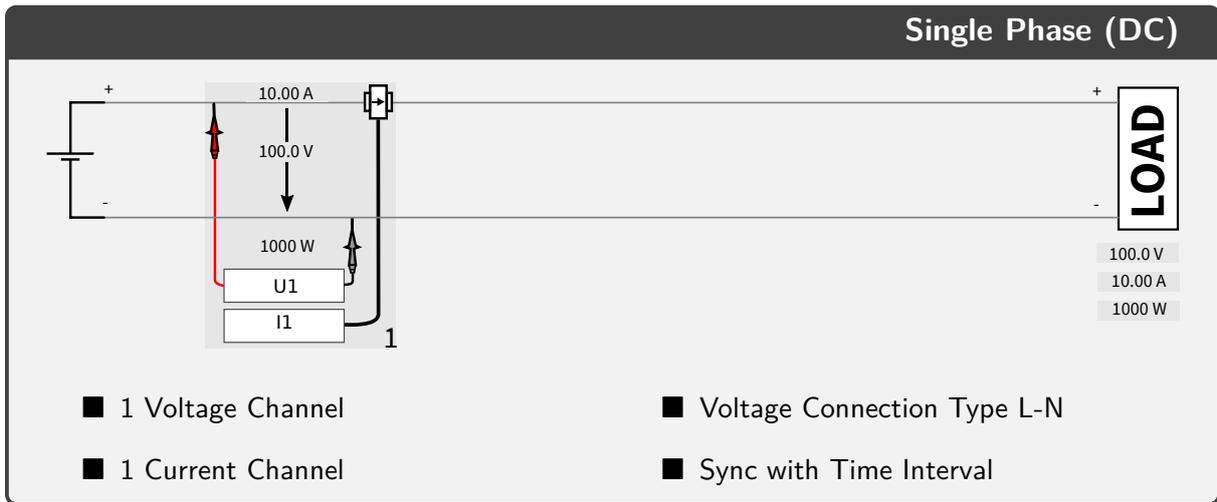


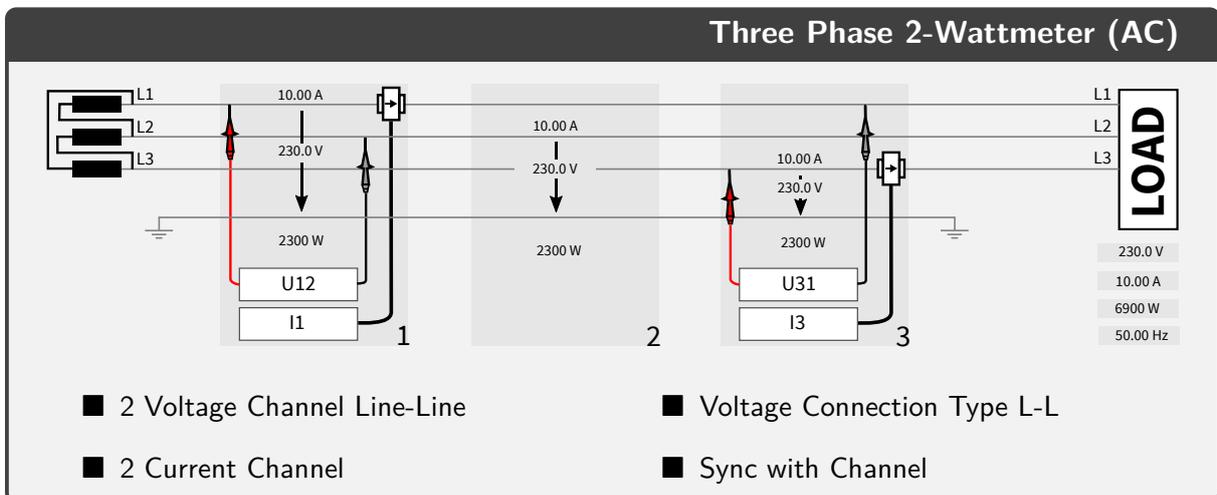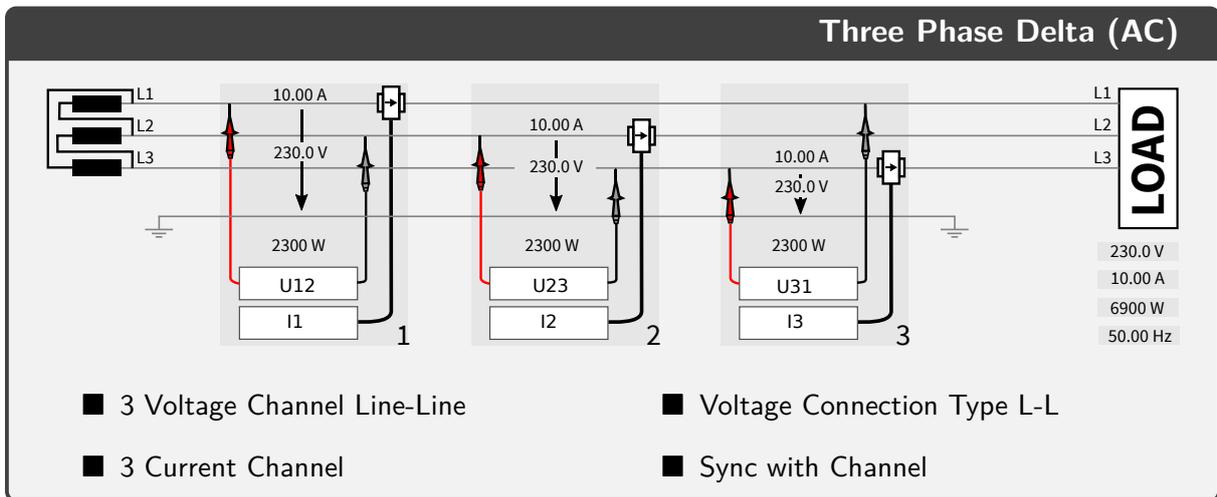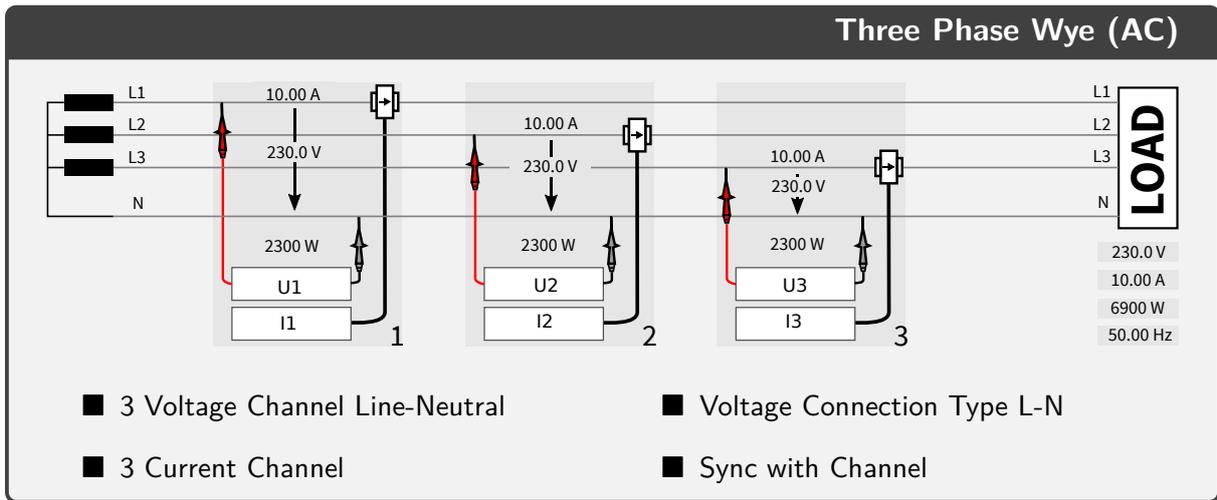

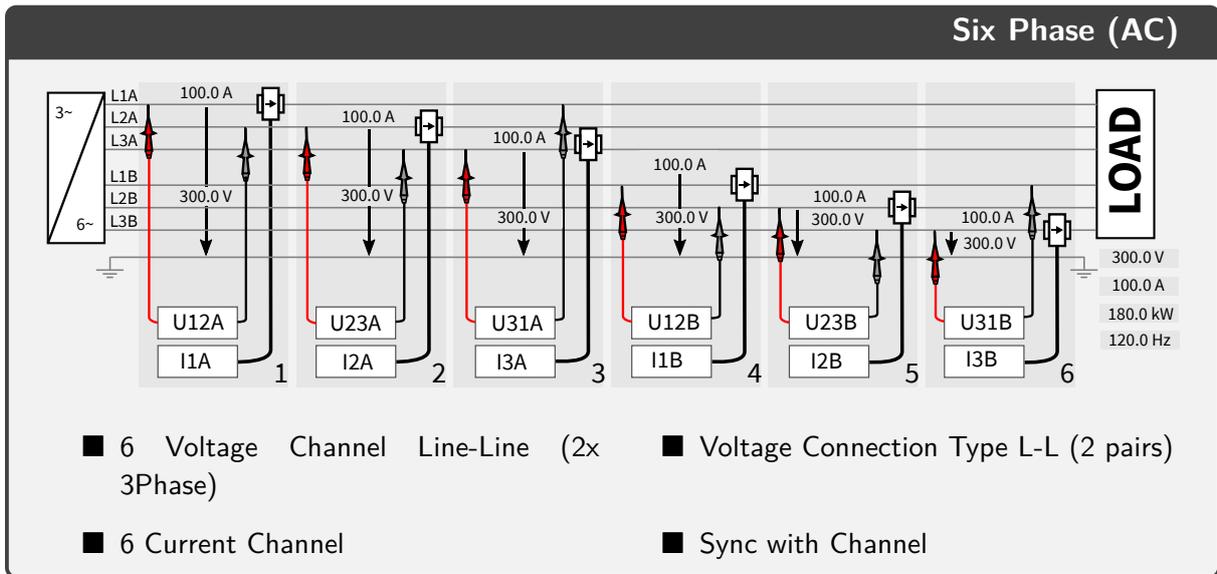

INFORMATION

The phase relation between the voltage and current lines is shown in the graphics below and is following this terminology: Phase of Voltage Channel 1 (U1_fundPHI) is defined with 0° and all other phase angles of Voltage (U[i]_fundPHI) and Current (I[i]_fundPHI) are relative aligned to this phasor. The Power phase is the phase difference between its Voltage and

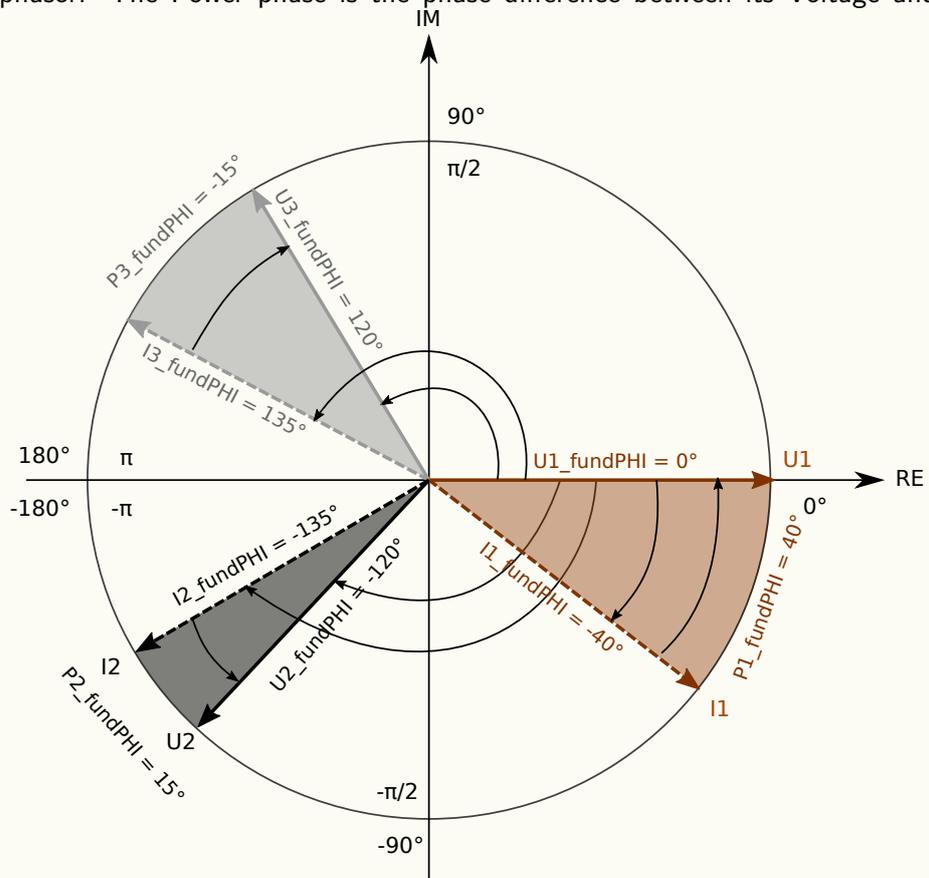

3.3 Line-Line Conversion

The Conversion from Line-Line Voltage to a Line-Neutral Voltage is automatically performed if necessary:

- Connection Type Switch is set to L-L
- Schematic is 3P3W or 6P6W

The principle relies on a virtual Star-Point, where the sum of all Line-Line Voltages AND the sum of all Line-Neutral Voltages is zero at all time.

3.3.1 3-Phase

$$u1(t) = \frac{1}{3} \cdot (u12(t) - u31(t)) \quad (3.1)$$

$$u2(t) = \frac{1}{3} \cdot (u23(t) - u12(t)) \quad (3.2)$$

$$u3(t) = \frac{1}{3} \cdot (u31(t) - u23(t)) \quad (3.3)$$

3.3.2 6-Phase

Attention: This Calculation Method changed from 5.0 to 5.1!

This 6-Phase calculation is now a 2x3P3W Calculation.

$$u1(t) = \frac{1}{3} \cdot (u12(t) - u31(t)) \quad (3.4)$$

$$u2(t) = \frac{1}{3} \cdot (u23(t) - u12(t)) \quad (3.5)$$

$$u3(t) = \frac{1}{3} \cdot (u31(t) - u23(t)) \quad (3.6)$$

$$u4(t) = \frac{1}{3} \cdot (u45(t) - u64(t)) \quad (3.7)$$

$$u5(t) = \frac{1}{3} \cdot (u56(t) - u45(t)) \quad (3.8)$$

$$u6(t) = \frac{1}{3} \cdot (u64(t) - u56(t)) \quad (3.9)$$

3.3.3 2-Wattmeter

$$u23(t) = -u12(t) - u31(t) \quad (3.10)$$

$$i2(t) = -i1(t) - i3(t) \quad (3.11)$$

3.4 Power Instrument


The PowerGroup Instrument is a dedicated visualisation instrument for a specific PowerGroup. To place one in your instrument screen, just drag'n'drop the PowerGroup channel into the instrument area. Today, the instrument comes with 3 separate screens, an overview table, the phasor diagram and the harmonic chart. In the instrument properties (23), you can select a different color schema.

3.4.1 Table Display

PowerGroup Instrument Table								
Power_3ph								
	Phase 1		Phase 2		Phase 3		Total	
U_tRMS	238.22	V	238.62	V	237.87	V	238.24	V
I_tRMS	13.855	A	13.850	A	13.954	A	13.886	A
P_t	2.3305	kW	2.3361	kW	2.3365	kW	7.0032	kW
Q_t	2.3367	kvar	2.3372	kvar	2.3572	kvar	7.0312	kvar
S_t	3.3005	kVA	3.3048	kVA	3.3192	kVA	9.9245	kVA
PF_t	0.7061		0.7068		0.7039		0.7056	
F_fund							49.992	Hz
U_fundRMS	238.18	V	238.58	V	237.83	V	238.20	V
I_fundRMS	13.211	A	13.216	A	13.246	A	13.224	A
P_fund	2.3292	kW	2.3336	kW	2.3342	kW	6.9970	kW
Q_fund	-2.1153	kvar	-2.1200	kvar	-2.1152	kvar	-6.3505	kvar
S_fund	3.1467	kVA	3.1530	kVA	3.1503	kVA	9.4500	kVA

The Table consists of the PowerGroup name at the top, basic power values for each Power-Phase and their overall values. The display update rate is fixed to 500ms.

3.4.2 Instrument Settings

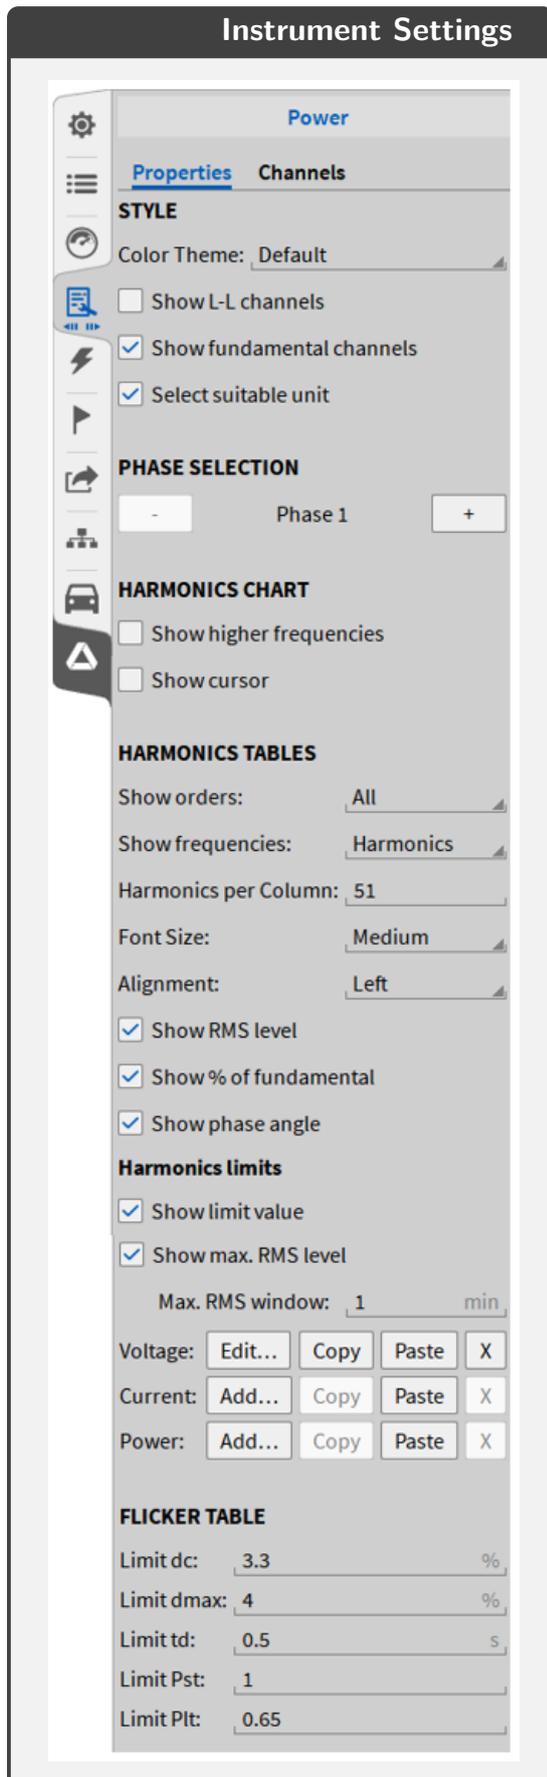

■ Style

Select Colour theme

Enable/Disable the display of Line-Line Voltage values

Enable/Disable the display of fundamentals

Enable/Disable suitable prefixes for units (mV, μ V, kV)

■ Phase Selection

Select Phase to be displayed in Harmonics Chart and Flicker Table

■ Harmonic Chart

Show also Higher Frequency Grouped Spectrum (2.1-8.9 kHz)

Show Cursor in Harmonics Chart

■ Harmonic Tables

Select displayed entries per column

Show odd, even or all orders

Show Harmonics, Interharmonics or Both

Enter How many Harmonics per Column should be displayed

Select Font Size

Select Text Alignment

Enable/Disable RMS, % of fundamental or phase angle columns

■ Harmonics Limits

Enable/Disable Limit Value (defined below)

Enable/Disable max. RMS level with evaluation period (lookback time 1min by default)

Add, Edit, Copy, Paste or delete Limit Values for Voltage, Current, Power

■ Flicker Table

Enter dc Limit


Enter dmax Limit

Enter Pst Limit


Enter Plt Limit

More Flicker settings are in the Power Group advanced settings, see chapter 8.1.

3.4.3 Phasor Display

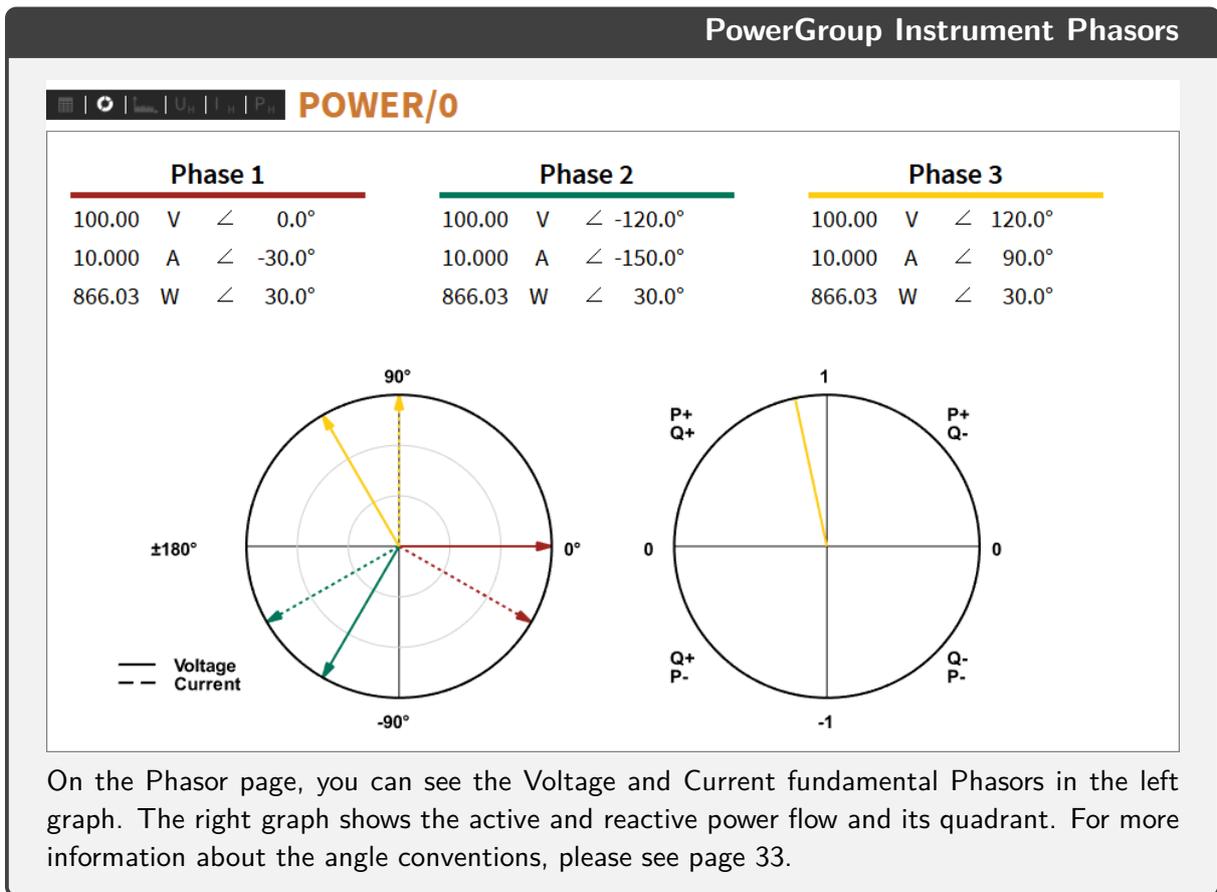

3.4.4 Harmonics Chart Display

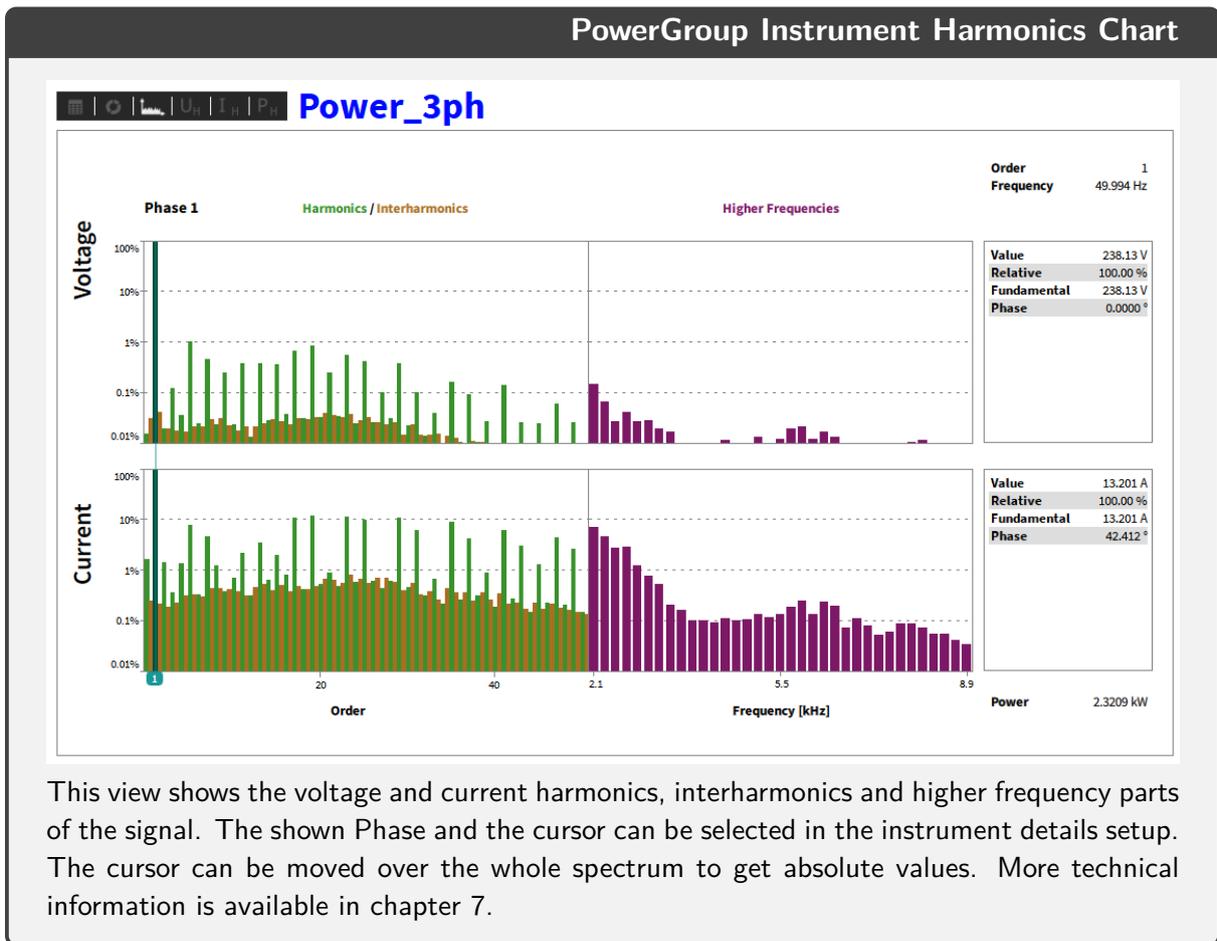

PowerGroup Instrument Harmonics Table (with Limits)

POWER_3Phase

Harmonics All limits: **Fail**

Voltage	Order	Limit	Phase 1 (THD: 0.66%)				Phase 2 (THD: 0.65%)				Phase 3 (THD: 0.65%)			
			ma...MS	RMS	%	PHI	ma...MS	RMS	%	PHI	ma...MS	RMS	%	PHI
	0	4.00V	1.28V	1.08V	0.47%	0.00°	2.32V	1.07V	0.47%	0.00°	2.20V	1.07V	0.47%	0.00°
	1	240.00V	231.52V	230.00V	100.00%	0.00°	231.52V	230.00V	100.00%	-120.00°	231.51V	230.00V	100.00%	120.00°
	2	2.00V	1.11V	0.00V	0.00%	-116.88°	1.99V	0.01V	0.00%	-161.39°	2.02V	0.01V	0.00%	-111.89°
	3	2.00V	0.42V	0.02V	0.01%	-0.70°	1.09V	0.01V	0.00%	-7.31°	1.12V	0.01V	0.00%	-97.90°
	4	2.00V	0.22V	0.01V	0.00%	94.09°	0.78V	0.00V	0.00%	78.13°	0.79V	0.01V	0.01%	92.81°
	5	1.00V	0.14V	0.01V	0.00%	-170.77°	0.60V	0.01V	0.00%	-65.40°	0.61V	0.01V	0.00%	-44.19°
	6	1.00V	0.09V	0.01V	0.00%	-123.08°	0.49V	0.00V	0.00%	33.26°	0.50V	0.00V	0.00%	-31.86°
	7	1.00V	0.07V	0.00V	0.00%	170.48°	0.42V	0.01V	0.00%	-62.99°	0.43V	0.01V	0.00%	-55.53°
	8	1.00V	0.06V	0.01V	0.00%	-79.47°	0.37V	0.00V	0.00%	47.59°	0.38V	0.01V	0.00%	-124.59°
	9	0.99V	1.52V	1.51V	0.66%	-0.38°	1.83V	1.50V	0.65%	-0.06°	1.51V	1.50V	0.65%	0.13°
	10	0.99V	0.03V	0.01V	0.00%	-152.06°	0.29V	0.00V	0.00%	-7.48°	0.30V	0.01V	0.00%	-71.39°
	11	0.98V	0.03V	0.01V	0.00%	-164.73°	0.26V	0.01V	0.00%	-22.12°	0.27V	0.01V	0.00%	174.48°
	12	0.97V	0.02V	0.01V	0.00%	-97.86°	0.24V	0.01V	0.01%	8.28°	0.24V	0.01V	0.00%	-115.26°
	13	0.96V	0.02V	0.00V	0.00%	46.98°	0.22V	0.02V	0.01%	165.97°	0.23V	0.01V	0.00%	143.48°
	14	0.95V	0.02V	0.01V	0.01%	154.45°	0.21V	0.02V	0.01%	64.66°	0.22V	0.01V	0.00%	127.98°
	15	0.94V	0.02V	0.01V	0.00%	-15.91°	0.19V	0.01V	0.01%	121.23°	0.20V	0.01V	0.01%	-160.40°
	16	0.93V	0.02V	0.01V	0.00%	167.16°	0.18V	0.00V	0.00%	-61.05°	0.19V	0.01V	0.01%	152.01°
	17	0.92V	0.02V	0.01V	0.00%	123.35°	0.17V	0.01V	0.00%	60.00°	0.18V	0.01V	0.00%	-162.96°
	18	0.91V	0.02V	0.01V	0.00%	-49.74°	0.17V	0.00V	0.00%	167.72°	0.16V	0.01V	0.00%	-146.99°

This view is the same display type as the harmonics in tabular view shown above but with harmonics limits enabled in the Power Group Instrument Settings, see chapter 3.4.2 . The Limit columns shows the defined limit from the instrument settings tab. Voltage, Current and Power Limits can be defined. The 1min lookback period by default allows evaluating if the limit has been exceeded within the last 1min. If any element (order) has been over the limit it will be colored red and "All limits:" in the top right will show "Fail" for the Fail case. Otherwise it will show "Pass".

3.4.6 Flicker Table Display

PowerGroup Instrument Flicker Table (pass case)

POWER_3Phase

Phase 1 judgement: Pass
Total judgement: Pass

	dc [%]		dmax [%]		Pst	Plt
Limit	3.300		4.000		1.000	0.650
Result	0.863	Pass	1.051	Pass	0.394	Pass
1	0.000	Pass	0.000	Pass	0.207	Pass
2	0.000	Pass	0.000	Pass	0.258	Pass
3	0.418	Pass	0.649	Pass	0.197	Pass
4	0.000	Pass	0.000	Pass	0.256	Pass
5	0.017	Pass	0.220	Pass	0.211	Pass
6	0.000	Pass	0.000	Pass	0.394	Pass
7	0.863	Pass	1.051	Pass	0.288	Pass
8	0.000	Pass	0.000	Pass	0.179	Pass
9	0.000	Pass	0.000	Pass	0.219	Pass
10	0.000	Pass	0.000	Pass	0.236	Pass
11	0.000	Pass	0.000	Pass	0.219	Pass
12	0.000	Pass	0.000	Pass	0.231	Pass

This view shows the flicker results. The limits shown in the table can be tuned in the instrument detail settings. Total judgment, the Phase judgment and Plt will only be available after one Plt time window (default 120min, but definable in the power group settings). The Result row below the limits show the worst result from the list below. In case the worst result is not exceeding the defined limit each parameter dc, dmax, Pst and Plt will be in the pass case. If that is true for all Phases, the Total judgment, seen on the top right will show pass. In case one element in the list shows Fail for any phase, the Total judgement will show Fail. CTRL+C to Copy the data to e.g. Excel.

PowerGroup Instrument Flicker Table (fail case)

POWER_3Phase

Phase 1 judgement: **Fail** Total judgement: **Fail**

	dc [%]		dmax [%]		Pst		Plt
Limit	3.300		4.000		1.000		0.650
Result	4.348	Fail	4.537	Fail	1.655	Fail	0.991
1	0.003	Pass	0.201	Pass	0.252	Pass	
2	0.020	Pass	0.212	Pass	0.216	Pass	
3	0.000	Pass	0.000	Pass	0.254	Pass	
4	0.000	Pass	0.000	Pass	0.285	Pass	
5	0.000	Pass	0.000	Pass	1.548	Fail	
6	0.000	Pass	0.000	Pass	1.480	Fail	
7	4.348	Fail	4.537	Fail	0.421	Pass	
8	0.000	Pass	0.000	Pass	0.276	Pass	
9	0.000	Pass	0.000	Pass	0.272	Pass	
10	0.000	Pass	0.000	Pass	0.211	Pass	
11	0.007	Pass	0.202	Pass	0.265	Pass	
12	0.000	Pass	0.000	Pass	1.655	Fail	

As in the picture above, this shows the Power Group Flicker Table, but the fail case. Total judgement shows Fail, since at least one Result element exceeds the Limit. The Flicker Table will show the last Plt cycle, but it will not stop after the first window. The next Pst elements will be recorded and displayed in the list in brackets (as element (13), (14) and so on). These values will only be respected for the result row above if the next Plt period has passed. CTRL+C to Copy the data to e.g. Excel.

3.5 Load/Save Configuration Setup

To save your configuration (Input Settings, Channel Names, Instrument arrangement...) you just have to press the Save Setup Button (17) and select a name, that you can easy find it again the next time you do the same measurement.

Loading is similar to saving, just press Load Setup Button (16) and select the configuration you want to load.

3.6 Recording Data

Recording of the measurement data is very easy and flexible with the Dewetron OXYGEN software. There are many options available to perfectly fit your requirements.

How to choose the right mode and settings, you have to think about some questions:

1. What do you need to analyze?
 - Channels: Exclude not needed channels from being stored (31)
 - Samplerate: Select appropriate sampling rate according to your application
2. What do you expect?
 - Trigger: Is it possible to set a trigger condition?
 - Static/Dynamic: Is the signal static or dynamic?
3. How long does it take?
 - Recording Time: Do you have to record only seconds or minutes or hours and days?
4. How is the analysis done?
 - Live: Do you want to analyze the data during recording?
 - Offline: or afterwards in the OXYGEN Software?
 - Export: or do you want to export the data to use it in a 3rd party app?

For more information, please consult the OXYGEN Manual.

3.7 Analyze Data

For more information, please consult the OXYGEN Manual.

3.8 Export Data

For more information, please consult the OXYGEN Manual.

4 Troubleshooting

Issue	Reason	Solution
Power Group Channel is red and all values are NaN	Samplerate of Input Channels is too low	Change the Samplerate of all dependend Input/Sync Channels to a minimum of 10kHz (better 100kHz)
	One or more Input/Sync Channels are not Ready	Check if all depended Input/Sync Channels are activated
	No channel is assigned to any phase	Drag'n'drop Channels to at least one phase
All Power Values are NaN but Power Group Channel is not red	Power Group is disabled	Please enable the Power Group
	An error in the calculation has occurred	Please restart the calculation by deactivating and activating the Power Group
Fundamental Values are NaN	Fundamental Frequency is out of range	No fundamental Calculation available when Frequency is out of range
	Magnitude of Sync Channel is too low for Frequency detection	Change Range of Sync Channel or select another Channel
	Calculation Mode is set to Time Interval	Change Calculation Mode to Sync

5 Additional Information

5.1 Hardware Specific Settings


This Section covers settings related to the Power Analysis function, which depends on specific hardware components.

5.1.1 Sensor Delay Compensation

Table 5.1: Legend

Compatible Hardware	Additional Information
TRION-1820-POWER-4	Since Driver Ver. 3.7 and FW Ver. 55
TRION3-1810M-POWER-4	Since Driver Ver. 3.7 and FW Ver. 55


Current and voltage signals are often not perfectly synchronous due to group delays from the sensors. To compensate this delay (phase shift) between voltage and current input, a new function was added to the Hardware listed in table 5.1. This function is also known as Deskew.

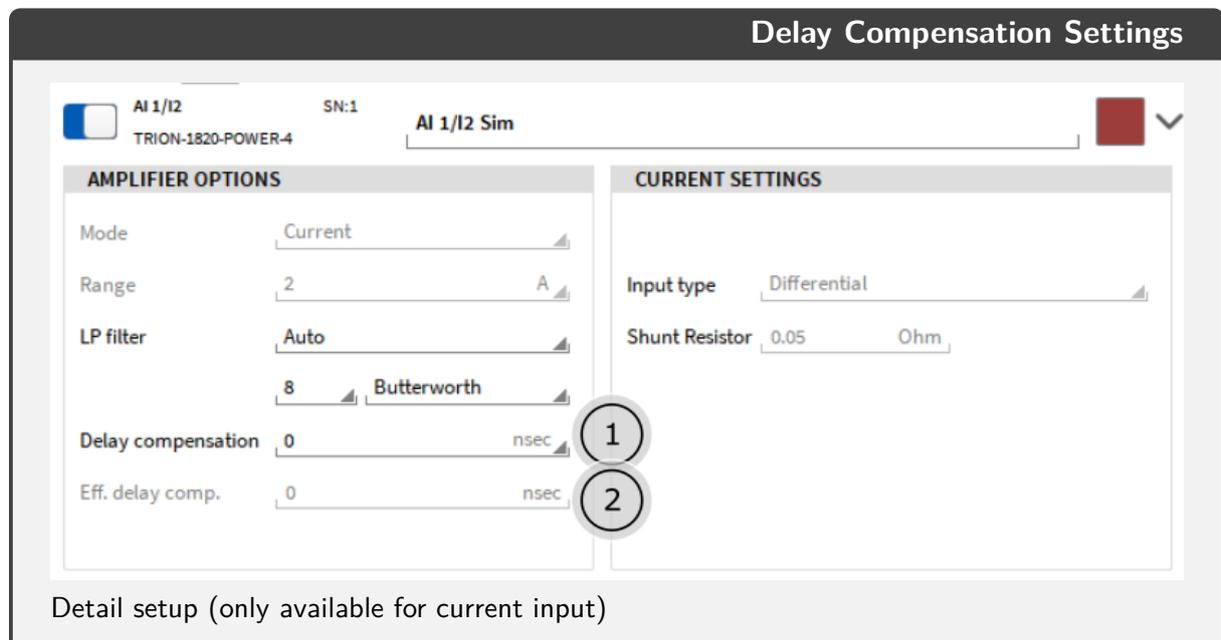

- ① Input field for target delay compensation in nanoseconds (ns). Allowed range is ± 10000 ns. Negative Values shifts the current backwards in time, positive forward.
- ② Display of effective set delay compensation, the resolution is fixed to 100ns.

Delay Compensation Example


Before adding a compensation value, in this example (Sine Signal with 1 kHz fundamental frequency), the current lags a few degree. This can be seen in the scope as well as in the phase shift of the fundamental:

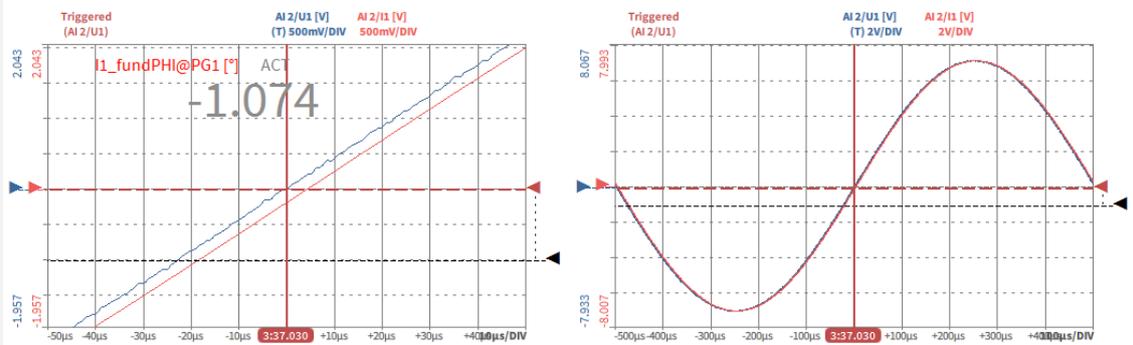

After adjusting the value to

$$t = \frac{1}{1000\text{Hz}} \cdot \frac{1}{360^\circ} \cdot (-1.074^\circ) \cdot 10^9 = -2983\text{ns} \quad (5.1)$$

the result is now nearly perfect:

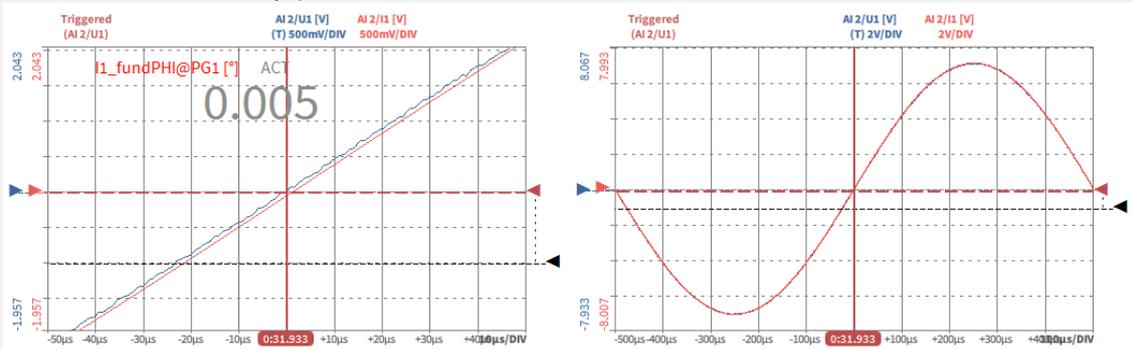

6 Basic Calculation Reference (OPT-POWER-BASIC)

Contents

6.1 Voltage (U)	51
6.1.1 U_tRMS	51
6.1.2 U[i]_tRMS	51
6.1.3 U[ij]_tRMS	51
6.1.4 U[i]_tAVG	52
6.1.5 U[i]_tPP	52
6.1.6 U_fundRMS	52
6.1.7 U[i]_fundRMS	52
6.1.8 U[ij]_fundRMS	52
6.1.9 U[i]_fundPHI	52
6.1.10 U[ij]_fundPHI	52
6.1.11 U_fundRMS_SYM+	52
6.1.12 U_fundRMS_SYM-	53
6.1.13 U_fundRMS_SYM0	53
6.1.14 U_fundRMS_SYM	53
6.1.15 U_fund_UNBAL+	53
6.1.16 U_fund_UNBAL-	53
6.1.17 U_fund_UNBAL0	53
6.1.18 U_fundCOS_SYM+	54
6.1.19 U_fundSIN_SYM+	54
6.1.20 U_fundPHI_SYM+	54
6.1.21 U_fundCOS_SYM-	54
6.1.22 U_fundSIN_SYM-	54
6.1.23 U_fundPHI_SYM-	55
6.1.24 U_fundCOS_SYM0	55
6.1.25 U_fundSIN_SYM0	55
6.2 Current (I)	55
6.2.1 I_tRMS	55
6.2.2 I[i]_tRMS	55
6.2.3 I[i]_tAVG	55
6.2.4 I[i]_tPP	55
6.2.5 I_fundRMS	56
6.2.6 I[i]_fundRMS	56
6.2.7 I[i]_fundPHI	56

6.2.8	I_fundRMS_SYM+	56
6.2.9	I_fundRMS_SYM-	56
6.2.10	I_fundRMS_SYM0	56
6.2.11	I_fundRMS_SYM	57
6.2.12	I_fund_UNBAL+	57
6.2.13	I_fund_UNBAL-	57
6.2.14	I_fund_UNBAL0	57
6.2.15	I_fundCOS_SYM+	57
6.2.16	I_fundSIN_SYM+	57
6.2.17	I_fundCOS_SYM-	58
6.2.18	I_fundSIN_SYM-	58
6.2.19	I_fundCOS_SYM0	58
6.2.20	I_fundSIN_SYM0	58
6.3	Active Power (P)	58
6.3.1	P_t	58
6.3.2	P[i]_t	58
6.3.3	P_fund	58
6.3.4	P[i]_fund	59
6.3.5	P[i]_fundPHI	59
6.4	Reactive Power (Q)	59
6.4.1	Q_t	59
6.4.2	Q[i]_t	59
6.4.3	Q_fund	59
6.4.4	Q[i]_fund	59
6.5	Apparent Power (S)	59
6.5.1	S_t	59
6.5.2	S[i]_t	60
6.5.3	S_fund	60
6.5.4	S[i]_fund	60
6.6	Power Factor (PF)	60
6.6.1	PF_t	60
6.6.2	PF[i]_t	60
6.6.3	PF_fund	60
6.6.4	PF[i]_fund	60
6.7	Energy (W)	60
6.7.1	W_t	60
6.7.2	W[i]_t	61
6.7.3	W_t+	61
6.7.4	W[i]_t+	61
6.7.5	W_t-	61
6.7.6	W[i]_t-	61
6.7.7	W_fund	61
6.7.8	W[i]_fund	61
6.7.9	W_fund+	62

6.7.10	W[i]_fund+	62
6.7.11	W_fund-	62
6.7.12	W[i]_fund-	62
6.7.13	C	62
6.7.14	C[i]	62
6.7.15	C_+	62
6.7.16	C[i]_+	63
6.7.17	C_-	63
6.7.18	C[i]_-	63
6.7.19	C_RMS	63
6.7.20	C[i]_RMS	63
6.8	Additional Channels	63
6.8.1	F_fund	63

Table 6.1: Legend

Symbol	Equation	Description
SR	-	Samplerate
NP	-	Number of Power Phases
N	$\frac{SR}{f_{fund}}$	Number of Samples
T_{int}	-	Integration Time, Time of Visualisation

6.1 Voltage (U)

6.1.1 U_tRMS

This is the Power Group average true RMS Voltage

$$U_{tRMS} = \frac{1}{NP} \sum_{i=1}^{NP} U[i]_{tRMS} \quad \text{Unit : V} \quad (6.1)$$

6.1.2 U[i]_tRMS

This is the Power Phase number i True RMS Voltage

$$U[i]_{tRMS} = \sqrt{\frac{1}{N} \sum_{n=0}^N u_i[n]^2} \quad \text{Unit : V} \quad (6.2)$$

6.1.3 U[ij]_tRMS

This is the Line-Line ij True RMS Voltage. This channel is only available in 3-Phase Power Configurations.

$$U[ij]_{tRMS} = \sqrt{\frac{1}{N} \sum_{n=0}^N (u_i[n] - u_j[n])^2} \quad \text{Unit : V} \quad (6.3)$$

6.1.4 U[i]_tAVG

This is the Power Phase number i Average Voltage

$$U[i]_{tAVG} = \frac{1}{N} \sum_{n=0}^N u_i[n] \quad \text{Unit : V} \quad (6.4)$$

6.1.5 U[i]_tPP

This is the Power Phase number i Peak-Peak Voltage

$$U[i]_{tPP} = \max_{0 \rightarrow N} u_i[n] - \min_{0 \rightarrow N} u_i[n] \quad \text{Unit : V} \quad (6.5)$$

6.1.6 U_fundRMS

This is the Power Group average fundamental effective Voltage

$$U_{fundRMS} = \frac{1}{NP} \sum_{i=1}^{NP} U[i]_{fundRMS} \quad \text{Unit : V} \quad (6.6)$$

6.1.7 U[i]_fundRMS

This is the Power Phase number i Fundamental Effective Voltage.

$$U[i]_{fundRMS} = \sqrt{\text{Re} \{ \underline{U}[i]_{fund} \}^2 + \text{Im} \{ \underline{U}[i]_{fund} \}^2} \quad \text{Unit : V} \quad (6.7)$$

6.1.8 U[ij]_fundRMS

This is the Line-Line ij Fundamental Effective Voltage.

$$U[ij]_{fundRMS} = \sqrt{\text{Re} \{ \underline{U}[i]_{fund} - \underline{U}[j]_{fund} \}^2 + \text{Im} \{ \underline{U}[i]_{fund} - \underline{U}[j]_{fund} \}^2} \quad \text{Unit : V} \quad (6.8)$$

6.1.9 U[i]_fundPHI

This is the Power Phase number i Fundamental Voltage Phase Angle.

$$U[i]_{fundPHI} = \arctan2(\text{Im} \{ \underline{U}[i]_{fund} \}, \text{Re} \{ \underline{U}[i]_{fund} \}) \quad \text{Unit : deg}(\circ) \quad (6.9)$$

6.1.10 U[ij]_fundPHI

This is the Line-Line ij Fundamental Voltage Phase Angle.

$$U[ij]_{fundPHI} = \arctan2(\text{Im} \{ \underline{U}[i]_{fund} - \underline{U}[j]_{fund} \}, \text{Re} \{ \underline{U}[i]_{fund} - \underline{U}[j]_{fund} \}) \quad \text{Unit : deg}(\circ) \quad (6.10)$$

6.1.11 U_fundRMS_SYM+

This is the Power Group Fundamental Voltage Positive Sequence Magnitude. This channel is only available in 3-Phase Power Group.

$$a = e^{j\frac{2\pi}{NP}}$$

$$\underline{U}^+ = \frac{1}{NP} \sum_{i=1}^{NP} U[i]_{fundRMS} \cdot e^{j \cdot U[i]_{fundPHI}} \cdot a^{(i-1)}$$

$$U_{fundRMS_SYM+} = \sqrt{\text{Re} \{ \underline{U}^+ \}^2 + \text{Im} \{ \underline{U}^+ \}^2} \quad \text{Unit : V} \quad (6.11)$$

6.1.12 U_fundRMS_SYM-

This is the Power Group Fundamental Voltage Negative Sequence Magnitude. This channel is only available with a minimum of two phases configured.

$$a = e^{j\frac{2\pi}{NP}}$$

$$\underline{U}^- = \frac{1}{NP} \sum_{i=1}^{NP} U[i]_{fundRMS} \cdot e^{j \cdot U[i]_{fundPHI}} \cdot a^{(NP+1-i)}$$

$$U_{fundRMS_SYM-} = \sqrt{\text{Re} \{ \underline{U}^- \}^2 + \text{Im} \{ \underline{U}^- \}^2} \quad \text{Unit : V} \quad (6.12)$$

6.1.13 U_fundRMS_SYM0

This is the Power Group Fundamental Voltage Zero Sequence Magnitude. This channel is only available in 3-Phase Power Group.

$$a = e^{j\frac{2\pi}{NP}}$$

$$\underline{U}^0 = \frac{1}{NP} \sum_{i=1}^{NP} U[i]_{fundRMS} \cdot e^{j \cdot U[i]_{fundPHI}}$$

$$U_{fundRMS_SYM0} = \sqrt{\text{Re} \{ \underline{U}^0 \}^2 + \text{Im} \{ \underline{U}^0 \}^2} \quad \text{Unit : V} \quad (6.13)$$

6.1.14 U_fundRMS_SYM

This is the Power Group Fundamental Voltage Symmetry.

$$U_{fundRMS_SYM} = \frac{U_{fundRMS_SYM+} - U_{fundRMS_SYM-}}{U_{fundRMS_SYM+} + U_{fundRMS_SYM-}} \quad \text{Unit : None} \quad (6.14)$$

6.1.15 U_fund_UNBAL+

This is the Power Group Fundamental Voltage Positive Sequence Unbalance.

$$U_{fund_UNBAL+} = \frac{U_{fundRMS} - U_{fundRMS_SYM+}}{U_{fundRMS}} \cdot 100\% \quad \text{Unit : \%} \quad (6.15)$$

6.1.16 U_fund_UNBAL-

This is the Power Group Fundamental Voltage Negative Sequence Unbalance.

$$U_{fund_UNBAL-} = \frac{U_{fundRMS_SYM-}}{U_{fundRMS_SYM+}} \cdot 100\% \quad \text{Unit : \%} \quad (6.16)$$

6.1.17 U_fund_UNBAL0

This is the Power Group Fundamental Voltage Zero Sequence Unbalance.

$$U_{fund_UNBAL0} = \frac{U_{fundRMS_SYM0}}{U_{fundRMS_SYM+}} \cdot 100\% \quad \text{Unit : \%} \quad (6.17)$$

6.1.18 U_fundCOS_SYM+

The Real part of the fourier coefficients of the signal is. (F-1 in FGW-TG3 Annex F)

$$U[i]_{fund_cos} = \frac{2}{N} \sum_{n=-N-1}^0 u_i[n] \cdot \cos(2 \cdot \pi \cdot F_{fund} \cdot \frac{n}{SR}) \quad \text{Unit : V}$$

The Imaginary part of the fourier coefficients of the signal is. (F-2 in FGW-TG3 Annex F)

$$U[i]_{fund_sin} = \frac{2}{N} \sum_{n=-N-1}^0 u_i[n] \cdot \sin(2 \cdot \pi \cdot F_{fund} \cdot \frac{n}{SR}) \quad \text{Unit : V}$$

Using both fourier coefficients, this is the real vector component of the Positive Voltage Sequence.

$$U_{fundCOS_SYM+} = \frac{1}{6} (2 \cdot U1_{fund_cos} - U2_{fund_cos} - U3_{fund_cos} - \sqrt{3} (U3_{fund_sin} - U2_{fund_sin})) \quad \text{Unit : V} \quad (6.18)$$

6.1.19 U_fundSIN_SYM+

This is the imaginary vector component of the Positive Voltage Sequence.

$$U_{fundSIN_SYM+} = \frac{1}{6} (2 \cdot U1_{fund_sin} - U2_{fund_sin} - U3_{fund_sin} - \sqrt{3} (U2_{fund_cos} - U3_{fund_cos})) \quad \text{Unit : V} \quad (6.19)$$

6.1.20 U_fundPHI_SYM+

This is the phase angle of the Positive Voltage Sequence.

$$U_{fundPHI_SYM+} = \arctan2(U_{fundSIN_SYM+}, U_{fundCOS_SYM+}) \quad \text{Unit : deg}(\circ) \quad (6.20)$$

6.1.21 U_fundCOS_SYM-

This is the real vector component of the Negative Voltage Sequence.

$$U_{fundCOS_SYM-} = \frac{1}{6} (2 \cdot U1_{fund_cos} - U2_{fund_cos} - U3_{fund_cos} - \sqrt{3} (U2_{fund_sin} - U3_{fund_sin})) \quad \text{Unit : V} \quad (6.21)$$

6.1.22 U_fundSIN_SYM-

This is the imaginary vector component of the Negative Voltage Sequence.

$$U_{fundSIN_SYM-} = \frac{1}{6} (2 \cdot U1_{fund_sin} - U2_{fund_sin} - U3_{fund_sin} - \sqrt{3} (U3_{fund_cos} - U2_{fund_cos})) \quad \text{Unit : V} \quad (6.22)$$

6.1.23 U_fundPHI_SYM-

This is the phase angle of the Negative Voltage Sequence.

$$U_{fundPHI_SYM-} = \arctan2(U_{fundSIN_SYM-}, U_{fundCOS_SYM-}) \quad \text{Unit : deg}(\circ) \quad (6.23)$$

6.1.24 U_fundCOS_SYM0

Using the fourier coefficients, this is the real vector component of the Zero Voltage Sequence.

$$U_{fundCOS_SYM0} = \frac{1}{3 \cdot \sqrt{2}} (U1_{fund_cos} + U2_{fund_cos} + U3_{fund_cos}) \quad \text{Unit : V} \quad (6.24)$$

6.1.25 U_fundSIN_SYM0

Using the fourier coefficients, this is the imaginary vector component of the Zero Voltage Sequence.

$$U_{fundSIN_SYM0} = \frac{-1}{3 \cdot \sqrt{2}} (U1_{fund_sin} + U2_{fund_sin} + U3_{fund_sin}) \quad \text{Unit : V} \quad (6.25)$$

6.2 Current (I)

6.2.1 I_tRMS

This is the Power Group average true RMS Current

$$I_{tRMS} = \frac{1}{NP} \sum_{i=1}^{NP} I[i]_{tRMS} \quad \text{Unit : A} \quad (6.26)$$

6.2.2 I[i]_tRMS

This is the Power Phase number i True RMS Current

$$I[i]_{tRMS} = \sqrt{\frac{1}{N} \sum_{n=0}^N i_i[n]^2} \quad \text{Unit : A} \quad (6.27)$$

6.2.3 I[i]_tAVG

This is the Power Phase number i Average Current

$$I[i]_{tAVG} = \frac{1}{N} \sum_{n=0}^N i_i[n] \quad \text{Unit : A} \quad (6.28)$$

6.2.4 I[i]_tPP

This is the Power Phase number i Peak-Peak Current

$$I[i]_{tPP} = \max_{0 \rightarrow N} i_i[n] - \min_{0 \rightarrow N} i_i[n] \quad \text{Unit : A} \quad (6.29)$$

6.2.5 I_fundRMS

This is the Power Group average fundamental effective Current

$$I_{fundRMS} = \frac{1}{NP} \sum_{i=1}^{NP} I[i]_{fundRMS} \quad \text{Unit : A} \quad (6.30)$$

6.2.6 I[i]_fundRMS

This is the Power Phase number i Fundamental Effective Current.

$$I[i]_{fundRMS} = \sqrt{\text{Re} \{ I[i]_{fund} \}^2 + \text{Im} \{ I[i]_{fund} \}^2} \quad \text{Unit : A} \quad (6.31)$$

6.2.7 I[i]_fundPHI

This is the Power Phase number i Fundamental Current Phase Angle.

$$I[i]_{fundPHI} = \arctan2(\text{Im} \{ I[i]_{fund} \}, \text{Re} \{ I[i]_{fund} \}) \quad \text{Unit : deg}(\circ) \quad (6.32)$$

6.2.8 I_fundRMS_SYM+

This is the Power Group Fundamental Current Positive Sequence Magnitude. This channel is only available in 3-Phase Power Group.

$$a = e^{j\frac{2\pi}{NP}}$$

$$\underline{I}^+ = \frac{1}{NP} \sum_{i=1}^{NP} I[i]_{fundRMS} \cdot e^{j \cdot I[i]_{fundPHI}} \cdot a^{(i-1)}$$

$$I_{fundRMS_SYM+} = \sqrt{\text{Re} \{ \underline{I}^+ \}^2 + \text{Im} \{ \underline{I}^+ \}^2} \quad \text{Unit : A} \quad (6.33)$$

6.2.9 I_fundRMS_SYM-

This is the Power Group Fundamental Current Negative Sequence Magnitude. This channel is only available in 3-Phase Power Group.

$$a = e^{j\frac{2\pi}{NP}}$$

$$\underline{I}^- = \frac{1}{NP} \sum_{i=1}^{NP} I[i]_{fundRMS} \cdot e^{j \cdot I[i]_{fundPHI}} \cdot a^{(NP+1-i)}$$

$$I_{fundRMS_SYM-} = \sqrt{\text{Re} \{ \underline{I}^- \}^2 + \text{Im} \{ \underline{I}^- \}^2} \quad \text{Unit : A} \quad (6.34)$$

6.2.10 I_fundRMS_SYM0

This is the Power Group Fundamental Current Zero Sequence Magnitude. This channel is only available in 3-Phase Power Group.

$$a = e^{j\frac{2\pi}{NP}}$$

$$\underline{I}^0 = \frac{1}{NP} \sum_{i=1}^{NP} I[i]_{fundRMS} \cdot e^{j \cdot I[i]_{fundPHI}}$$

$$I_{fundRMS_SYM0} = \sqrt{\text{Re} \{ \underline{I}^0 \}^2 + \text{Im} \{ \underline{I}^0 \}^2} \quad \text{Unit : A} \quad (6.35)$$

6.2.11 I_fundRMS_SYM

This is the Power Group Fundamental Current Symmetry.

$$I_{fundRMS_SYM} = \frac{I_{fundRMS_SYM+} - I_{fundRMS_SYM-}}{I_{fundRMS_SYM+} + I_{fundRMS_SYM-}} \quad \text{Unit : None} \quad (6.36)$$

6.2.12 I_fund_UNBAL+

This is the Power Group Fundamental Current Positive Sequence Unbalance.

$$I_{fund_UNBAL+} = \frac{I_{fundRMS} - I_{fundRMS_SYM+}}{I_{fundRMS}} \cdot 100\% \quad \text{Unit : \%} \quad (6.37)$$

6.2.13 I_fund_UNBAL-

This is the Power Group Fundamental Current Negative Sequence Unbalance.

$$I_{fund_UNBAL-} = \frac{I_{fundRMS_SYM-}}{I_{fundRMS_SYM+}} \cdot 100\% \quad \text{Unit : \%} \quad (6.38)$$

6.2.14 I_fund_UNBAL0

This is the Power Group Fundamental Current Zero Sequence Unbalance.

$$I_{fund_UNBAL0} = \frac{I_{fundRMS_SYM0}}{I_{fundRMS_SYM+}} \cdot 100\% \quad \text{Unit : \%} \quad (6.39)$$

6.2.15 I_fundCOS_SYM+

The Real part of the fourier coefficients of the signal is. (F-1 in FGW-TG3 Annex F)

$$I[i]_{fund_cos} = \frac{2}{N} \sum_{n=-N-1}^0 i_i[n] \cdot \cos(2 \cdot \pi \cdot F_{fund} \cdot \frac{n}{SR}) \quad \text{Unit : A}$$

The Imaginary part of the fourier coefficients of the signal is. (F-2 in FGW-TG3 Annex F)

$$I[i]_{fund_sin} = \frac{2}{N} \sum_{n=-N-1}^0 i_i[n] \cdot \sin(2 \cdot \pi \cdot F_{fund} \cdot \frac{n}{SR}) \quad \text{Unit : A}$$

Using both fourier coefficients, this is the real vector component of the Positive Voltage Sequence.

$$I_{fundCOS_SYM+} = \frac{1}{6} \left(2 \cdot I1_{fund_cos} - I2_{fund_cos} - I3_{fund_cos} - \sqrt{3} (I3_{fund_sin} - I2_{fund_sin}) \right) \quad \text{Unit : A} \quad (6.40)$$

6.2.16 I_fundSIN_SYM+

This is the imaginary vector component of the Positive Voltage Sequence.

$$I_{fundSIN_SYM+} = \frac{1}{6} \left(2 \cdot I1_{fund_sin} - I2_{fund_sin} - I3_{fund_sin} - \sqrt{3} (I2_{fund_cos} - I3_{fund_cos}) \right) \quad \text{Unit : A} \quad (6.41)$$

6.2.17 I_fundCOS_SYM-

This is the real vector component of the Negative Voltage Sequence.

$$I_{fundCOS_SYM-} = \frac{1}{6} \left(2 \cdot I1_{fund_cos} - I2_{fund_cos} - I3_{fund_cos} - \sqrt{3} (I2_{fund_sin} - I3_{fund_sin}) \right) \quad \text{Unit : A} \quad (6.42)$$

6.2.18 I_fundSIN_SYM-

This is the imaginary vector component of the Negative Voltage Sequence.

$$I_{fundSIN_SYM-} = \frac{1}{6} \left(2 \cdot I1_{fund_sin} - I2_{fund_sin} - I3_{fund_sin} - \sqrt{3} (I3_{fund_cos} - I2_{fund_cos}) \right) \quad \text{Unit : A} \quad (6.43)$$

6.2.19 I_fundCOS_SYM0

Using the fourier coefficients, this is the real vector component of the Zero Voltage Sequence.

$$I_{fundCOS_SYM0} = \frac{1}{3 \cdot \sqrt{2}} (I1_{fund_cos} + I2_{fund_cos} + I3_{fund_cos}) \quad \text{Unit : A} \quad (6.44)$$

6.2.20 I_fundSIN_SYM0

Using the fourier coefficients, this is the imaginary vector component of the Zero Voltage Sequence.

$$I_{fundSIN_SYM0} = \frac{-1}{3 \cdot \sqrt{2}} (I1_{fund_sin} + I2_{fund_sin} + I3_{fund_sin}) \quad \text{Unit : A} \quad (6.45)$$

6.3 Active Power (P)**6.3.1 P_t**

This is the Power Group Overall active Power.

$$P_t = \sum_{i=1}^{NP} P[i]_t \quad \text{Unit : W} \quad (6.46)$$

6.3.2 P[i]_t

This is the Power Phase number i active Power.

$$P[i]_t = \frac{1}{N} \sum_{n=0}^N u_i[n] \cdot i_i[n] \quad \text{Unit : W} \quad (6.47)$$

6.3.3 P_fund

This is the Power Group Overall fundamental active Power.

$$P_{fund} = \sum_{i=1}^{NP} P[i]_{fund} \quad \text{Unit : W} \quad (6.48)$$

6.3.4 P[i]_fund

This is the Power Phase number i fundamental active Power.

$$P[i]_{fund} = U[i]_{fundRMS} \cdot I[i]_{fundRMS} \cdot \cos(P[i]_{fundPHI}) \quad \text{Unit : W} \quad (6.49)$$

6.3.5 P[i]_fundPHI

This is the Power Phase number i fundamental Power Phase Angle.

$$P[i]_{fundPHI} = U[i]_{fundPHI} - I[i]_{fundPHI} \quad \text{Unit : deg}(\circ) \quad (6.50)$$

6.4 Reactive Power (Q)

6.4.1 Q_t

This is the Power Group Overall reactive Power.

$$Q_t = s \cdot \sqrt{S_t^2 - P_t^2} \quad s = \begin{cases} 1 & \text{if } Q_{fund} > 0 \\ -1 & \text{if } Q_{fund} \leq 0 \end{cases} \quad \text{Unit : var} \quad (6.51)$$

6.4.2 Q[i]_t

This is the Power Phase number i reactive Power.

$$Q[i]_t = s \cdot \sqrt{S[i]_t^2 - P[i]_t^2} \quad s = \begin{cases} 1 & \text{if } Q_{fund} > 0 \\ -1 & \text{if } Q_{fund} \leq 0 \end{cases} \quad \text{Unit : var} \quad (6.52)$$

6.4.3 Q_fund

This is the Power Group Overall fundamental reactive Power.

$$Q_{fund} = \sum_{i=1}^{NP} Q[i]_{fund} \quad \text{Unit : var} \quad (6.53)$$

6.4.4 Q[i]_fund

This is the Power Phase number i fundamental reactive Power.

$$Q[i]_{fund} = U[i]_{fundRMS} \cdot I[i]_{fundRMS} \cdot \sin(P[i]_{fundPHI}) \quad \text{Unit : var} \quad (6.54)$$

6.5 Apparent Power (S)

6.5.1 S_t

This is the Power Group Overall apparent Power.

$$S_t = \sum_{i=1}^{NP} S[i]_t \quad \text{Unit : VA} \quad (6.55)$$

6.5.2 S[i]_t

This is the Power Phase number i apparent Power.

$$S[i]_t = U[i]_{tRMS} \cdot I[i]_{tRMS} \quad \text{Unit : VA} \quad (6.56)$$

6.5.3 S_fund

This is the Power Group Overall fundamental apparent Power.

$$S_{fund} = \sum_{i=1}^{NP} S[i]_{fund} \quad \text{Unit : VA} \quad (6.57)$$

6.5.4 S[i]_fund

This is the Power Phase number i fundamental apparent Power.

$$S[i]_{fund} = U[i]_{fundRMS} \cdot I[i]_{fundRMS} \quad \text{Unit : VA} \quad (6.58)$$

6.6 Power Factor (PF)

6.6.1 PF_t

This is the Power Group Overall Power Factor

$$PF_t = \frac{P_t}{S_t} \quad \text{Unit : None} \quad (6.59)$$

6.6.2 PF[i]_t

This is the Power Phase number i Power Factor.

$$PF[i]_t = \frac{P[i]_t}{S[i]_t} \quad \text{Unit : None} \quad (6.60)$$

6.6.3 PF_fund

This is the Power Group Overall fundamental Power Factor.

$$PF_{fund} = \frac{P_{fund}}{S_{fund}} \quad \text{Unit : None} \quad (6.61)$$

6.6.4 PF[i]_fund

This is the Power Phase number i fundamental Power Factor.

$$PF[i]_{fund} = \frac{P[i]_{fund}}{S[i]_{fund}} \quad \text{Unit : None} \quad (6.62)$$

6.7 Energy (W)

6.7.1 W_t

This is the Power Group Overall active Energy.

$$W_t = \sum_{i=1}^{NP} W[i]_t \quad \text{Unit : Wh} \quad (6.63)$$

6.7.2 $W[i]_t$

This is the Power Phase number i active Energy.

$$W[i]_t = \sum_{k=0}^{T_{int}} P[i]_{t,k} \cdot \frac{N}{SR} \cdot \frac{1}{3600} \quad \text{Unit : Wh} \quad (6.64)$$

6.7.3 W_{t+}

This is the Power Group Overall positive aggregated active Energy.

$$W_{t+} = \sum_{i=1}^{NP} W[i]_{t+} \quad \text{Unit : Wh} \quad (6.65)$$

6.7.4 $W[i]_{t+}$

This is the Power Phase number i positive aggregated active Energy.

$$W[i]_{t+} = \sum_{k=0}^{T_{int}} \frac{N}{SR} \cdot \frac{1}{3600} \begin{cases} P[i]_{t,k} & \text{if } P[i]_{t,k} > 0 \\ 0 & \text{if } P[i]_{t,k} \leq 0 \end{cases} \quad \text{Unit : Wh} \quad (6.66)$$

6.7.5 W_{t-}

This is the Power Group Overall negative aggregated active Energy.

$$W_{t-} = \sum_{i=1}^{NP} W[i]_{t-} \quad \text{Unit : Wh} \quad (6.67)$$

6.7.6 $W[i]_{t-}$

This is the Power Phase number i negative aggregated active Energy.

$$W[i]_{t-} = \sum_{k=0}^{T_{int}} \frac{N}{SR} \cdot \frac{1}{3600} \begin{cases} 0 & \text{if } P[i]_{t,k} > 0 \\ P[i]_{t,k} & \text{if } P[i]_{t,k} \leq 0 \end{cases} \quad \text{Unit : Wh} \quad (6.68)$$

6.7.7 W_{fund}

This is the Power Group Overall fundamental active Energy.

$$W_{fund} = \sum_{i=1}^{NP} W[i]_{fund} \quad \text{Unit : Wh} \quad (6.69)$$

6.7.8 $W[i]_{fund}$

This is the Power Phase number i fundamental active Energy.

$$W[i]_{fund} = \sum_{k=0}^{T_{int}} P[i]_{fund,k} \cdot \frac{N}{SR} \cdot \frac{1}{3600} \quad \text{Unit : Wh} \quad (6.70)$$

6.7.9 W_fund+

This is the Power Group Overall positive aggregated active Energy.

$$W_{fund+} = \sum_{i=1}^{NP} W[i]_{fund+} \quad \text{Unit : Wh} \quad (6.71)$$

6.7.10 W[i]_fund+

This is the Power Phase number i fundamental positive aggregated active Energy.

$$W[i]_{fund+} = \sum_{k=0}^{T_{int}} \frac{N}{SR} \cdot \frac{1}{3600} \begin{cases} P[i]_{fund,k} & \text{if } P[i]_{fund,k} > 0 \\ 0 & \text{if } P[i]_{fund,k} \leq 0 \end{cases} \quad \text{Unit : Wh} \quad (6.72)$$

6.7.11 W_fund-

This is the Power Group Overall fundamental negative aggregated active Energy.

$$W_{fund-} = \sum_{i=1}^{NP} W[i]_{fund-} \quad \text{Unit : Wh} \quad (6.73)$$

6.7.12 W[i]_fund-

This is the Power Phase number i fundamental negative aggregated active Energy.

$$W[i]_{fund-} = \sum_{k=0}^{T_{int}} \frac{N}{SR} \cdot \frac{1}{3600} \begin{cases} 0 & \text{if } P[i]_{fund,k} > 0 \\ P[i]_{fund,k} & \text{if } P[i]_{fund,k} \leq 0 \end{cases} \quad \text{Unit : Wh} \quad (6.74)$$

6.7.13 C

This is the Power Group Overall accumulated electrical capacity.

$$Q = \sum_{i=1}^{NP} C[i] \quad \text{Unit : Ah} \quad (6.75)$$

6.7.14 C[i]

This is the Power Phase number i accumulated electrical capacity.

$$Q[i] = \sum_{k=0}^{T_{int}} I[i]_{tAVG,k} \cdot \frac{N_k}{SR} \cdot \frac{1}{3600} \quad \text{Unit : Ah} \quad (6.76)$$

6.7.15 C_+

This is the Power Group Overall positive accumulated electrical capacity.

$$C_{t+} = \sum_{i=1}^{NP} C[i]_+ \quad \text{Unit : Ah} \quad (6.77)$$

6.7.16 C[i]_+

This is the Power Phase number i positive accumulated electrical capacity.

$$C[i]_+ = \sum_{k=0}^{T_{int}} \cdot \frac{N}{SR} \cdot \frac{1}{3600} \cdot \begin{cases} I[i]_{tAVG,k} & \text{if } I[i]_{tAVG,k} > 0 \\ 0 & \text{if } I[i]_{tAVG,k} \leq 0 \end{cases} \quad \text{Unit : Ah} \quad (6.78)$$

6.7.17 C_-

This is the Power Group Overall negative accumulated electrical capacity.

$$C_{t-} = \sum_{i=1}^{NP} C[i]_- \quad \text{Unit : Ah} \quad (6.79)$$

6.7.18 C[i]_-

This is the Power Phase number i negative accumulated electrical capacity.

$$C[i]_- = \sum_{k=0}^{T_{int}} \cdot \frac{N}{SR} \cdot \frac{1}{3600} \cdot \begin{cases} 0 & \text{if } I[i]_{tAVG,k} > 0 \\ -I[i]_{tAVG,k} & \text{if } I[i]_{tAVG,k} \leq 0 \end{cases} \quad \text{Unit : Ah} \quad (6.80)$$

6.7.19 C_RMS

This is the Power Group Overall accumulated current effective values.

$$C_{RMS} = \sum_{i=1}^{NP} C[i]_{RMS} \quad \text{Unit : Ah} \quad (6.81)$$

6.7.20 C[i]_RMS

This is the Power Phase number i accumulated accumulated current effective values.

$$C[i]_{RMS} = \sum_{k=0}^{T_{int}} I[i]_{tRMS,k} \cdot \frac{N_k}{SR} \cdot \frac{1}{3600} \quad \text{Unit : Ah} \quad (6.82)$$

6.8 Additional Channels

6.8.1 F_fund

This is the fundamental frequency channel. See 2.3.2 for more information. T_{fund} is the period duration of the fundamental signal estimated by the Zero Crossing Detect

$$F_{fund} = \frac{1}{T_{fund}} \quad \text{Unit : Hz} \quad (6.83)$$

7 Harmonic Analysis Reference (OPT-POWER-ADV)

Contents

7.1 Settings	67
7.2 Harmonic Grouping	68
7.2.1 Mode: "None"	68
7.2.2 Mode: "Type 1"	69
7.2.3 Mode: "Type 2"	69
7.3 Interharmonic Grouping	70
7.3.1 Mode: "None"	70
7.3.2 Mode: "Type 1"	70
7.3.3 Mode: "Type 2"	71
7.4 Higher Frequency Grouping	71
7.5 Supraharmonics Grouping	72
7.6 Harmonic Element Extraction	74
7.7 Voltage Channels (U)	74
7.7.1 U[i]_h[k]RMS	74
7.7.2 U[i]_h[k]REL	74
7.7.3 U[ij]_h[k]RMS	75
7.7.4 U[i]_h[k]PHI	75
7.7.5 U[i]_ih[k]RMS	75
7.7.6 U[i]_ih[k]REL	75
7.7.7 U[i]_hf[k]RMS	75
7.7.8 U[i]_sh[k]MIN	75
7.7.9 U[i]_sh[k]AVG	76
7.7.10 U[i]_sh[k]MAX	76
7.7.11 U[i]_THD	76
7.7.12 U[ij]_THD	76
7.7.13 U[i]_THV	76
7.8 Current Channels (I)	76
7.8.1 I[i]_h[k]RMS	76
7.8.2 I[i]_h[k]REL	77
7.8.3 I[i]_h[k]PHI	77
7.8.4 I[i]_ih[k]RMS	77
7.8.5 U[i]_ih[k]REL	77
7.8.6 I[i]_hf[k]RMS	77
7.8.7 I[i]_sh[k]MIN	77

7.8.8	I[i]_sh[k]AVG	77
7.8.9	I[i]_sh[k]MAX	77
7.8.10	I[i]_THD	78
7.8.11	I[i]_THC	78
7.9	Active Power Channels (P)	78
7.9.1	P[i]_h[k]	78
7.9.2	P[i]_h[k]REL	78
7.9.3	P[i]_THP	78
7.10	Impedance Channels (RXZ)	78
7.10.1	R[i]_h	78
7.10.2	X[i]_h	79
7.10.3	Z[i]_h	79


This Chapter describes the measurement of

- Harmonics (0 to 1000th Order)
- Interharmonics (0.5 to 49.5th Order)
- Higher Frequencies (2 to 9kHz)
- Supraharmonics¹ (8 to 150kHz)

The further mentioned calculation methods are complying with IEC 61000-4-7 for 50 Hz and 60 Hz operation. Beside this fundamental frequencies, the calculation and grouping methods are similar.

Calculation Interval

The Harmonic Analysis is synchronized to N periods of the fundamental.

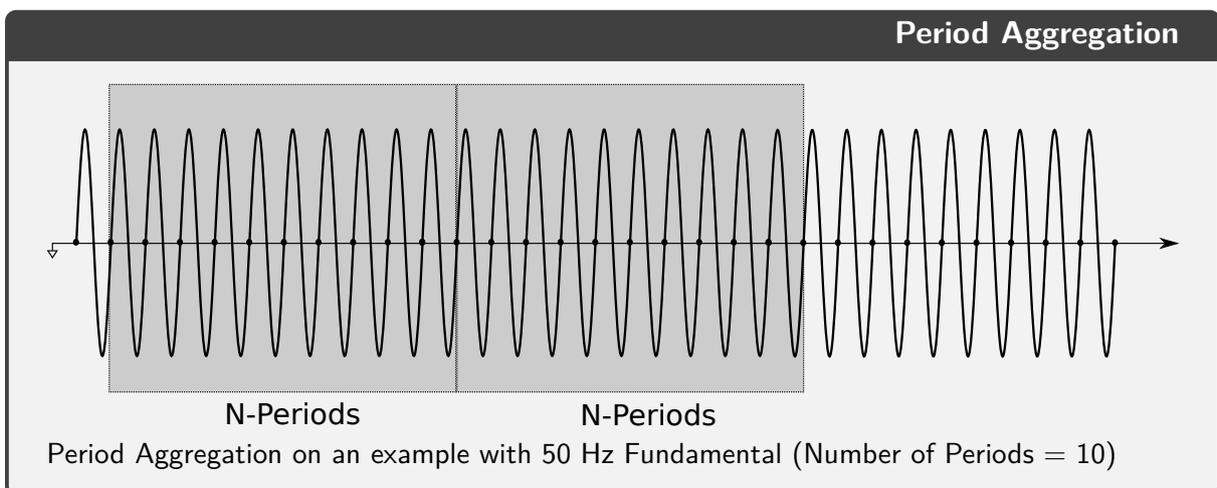

In the following Table you will find the number of periods which are used at different fundamental Frequencies:

¹This feature only provides valid output with Samplrates $\geq 1\text{MS/s}$

Table 7.1: Used number of periods for each calculation interval

Fundamental Frequency	Number of Periods N	Additional Information
1 - 4.99	1	
5 - 14.99	2	
15 - 24.99	4	
25 - 34.99	6	
35 - 44.99	8	
45 - 54.99	10	50 Hz Grid
55 - 64.99	12	60 Hz Grid
65 - 74.99	14	
...	...	

The Harmonic Calculation interval will always be linked to N periods but equates to about 200ms of a time window.

This is true for the Harmonics update rate setting "Default". In case the Harmonics update rate setting is set to "Fast" the time window will half from the "Default" setting to 100ms. For example in a 50Hz Grid the "Default" Harmonic output will be after every 10 Periods the "Fast" Harmonic output will be after every 5 Periods, meaning double the output rate of the "Default" Harmonic update rate setting. See more in Settings below.

7.1 Settings

The screenshot shows the 'Harmonic Settings' window. At the top, there is a 'PowerGroup' dropdown menu (1) and a 'POWER/0' label. Below this, there are two tabs: 'Wiring type' and 'Settings' (2). The 'Settings' tab is active and divided into 'SYNC SETTINGS' and 'ADVANCED SETTINGS'. In 'SYNC SETTINGS', there are fields for 'Input channel' (U1), 'Minimum fundamental frequency' (Default), 'Maximum fundamental frequency' (Default), 'Minimum detection threshold' (Default), 'Maximum update rate' (Default), and 'Secondary sync source' (Drop channel here). There is also a 'Time interval' dropdown set to '200 ms' (8) and 'Channel Subsampling' set to 'Auto' (9). In 'ADVANCED SETTINGS', there are tabs for 'Harmonics', 'Flicker', 'Efficiency', 'd/q', and 'Rolling'. The 'Harmonics' tab is active. It contains a checkbox for 'Harmonics / interharmonics' (3), a 'Grouping type' dropdown set to 'None' (4), and three radio button options: 'None', 'Type 1 - IEC61000-4-7 5.6 (9)', and 'Type 2 - IEC61000-4-7 5.5.1 (8)'. Below these are two sliders: 'Maximum harmonic order' (5) set to 50 and 'Maximum THD harmonic order' (6) set to 40. The 'Harmonics update rate' is set to 'Default' (7). At the bottom, there are checkboxes for 'Enable supra harmonics', 'Enable Line-Line harmonics' (10), 'Enable relative harmonics channels' (checked), and 'Enable impedance channels' (11). The 'Resolution' is set to '2 kHz'.

- ① Power Group's Tab for Settings
- ② Details Tab for Settings of the Harmonic Analysis
- ③ Enable/Disable Harmonic Analysis

- ④ Selector for Grouping Type
- ⑤ Input Field for maximum order of Harmonics to be calculated and displayed
- ⑥ Input Field for number of Harmonics in THD calculation (must be lower or equal than (5))
- ⑦ Harmonic update rate, options: "Default" or "Fast". "Fast" meaning double the output rate of "Default"
- ⑧ Enable/Disable supraharmonic analysis, options: Resolution of 2kHz or 200Hz
- ⑨ Enable/Disable Line-Line harmonics
- ⑩ Enable/Disable relative harmonics channels, options: set relative harmonics channels to be based on fundamental or nominal value
- ⑪ Enable/Disable impedance channels

7.2 Harmonic Grouping


Table 7.2: Legend

Symbol	Description
Y_c	RMS Magnitude of FFT-Bin
Y_h	RMS Magnitude of Harmonic Order h (Grouping "None")
$Y_{sg,h}$	RMS Magnitude of Harmonic Order h (Grouping "Type 1")
$Y_{g,h}$	RMS Magnitude of Harmonic Order h (Grouping "Type 2")
NP	Number of fundamental Periods
h	Harmonic Order

7.2.1 Mode: "None"

When this mode is selected, only the harmonic bins are taken for generation of the harmonic data.

$$Y_h = Y_c[NP \cdot h] \tag{7.1}$$

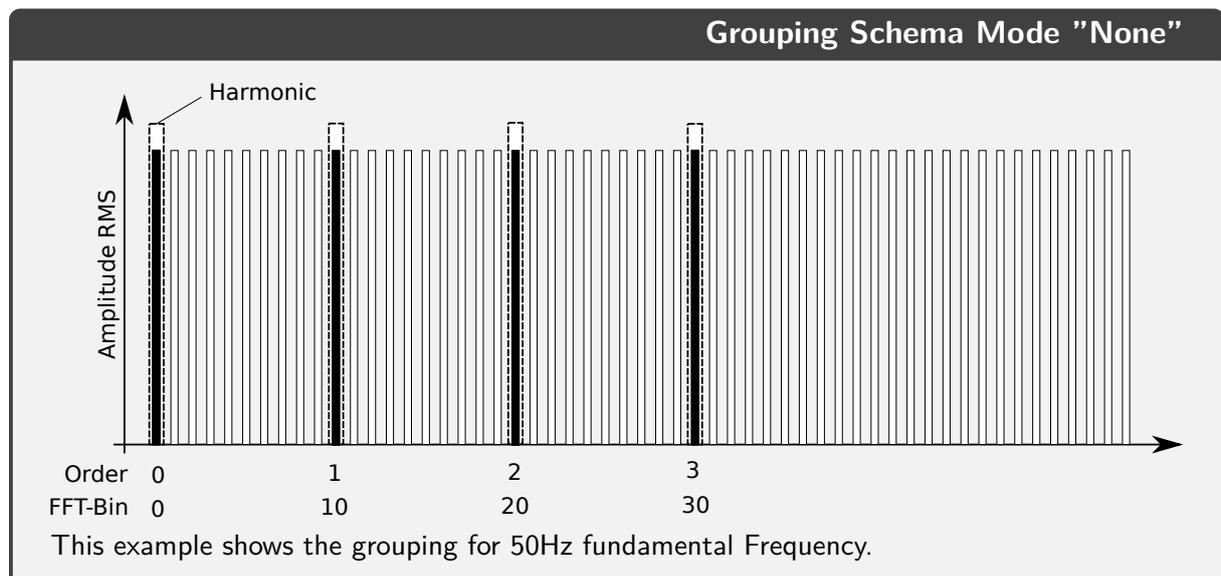


7.2.2 Mode: "Type 1"

When this mode is selected, the harmonics are grouped according to IEC61000-4-7 Section 5.6.

$$Y_{sg,h} = Y_c [NP \cdot h] \quad NP < 2 \quad (7.2)$$

$$Y_{sg,h} = \sqrt{\sum_{k=-1}^1 Y_c [NP \cdot h + k]^2} \quad NP \geq 2 \quad (7.3)$$

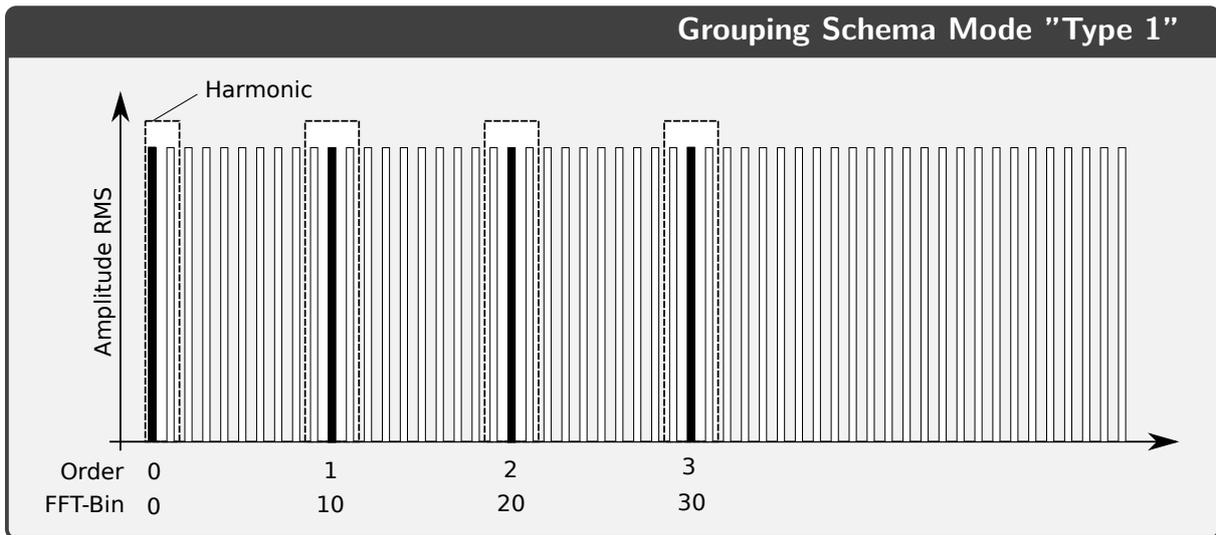


7.2.3 Mode: "Type 2"

When this mode is selected, the harmonics are grouped according to IEC61000-4-7 Section 5.5.1.

$$Y_{g,h} = Y_c [NP \cdot h] \quad NP < 2 \quad (7.4)$$

$$Y_{g,h} = \sqrt{\frac{1}{2} Y_c \left[NP \cdot h - \frac{N}{2} \right]^2 + \sum_{k=\frac{-N}{2}+1}^{\frac{N}{2}-1} Y_c [NP \cdot h + k]^2 + \frac{1}{2} Y_c \left[NP \cdot h + \frac{N}{2} \right]^2} \quad NP \geq 2 \quad (7.5)$$

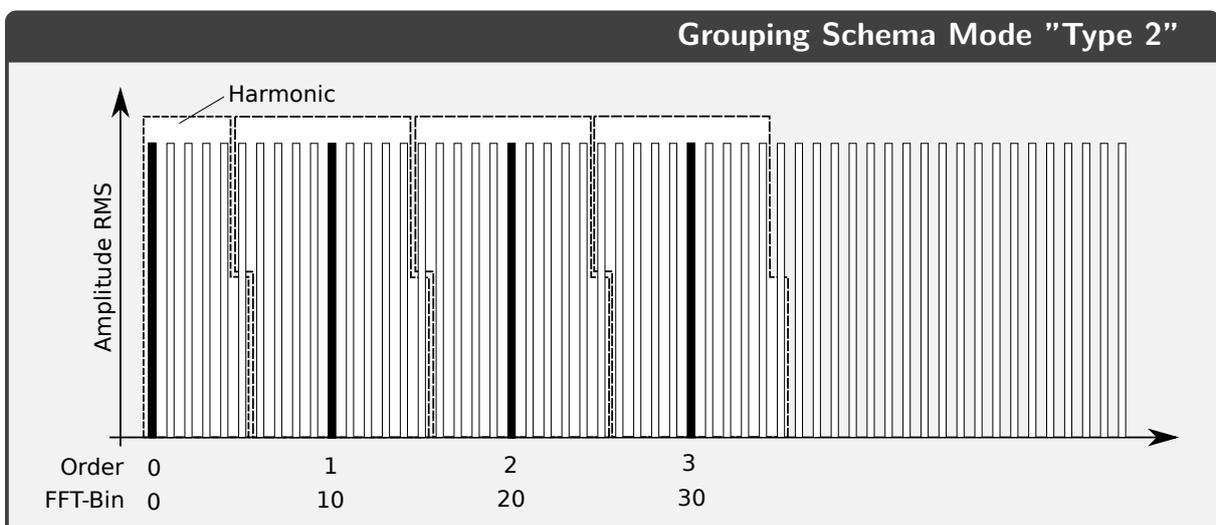

7.3 Interharmonic Grouping

Table 7.3: Legend


Symbol	Description
Y_c	RMS Magnitude of FFT-Bin
Y_{ih}	RMS Magnitude of Interharmonic Order h (Grouping "None")
$Y_{isg,h}$	RMS Magnitude of Interharmonic Order h (Grouping "Type 1")
$Y_{ig,h}$	RMS Magnitude of Interharmonic Order h (Grouping "Type 2")
NP	Number of fundamental Periods
h	Interharmonic Order

7.3.1 Mode: "None"

When this mode is selected, all bins (except of harmonic bin) are taken for generation of the interharmonic data.

$$Y_{ih} = NaN \quad NP = 1 \quad (7.6)$$

$$Y_{ih} = \sqrt{\sum_{k=1}^{N-1} Y_c [NP \cdot h + k]^2} \quad NP > 1 \quad (7.7)$$

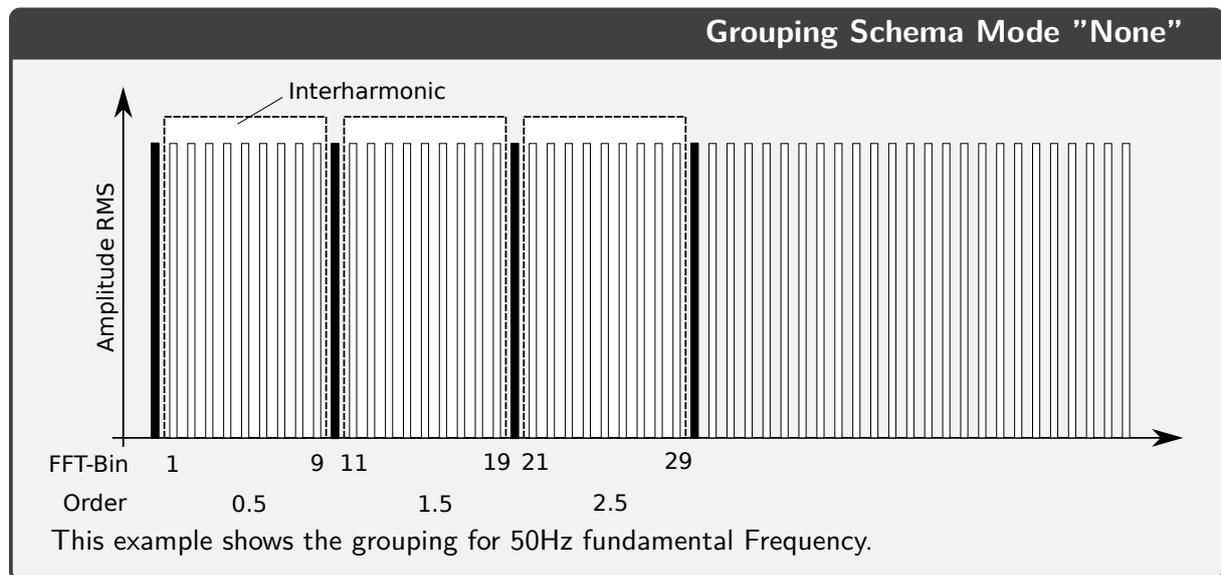


7.3.2 Mode: "Type 1"

When this mode is selected, the Interharmonics are grouped according to IEC61000-4-7 Section 5.6.

$$Y_{isg,h} = NaN \quad NP \leq 2 \quad (7.8)$$

$$Y_{isg,h} = \sqrt{\sum_{k=2}^{N-2} Y_c [NP \cdot h + k]^2} \quad NP > 2 \quad (7.9)$$

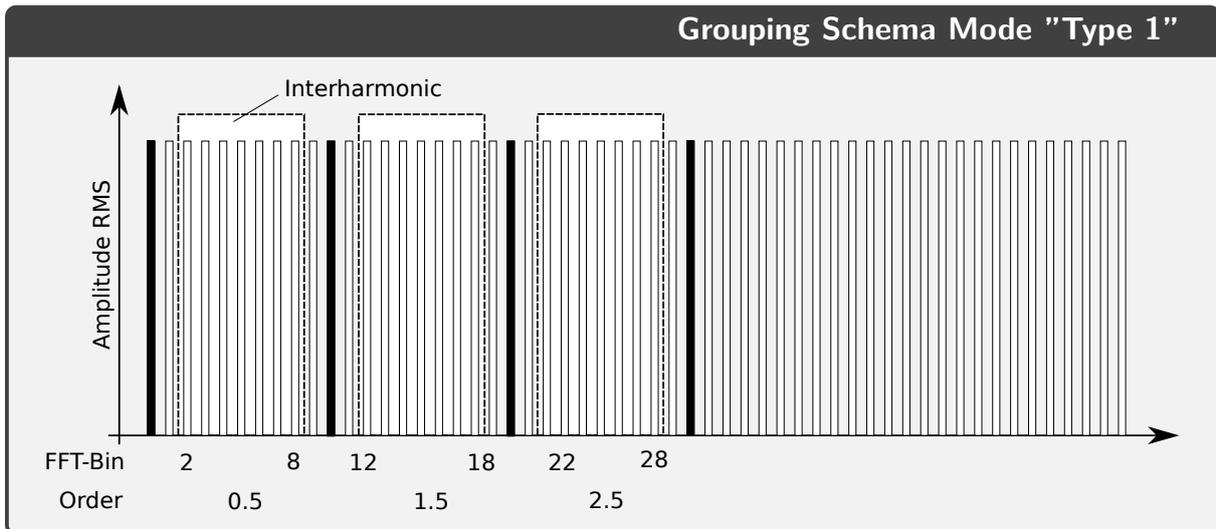


7.3.3 Mode: "Type 2"

When this mode is selected, the Interharmonics are grouped according to IEC61000-4-7 Section 5.5.1.

$$Y_{ig,h} = NaN \quad NP = 1 \quad (7.10)$$

$$Y_{ig,h} = \sqrt{\sum_{k=1}^{N-1} Y_c [NP \cdot h + k]^2} \quad NP > 1 \quad (7.11)$$

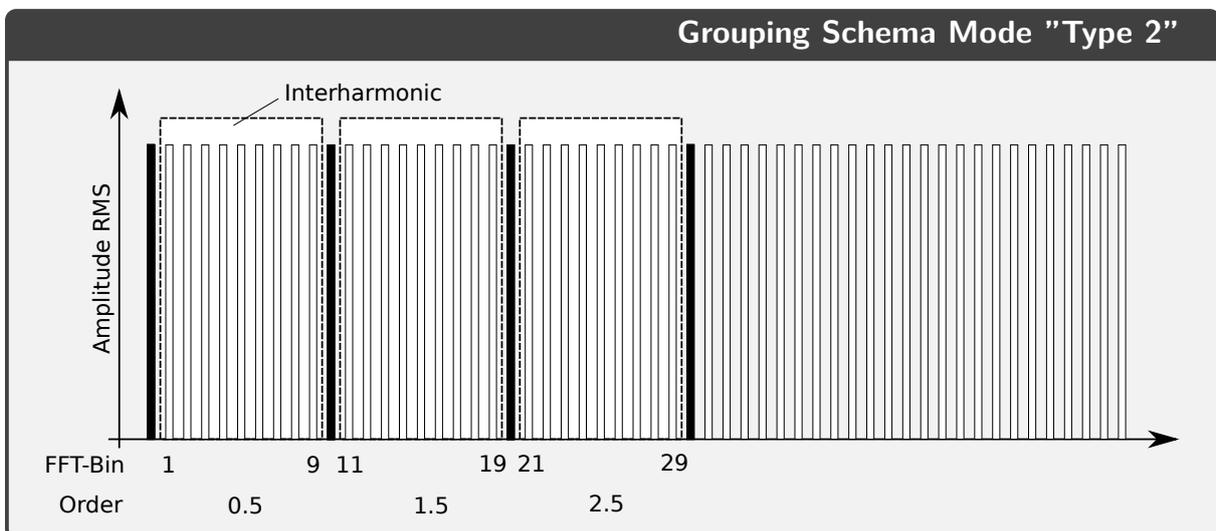


7.4 Higher Frequency Grouping

The Higher Frequency Grouping is orientated on fixed frequency bands (see IEC/EN61000-4-7 Appendix B). It is independent from the fundamental frequency and working between 10 and 1000 Hz.

Table 7.4: Legend

Symbol	Description
$Y_{C,f}$	RMS Magnitude of FFT-Bin
$Y_{B,b}$	RMS Magnitude of Higher Frequency Order b

$$Y_{B,b} = \sqrt{\sum_{f=b-95\text{Hz}}^{b+100\text{Hz}} Y_{C,f}^2} \quad (7.12)$$

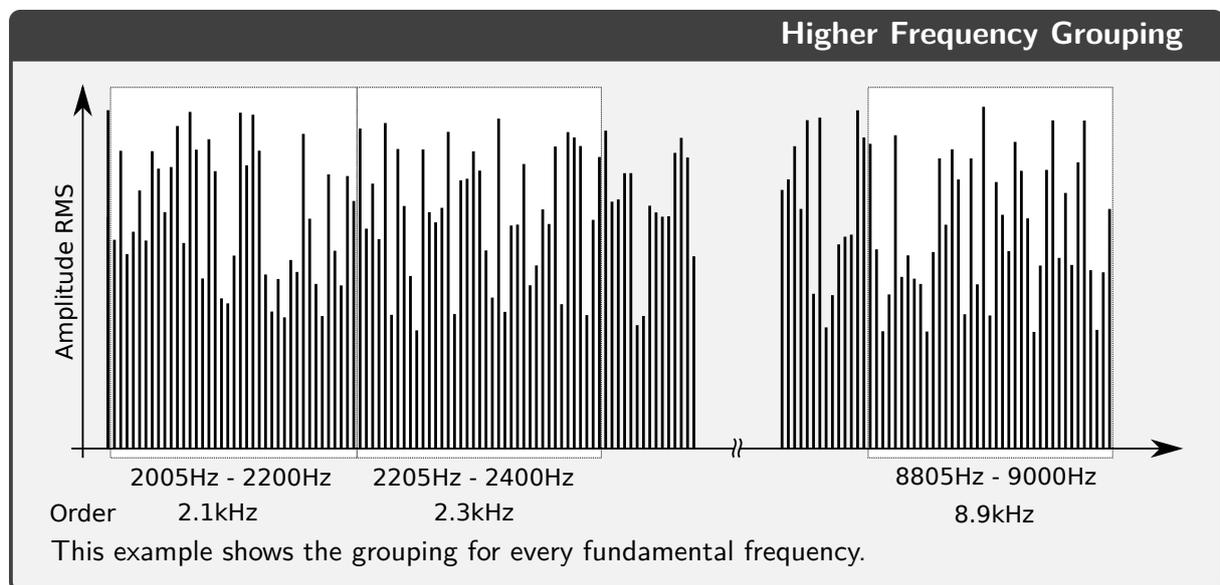

7.5 Supraharmonics Grouping

Unlike the other grouping methods, the Supraharmonics are aggregated in time. The Supraharmonics calculation will output channels with the Harmonic components in the frequency range between 8kHz and 150kHz.

Since the Line Resolution of 2kHz (or optional 200Hz) is much finer than the Harmonic Calculation Interval meaning the update rate of Supraharmonics is much faster than the Harmonic Interval the output channels will undergo a statistics evaluation (AVG, MIN, MAX). Each Supraharmonic Evaluation will result in 3 Channels with indices *_shMIN*, *_shMAX*, *_shAVG*. As an example for the first Voltage:

U1_shMIN, *U1_shMAX*, *U1_shAVG*.

Table 7.5: Legend


Symbol	Description
$Y_{C,b}$	RMS Magnitude of FFT-Bin b
$Y_{SH,i,min}$	Minimum RMS Magnitude of Supraharmonics order i
$Y_{SH,i,avg}$	Average RMS Magnitude of Supraharmonics order i
$Y_{SH,i,max}$	Maximum RMS Magnitude of Supraharmonics order i
NP	Number of fundamental periods (10 @ 50Hz, 12 @ 60Hz)
N_{FFT}	Number of Short Time FFTs in time interval of NP
SR	Samplerate

$$N_{FFT} = \frac{NP}{F_{fund}} \cdot SR \quad (7.13)$$

$$Y_{SH,b,min} = \min(Y_{C,b}) \quad (7.14)$$

$$Y_{SH,b,avg} = \text{avg}(Y_{C,b}) \quad (7.15)$$


$$Y_{SH,b,max} = \max(Y_{C,b}) \quad (7.16)$$

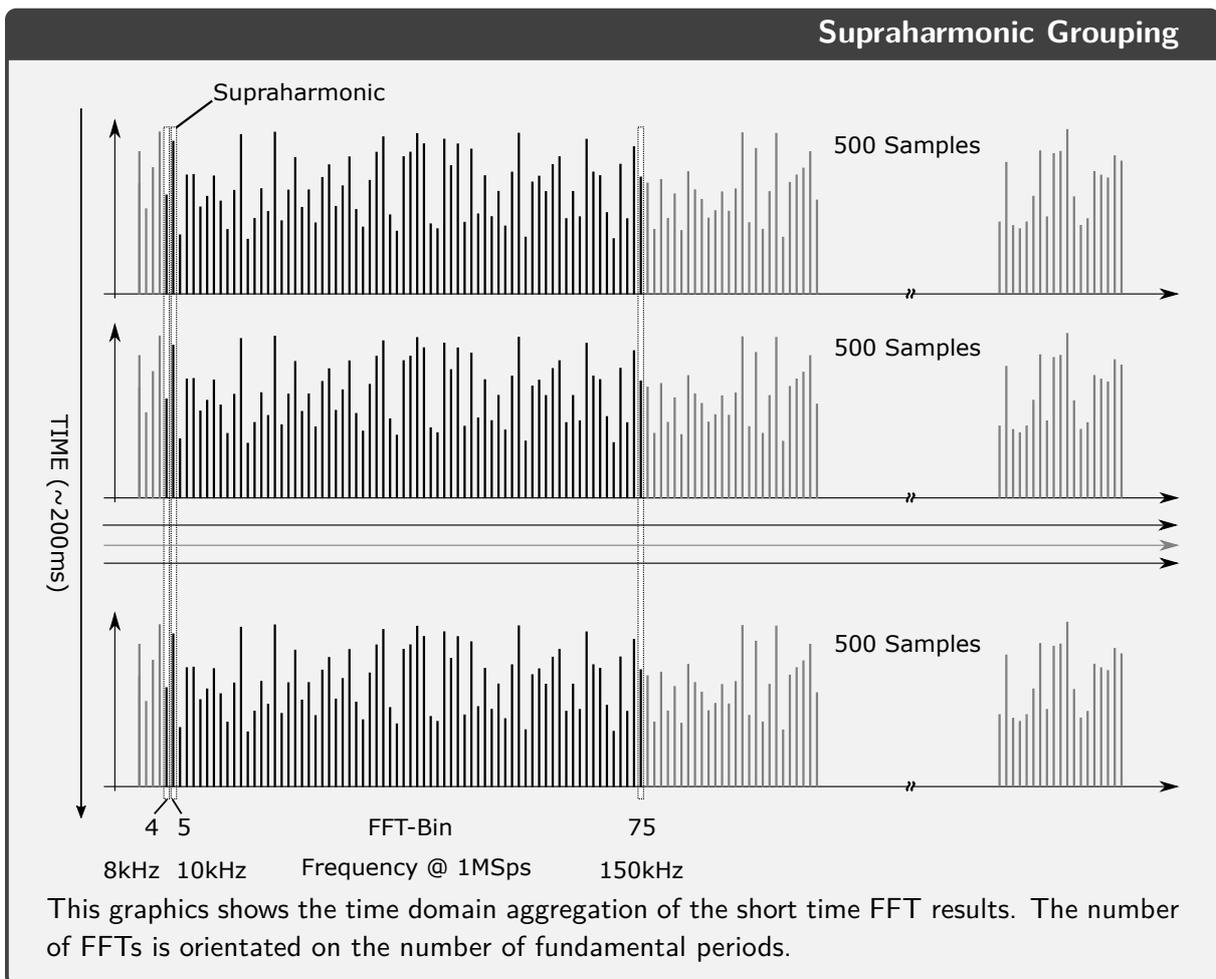

In the graphics above the Supraharmonics Resolution is set to the default 2kHz. In case the option in the Power Group settings is set to 200Hz the FFT-Bin at 150kHz will be 750, not 75, and the line resolution will be 200Hz.

7.6 Harmonic Element Extraction

Specific elements from the Harmonic Vector can be extracted as separate channels.

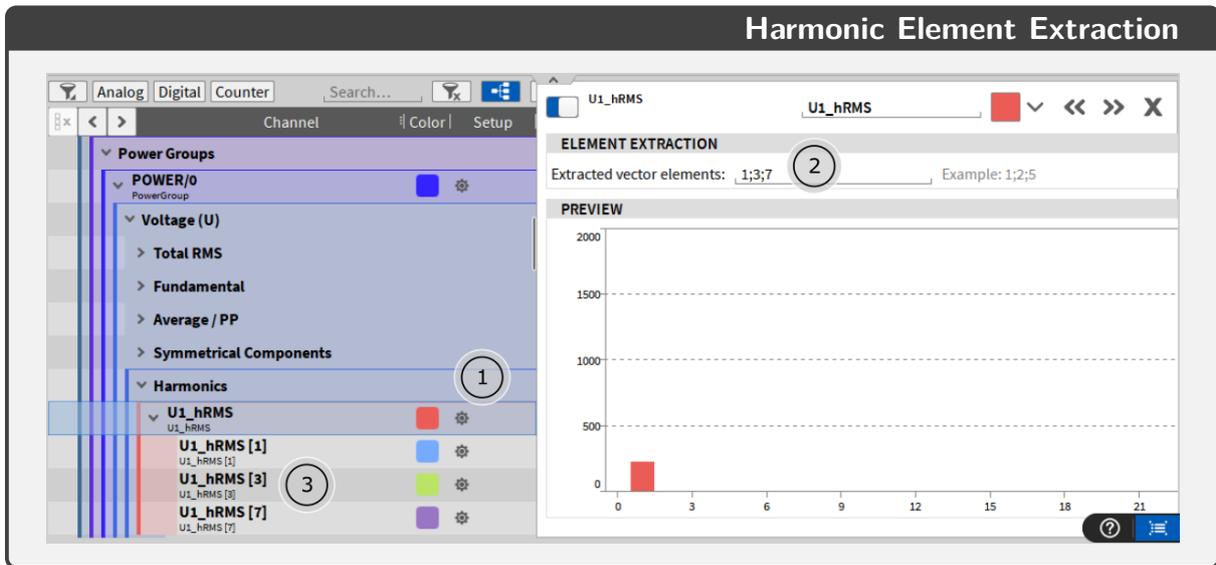

- ① Open Channel Settings of Harmonic Vector
- ② Select elements starting from zero
- ③ Each extracted element will create a new scalar channel under the Harmonic Vector

7.7 Voltage Channels (U)

7.7.1 $U[i]_h[k]_{RMS}$

See 7.2

$$Y_c = \text{abs}(\underline{U}[i]_{fft}) \cdot \frac{1}{\sqrt{2}} \quad (7.17)$$

$$U[i]_h[k]_{RMS} = \begin{cases} Y_h & \text{if } MODE = "None" \\ Y_{sg,h} & \text{if } MODE = "Type1" \\ Y_{g,h} & \text{if } MODE = "Type2" \end{cases} \quad \text{Unit : } \mathbf{V} \quad (7.18)$$

7.7.2 $U[i]_h[k]_{REL}$

Voltage relative harmonic value, referenced to fundamental. Must be enabled separately.

$$U[i]_h[k]_{REL} = \frac{U[i]_h[k]_{RMS}}{U[i]_h[1]_{RMS}} \cdot 100\% \quad \text{Unit : } \% \quad (7.19)$$

7.7.3 U[ij]_h[k]RMS

Line-to-Line Harmonic Magnitude. Only available in 3-Phase Configurations (3P3W, 3P4W, 2V2A).

$$\underline{U}[i]_h = U[i]_h[k]_{RMS} \cdot \left(\cos(U[i]_h[k]_{PHI} \cdot \frac{\pi}{180}) + \right. \quad (7.20)$$

$$\left. j \cdot \sin(U[i]_h[k]_{PHI} \cdot \frac{\pi}{180}) \right) \quad (7.21)$$

$$\underline{U}[12]_h = \underline{U}[1]_h - \underline{U}[2]_h \quad (7.22)$$

$$\underline{U}[23]_h = \underline{U}[2]_h - \underline{U}[3]_h \quad (7.23)$$

$$\underline{U}[31]_h = \underline{U}[3]_h - \underline{U}[1]_h \quad (7.24)$$

$$U[ij]_h[k]_{RMS} = \text{abs}(\underline{U}[ij]_h) \quad \text{Unit : } \mathbf{V} \quad (7.25)$$

7.7.4 U[i]_h[k]PHI

$$PHI_{ref} = \arg(\underline{U}[1]_{fft}[1 \cdot NP]) + 90^\circ \quad (7.26)$$

$$U[i]_h[k]_{PHI} = \arg(\underline{U}[i]_{fft}[k \cdot NP]) + 90^\circ - k \cdot PHI_{ref} \quad \text{Unit : } \mathbf{deg}(\circ) \quad (7.27)$$

7.7.5 U[i]_ih[k]RMS

See 7.3

$$Y_c = \text{abs}(\underline{U}[i]_{fft}) \cdot \frac{1}{\sqrt{2}} \quad (7.28)$$

$$U[i]_{ih}[k]_{RMS} = \begin{cases} Y_{ih} & \text{if } MODE = "None" \\ Y_{isg,h} & \text{if } MODE = "Type1" \\ Y_{ig,h} & \text{if } MODE = "Type2" \end{cases} \quad \text{Unit : } \mathbf{V} \quad (7.29)$$

7.7.6 U[i]_ih[k]REL

Voltage relative interharmonic value, referenced to fundamental. Must be enabled separately.

$$U[i]_{ih}[k]_{REL} = \frac{U[i]_{ih}[k]_{RMS}}{U[i]_h[1]_{RMS}} \cdot 100\% \quad \text{Unit : } \% \quad (7.30)$$

7.7.7 U[i]_hf[k]RMS

See 7.4

$$Y_C = \text{abs}(\underline{U}[i]_{fft}) \cdot \frac{1}{\sqrt{2}} \quad (7.31)$$

$$U[i]_{hf}[k]_{RMS} = Y_{B,b} \quad \text{Unit : } \mathbf{V} \quad (7.32)$$

7.7.8 U[i]_sh[k]MIN

Minimum Value of Voltage Supraharmonics Grouping. See 7.5.

$$U[i]_{sh}[k]_{MIN} = Y_{SH,b,min} \quad \text{Unit : } \mathbf{V} \quad (7.33)$$

7.7.9 U[i]_sh[k]AVG

Average Value of Voltage Supraharmonics Grouping. See 7.5.

$$U[i]_{sh[k]AVG} = Y_{SH,b,avg} \quad \text{Unit : V} \quad (7.34)$$

7.7.10 U[i]_sh[k]MAX

Maximum Value of Voltage Supraharmonics Grouping. See 7.5.

$$U[i]_{sh[k]MAX} = Y_{SH,b,max} \quad \text{Unit : V} \quad (7.35)$$

7.7.11 U[i]_THD

Voltage Total Harmonic Distortion, highest used harmonic is k_{max} (selectable in menu in the Harmonics tab).

$$U[i]_{THD} = 100 \cdot \sqrt{\sum_{k=2}^{k_{max}} \left(\frac{U[i]_{h[k]RMS}}{U[i]_{h[1]RMS}} \right)^2} \quad \text{Unit : \%} \quad (7.36)$$

7.7.12 U[ij]_THD

Line-Line Voltage Total Harmonic Distortion, highest used harmonic is k_{max} (selectable in menu in the Harmonics tab).

$$U[ij]_{THD} = 100 \cdot \sqrt{\sum_{k=2}^{k_{max}} \left(\frac{U[ij]_{h[k]RMS}}{U[ij]_{h[1]RMS}} \right)^2} \quad \text{Unit : \%} \quad (7.37)$$

7.7.13 U[i]_THV

Total Harmonic Voltage, highest used harmonic is k_{max} (selectable in menu in the Harmonics tab).

$$U[i]_{THV} = \sqrt{\sum_{k=2}^{k_{max}} \left(U[i]_{h[k]RMS} \right)^2} \quad \text{Unit : V} \quad (7.38)$$

7.8 Current Channels (I)

7.8.1 I[i]_h[k]RMS

See 7.2

$$Y_c = \text{abs}(I[i]_{fft}) \cdot \frac{1}{\sqrt{2}} \quad (7.39)$$

$$I[i]_{h[k]RMS} = \begin{cases} Y_h & \text{if MODE = "None"} \\ Y_{sg,h} & \text{if MODE = "Type1"} \\ Y_{g,h} & \text{if MODE = "Type2"} \end{cases} \quad \text{Unit : A} \quad (7.40)$$

7.8.2 I[i]_h[k]REL

Current relative harmonic value, referenced to fundamental. Must be enabled separately.

$$I[i]_h[k]_{REL} = \frac{I[i]_h[k]_{RMS}}{I[i]_h[1]_{RMS}} \cdot 100\% \quad \text{Unit : \%} \quad (7.41)$$

7.8.3 I[i]_h[k]PHI

$$PHI_{ref} = \arg(U1_{fft}[1 \cdot NP]) + 90^\circ \quad (7.42)$$

$$I[i]_h[k]_{PHI} = \arg(I[i]_{fft}[k \cdot NP]) + 90^\circ - k \cdot PHI_{ref} \quad \text{Unit : deg}^\circ \quad (7.43)$$

7.8.4 I[i]_ih[k]RMS

See 7.3

$$Y_c = \text{abs}(I[i]_{fft}) \cdot \frac{1}{\sqrt{2}} \quad (7.44)$$

$$I[i]_{ih}[k]_{RMS} = \begin{cases} Y_{ih} & \text{if } MODE = "None" \\ Y_{isg,h} & \text{if } MODE = "Type1" \\ Y_{ig,h} & \text{if } MODE = "Type2" \end{cases} \quad \text{Unit : A} \quad (7.45)$$

7.8.5 U[i]_ih[k]REL

Current relative interharmonic value, referenced to fundamental. Must be enabled separately.

$$I[i]_{ih}[k]_{REL} = \frac{I[i]_{ih}[k]_{RMS}}{I[i]_h[1]_{RMS}} \cdot 100\% \quad \text{Unit : \%} \quad (7.46)$$

7.8.6 I[i]_hf[k]RMS

See 7.4

$$Y_C = \text{abs}(I[i]_{fft}) \cdot \frac{1}{\sqrt{2}} \quad (7.47)$$

$$I[i]_{hf}[k]_{RMS} = Y_{B,b} \quad \text{Unit : A} \quad (7.48)$$

7.8.7 I[i]_sh[k]MIN

Minimum Value of Current Supraharmonics Grouping. See 7.5.

$$I[i]_{sh}[k]_{MIN} = Y_{SH,b,min} \quad \text{Unit : A} \quad (7.49)$$

7.8.8 I[i]_sh[k]AVG

Average Value of Current Supraharmonics Grouping. See 7.5.

$$I[i]_{sh}[k]_{AVG} = Y_{SH,b,avg} \quad \text{Unit : A} \quad (7.50)$$

7.8.9 I[i]_sh[k]MAX

Maximum Value of Current Supraharmonics Grouping. See 7.5.

$$I[i]_{sh}[k]_{MAX} = Y_{SH,b,max} \quad \text{Unit : A} \quad (7.51)$$

7.8.10 I[i]_THD

Current Total Harmonic Distortion, highest used harmonic is k_{max} (selectable in menu in the Harmonics tab)

$$I[i]_{THD} = 100 \cdot \sqrt{\sum_{k=2}^{k_{max}} \left(\frac{I[i]_{h[k]RMS}}{I[i]_{h[1]RMS}} \right)^2} \quad \text{Unit : \%} \quad (7.52)$$

7.8.11 I[i]_THC

Current Total Harmonic Current, highest used harmonic is k_{max} (selectable in menu in the Harmonics tab)

$$I[i]_{THC} = \sqrt{\sum_{k=2}^{k_{max}} \left(I[i]_{h[k]RMS} \right)^2} \quad \text{Unit : A} \quad (7.53)$$

7.9 Active Power Channels (P)

Grouping Mode always "None"

7.9.1 P[i]_h[k]

Active Power Harmonics.

$$P[i]_h[k] = U[i]_h[k]_{RMS} \cdot I[i]_h[k]_{RMS} \cdot \cos(U[i]_h[k]_{PHI} - I[i]_h[k]_{PHI}) \quad \text{Unit : W} \quad (7.54)$$

7.9.2 P[i]_h[k]REL

Relative active Power Harmonics, referenced to fundamental

$$P[i]_h[k]_{REL} = \frac{P[i]_h[k]_{RMS}}{P[i]_h[1]_{RMS}} \cdot 100\% \quad \text{Unit : \%} \quad (7.55)$$

7.9.3 P[i]_THP

Total Harmonic Power, highest used harmonic is k_{max} (selectable in menu in the Harmonics tab).

$$P[i]_{THP} = \sum_{k=2}^{k_{max}} P[i]_{h[k]} \quad \text{Unit : W} \quad (7.56)$$

7.10 Impedance Channels (RXZ)

7.10.1 R[i]_h

Active Impedance harmonic value. Must be enabled separately.

$$R[i]_h[k] = \frac{U[i]_h[k]_{RMS}}{I[i]_h[k]_{RMS}} \cdot \cos(U[i]_h[k]_{PHI} - I[i]_h[k]_{PHI}) \quad \text{Unit : Ohm} \quad (7.57)$$

7.10.2 X[i]_h

Reactive Impedance harmonic value. Must be enabled separately.

$$X[i]_h[k] = \frac{U[i]_h[k]_{RMS}}{I[i]_h[k]_{RMS}} \cdot \sin(U[i]_h[k]_{PHI} - I[i]_h[k]_{PHI}) \quad \text{Unit : Ohm} \quad (7.58)$$

7.10.3 Z[i]_h


Impedance harmonic value. Must be enabled separately.

$$Z[i]_h[k] = \frac{U[i]_h[k]_{RMS}}{I[i]_h[k]_{RMS}} \quad \text{Unit : Ohm} \quad (7.59)$$

8 Voltage Fluctuation and Flicker Emission Analysis Reference (OPT-POWER-ADV)

This chapter describes the measurement parameters according to IEC61000-4-15 and IEC61400-21 Section 7.3. For the Flicker Reporting Table in the Power Instrument see chapter 3.4

8.1 Introduction

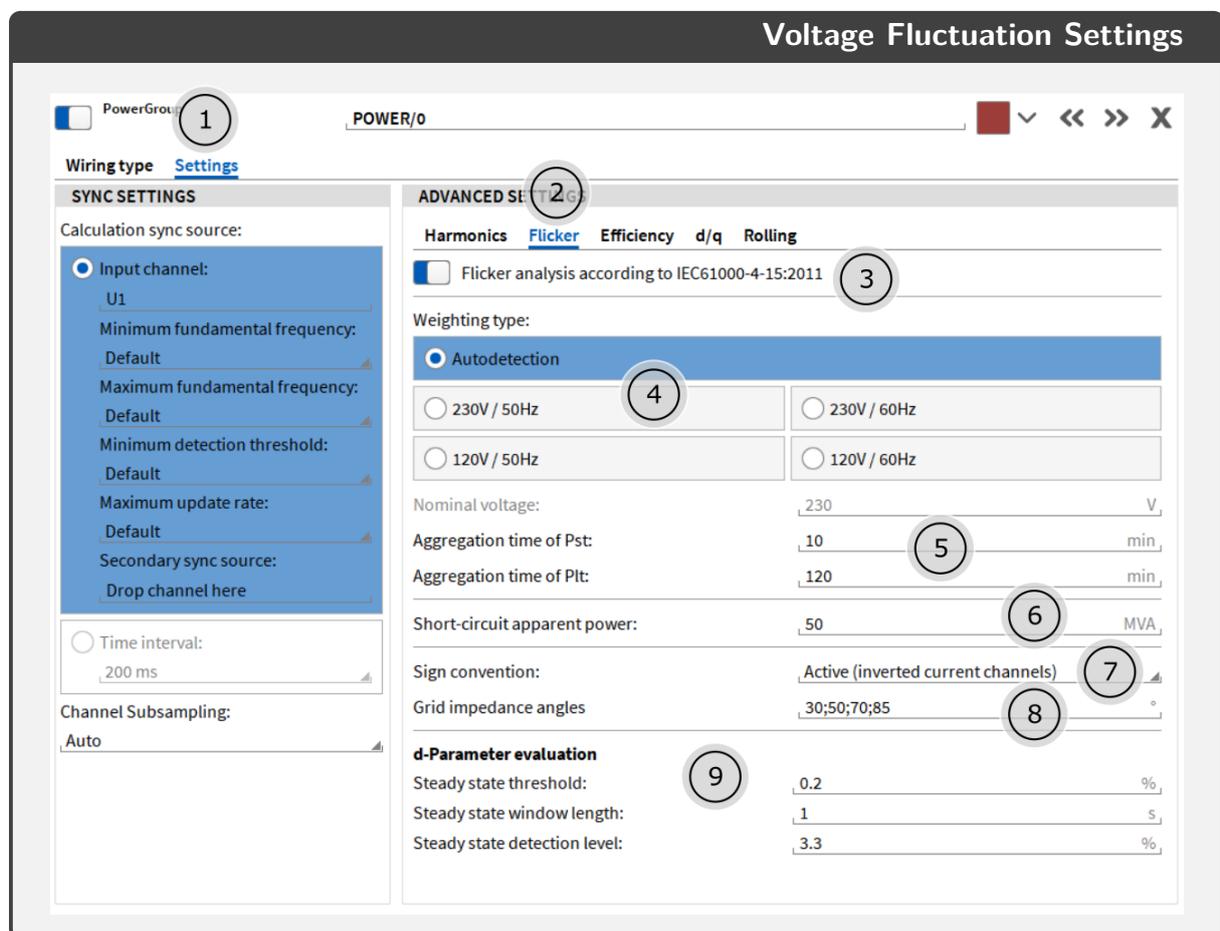

- ① Power Group's Settings Tab
- ② Details Tab for Settings of the Voltage Fluctuation Analysis
- ③ Enable/Disable Voltage Fluctuation Analysis
- ④ Selector for Weighting Type
- ⑤ Input Field for Nominal Voltage, if weighting type is other than Autodetection;
Input Field for Short Term (Pst) and Long Term (Plt) Voltage Fluctuation Aggregation time

- ⑥ Input Field for Short-Circuit Apparent Power $S_{K, fic}$ for Flicker Emission evaluation. This value has to be inserted as single phase value.
- ⑦ Sign convention (Passive / Active).
In passive sign convention loads have positive power and sources have negative power. In active sign convention loads have negative power and sources have positive power.
Use active when measuring positive real power on a generator.
Use passive when measuring negative real power on a generator.
- ⑧ Grid impedance angles
- ⑨ d-Parameters

The grid impedance angles is an array with multiple values, separated by a semicolon. This angle gives the relation between ohmic and inductive behavior of the fictious grid. For more details about the fictious grid, see section 8.3.

The d-Parameters can be manually defined to set the conditions of detected short term voltage fluctuations. For more details about the d-Parameters, see section 8.4.

INFORMATION

Table 8.1: Working Conditions for Voltage Fluctuation

Fundamental Frequency	10 to 1000 Hz
Nominal Voltage	> 5% of Input Range
Weighting Functions	120V/50Hz, 120V/60Hz, 230V/50Hz, 230V/60Hz
Aggregation Time Pst	1 sec to 60 min
Aggregation Time Plt	1 sec to 1440 min
Short Circuit Apparent Power	0.001 to 10 000 MVA

8.2 Perform Analysis


To perform a Voltage Fluctuation Analysis, please proceed the following Steps:

1. Switch on the Feature ②
2. Select the Weighting Type ③ for your Application. Use Autodetection in low voltage grids (120V/230V). If you want to use the Voltage Fluctuation Algorithm outside these Conditions, please select the weighting type manually and insert the nominal voltage in ④
3. Change the Aggregation Time of Pst and Plt if needed ⑤ + ⑥
4. Change the sign convention to active if necessary ⑦
5. Go back to Measurement Screen, take an indicator instrument and assign the U[i]_fluc_ready Channel
6. Take a Table Instrument and assign the U[i]_fluc_Pst Channels or any other Instrument to visualize the Voltage Fluctuation Values

7. Wait for Channel Ready (1 or red)
8. Start the Recording

8.3 Flicker Emission

Flicker Emission is the Analysis of the virtually generated voltage fluctuation caused by the emitted current. This analysis procedure is described in the IEC61400-21 Standard. It uses a fictitious grid for simulation of a fictitious voltage, which is then processed with the flicker algorithm to get the $P_{st, fic}$.

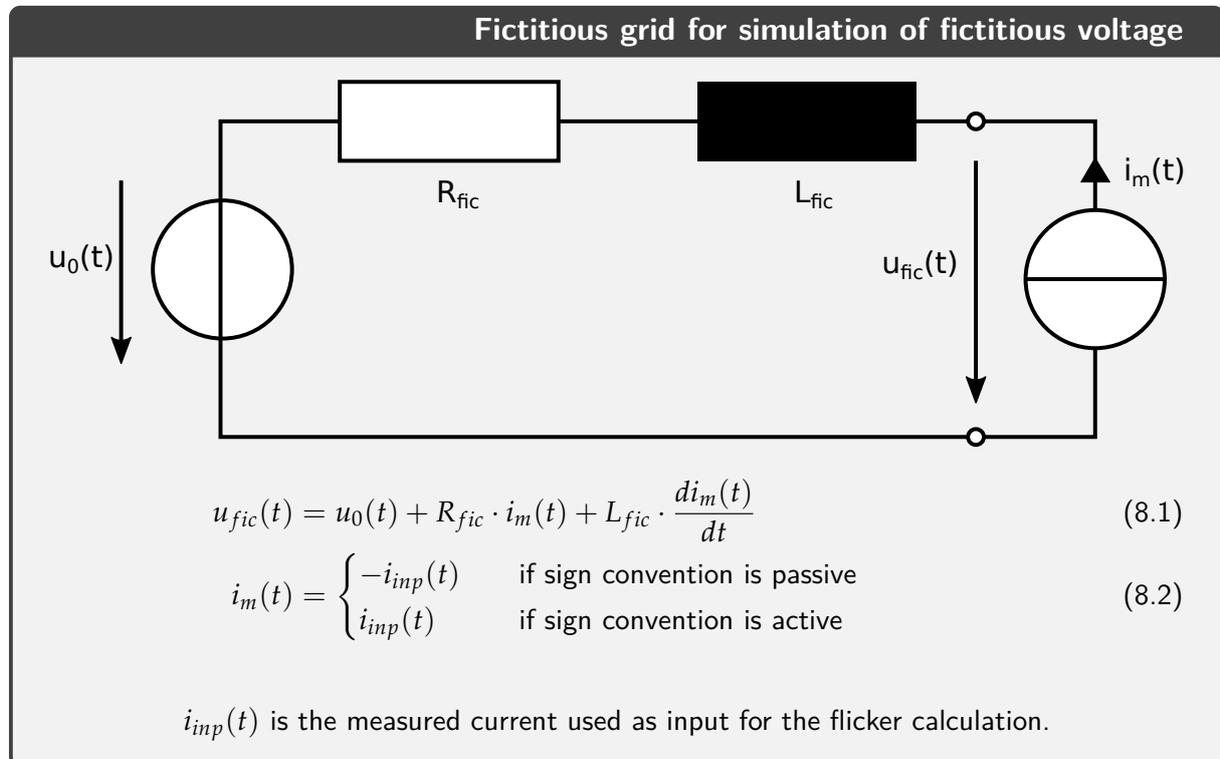

Calculation Insights

Table 8.2: Legend

Symbol	Description
$S_{K, fic}$	This is the short circuit power of the fictitious grid. To be given for one phase in MVA!
U_N	Nominal Voltage (U_{L-N}) of the analyzed grid.
ψ_K	Phase Angle of the Grid Impedance (pre-defined with 30/50/70/85 deg)
R_{fic}	Fictitious Ohmic impedance
X_{fic}	Fictitious Reactive impedance
f_N	Nominal Frequency (50 or 60 Hz, depending on the selected Weighting)

$$S_{K, fic} = \frac{U_N^2}{\sqrt{R_{fic}^2 + X_{fic}^2}} \quad \text{Unit : VA} \quad (8.3)$$

$$Z_{fic} = \sqrt{R_{fic}^2 + X_{fic}^2} = \frac{U_N^2}{S_{K, fic}} \quad \text{Unit : } \Omega \quad (8.4)$$


$$R_{fic} = Z_{fic} \cdot \cos(\psi_K) \quad \text{Unit : } \Omega \quad (8.5)$$

$$X_{fic} = Z_{fic} \cdot \sin(\psi_K) \quad \text{Unit : } \Omega \quad (8.6)$$

$$L_{fic} = \frac{X_{fic}}{2 \cdot \pi \cdot f_N} \quad \text{Unit : H} \quad (8.7)$$

8.4 Short Term Voltage Fluctuations / d-Parameter

This functionality evaluates the voltage change characteristics according to IEC61000-4-15. For this analysis, the half-period rms values from the voltage channels are calculated internally.

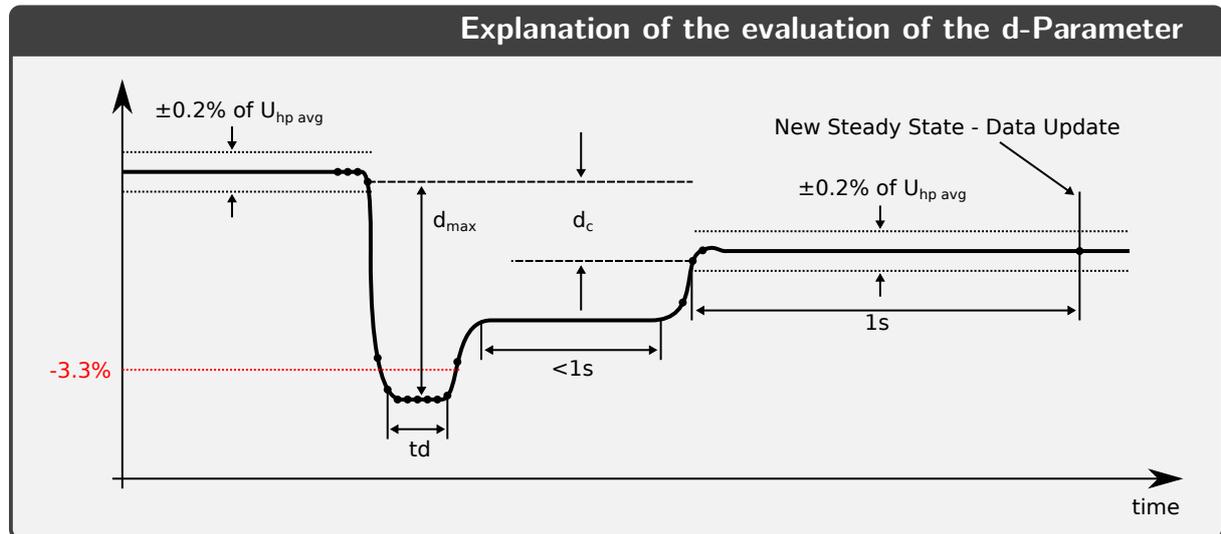


INFORMATION


The half-period rms calculation goes strong with a possible channel offset and could never lead to a steady state. In this case it is recommended to zero the voltage inputs or use a 2nd order high-pass filter with 0.1 Hz to eliminate every DC component.

INFORMATION

The **Auto-Detection Mode** is useful for the most applications. In the following graph you can see, which Mode is applied under different circumstances.

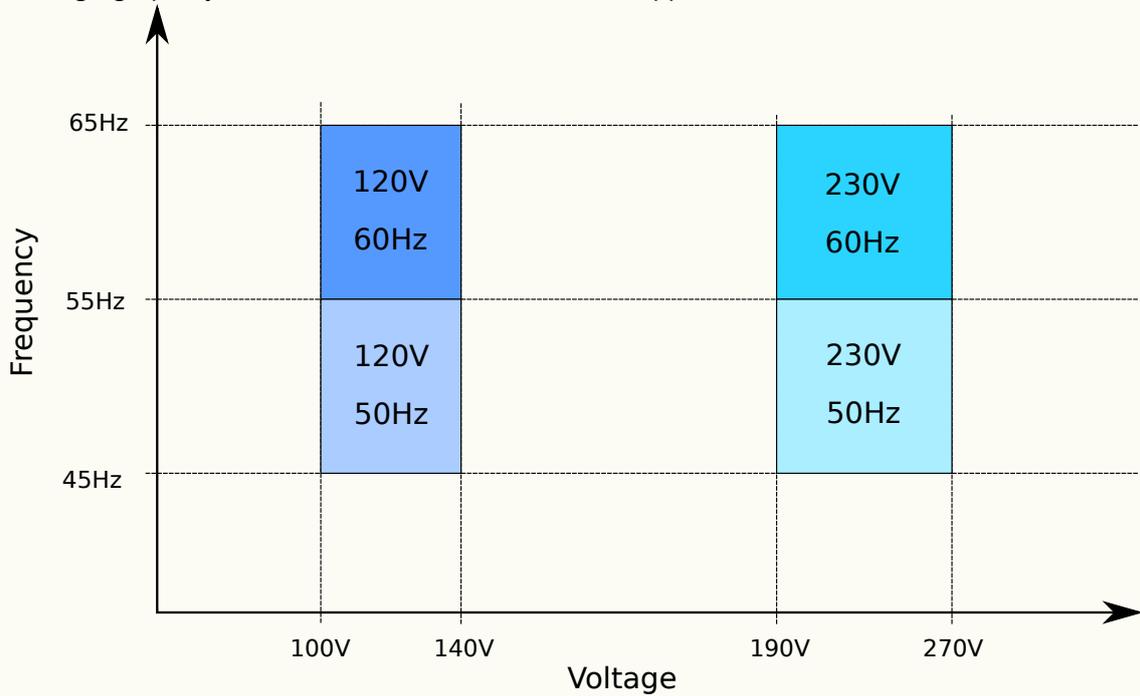

Pst/Plt Aggregation Time: If the Recording is started before ready (1), the aggregation is started when ready. When recording is started while ready (2), the aggregation will be started with the recording start.

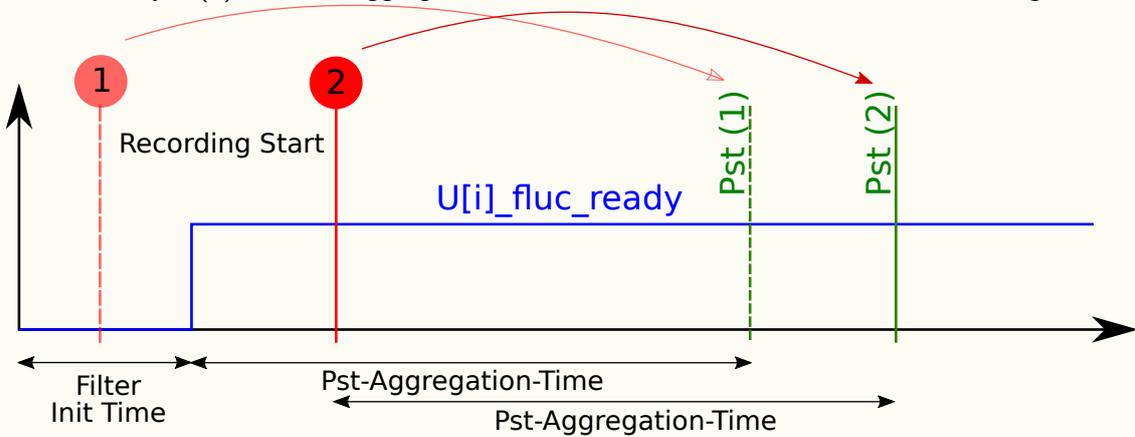

8.5 Channel Reference

Table 8.3: Legend

Symbol	Description
N	Number of Pst-Values in Plt-Aggregation-Time

8.5.1 $U[i]_{fluc_Pst}$

The short-term flicker severity

8.5.2 $U[i]_{fluc_Plt}$

The long-term flicker severity

$$U[i]_{fluc_Plt} = \sqrt[3]{\frac{1}{N} \sum_{k=0}^{N-1} U[i]_{fluc_Pst}[k]^3} \quad \text{Unit : A} \quad (8.8)$$

8.5.3 $U[i]_{fluc_Pinst}$

The instantaneous flicker sensation

8.5.4 $U[i]_{fluc_ready}$

Indicator value for steady state of algorithm filters

8.5.5 $I[i]_{fluc_Pst}[\psi]$

The short-term flicker emission severity according to IEC61400-21. Equal to $P_{st, fic}$. $\psi \in [30^\circ, 50^\circ, 70^\circ, 85^\circ]$

8.5.6 $I[i]_{fluc_Plt}[\psi]$

The long-term flicker emission severity. $\psi \in [30^\circ, 50^\circ, 70^\circ, 85^\circ]$

8.5.7 $I[i]_{fluc_Pinst}[\psi]$

The instantaneous flicker emission sensation. $\psi \in [30^\circ, 50^\circ, 70^\circ, 85^\circ]$

8.5.8 $U[i]_{fluc_dc}$

Steady state voltage change

8.5.9 $U[i]_{fluc_dc_overall}$

Maximum of steady state voltage change. Maximum of $U[i]_{fluc_dc}$. Initialized with 0.

8.5.10 $U[i]_{fluc_dmax}$

Maximum voltage change during a voltage change characteristic

8.5.11 U[i]_fluc_d_max_overall

Maximum voltage change of all voltage change events. Maximum of U[i]_fluc_dmax. Initialized with 0.

8.5.12 U[i]_fluc_td

Duration of voltage change below detection level (default: 3.3%).

8.5.13 U[i]_fluc_td_max_overall

Maximum duration of all voltage change events below detection level (default: 3.3%). Initialized with 0.

8.5.14 U[i]_fluc_fic_[ψ]-hp_RMS

The Phase's i half period RMS value of the fictitious grid, used for Stage 1 in the IEC-Flickermeter. Can be used to calculate the Voltage change factor k_u .

$\psi \in [30^\circ, 50^\circ, 70^\circ, 85^\circ]$


9 Rolling Computation (OPT-POWER-EXP)

Contents

9.1 Channel Reference (Basic)	92
9.1.1 U[i]_tRMS_rc	92
9.1.2 U[ij]_tRMS_rc	92
9.1.3 I[i]_tRMS_rc	93
9.1.4 P_t_rc	93
9.1.5 P[i]_t_rc	93
9.1.6 P_fund_rc	93
9.1.7 P[i]_fund_rc	93
9.1.8 Q_t_rc	93
9.1.9 Q[i]_t_rc	93
9.1.10 Q_fund_rc	94
9.1.11 Q[i]_fund_rc	94
9.1.12 S_t_rc	94
9.1.13 S[i]_t_rc	94
9.1.14 S_fund_rc	94
9.1.15 S[i]_fund_rc	94
9.1.16 U_DC_rc	94
9.1.17 I_DC_rc	94
9.1.18 P_DC_rc	95
9.2 Channel Reference (Symmetrical Components)	95
9.2.1 U[i]_fund_cos_rc	95
9.2.2 U[i]_fund_sin_rc	95
9.2.3 U_fundCOS_SYM+_rc	95
9.2.4 U_fundSIN_SYM+_rc	95
9.2.5 U_fundPHI_SYM+_rc	95
9.2.6 U_fundCOS_SYM-_rc	96
9.2.7 U_fundSIN_SYM-_rc	96
9.2.8 U_fundPHI_SYM-_rc	96
9.2.9 U_fundCOS_SYM0_rc	96
9.2.10 U_fundSIN_SYM0_rc	96
9.2.11 U_fund_SYM+_rc	96
9.2.12 U_fund_SYM-_rc	96
9.2.13 U_fund_SYM0_rc	97
9.2.14 I[i]_fund_cos_rc	97
9.2.15 I[i]_fund_sin_rc	97
9.2.16 I_fundCOS_SYM+_rc	97

9.2.17	I_fundSIN_SYM+_rc	97
9.2.18	I_fundCOS_SYM-_rc	97
9.2.19	I_fundSIN_SYM-_rc	97
9.2.20	I_fundCOS_SYM0_rc	98
9.2.21	I_fundSIN_SYM0_rc	98
9.2.22	P_fund_SYM+_rc	98
9.2.23	P_fund_SYM-_rc	98
9.2.24	P_fund_SYM0_rc	98
9.2.25	Q_fund_SYM+_rc	98
9.2.26	Q_fund_SYM-_rc	98
9.2.27	Q_fund_SYM0_rc	98
9.2.28	S_fund_SYM+_rc	99
9.2.29	S_fund_SYM-_rc	99
9.2.30	S_fund_SYM0_rc	99
9.2.31	I_fund_P_SYM+_rc	99
9.2.32	I_fund_P_SYM-_rc	99
9.2.33	I_fund_P_SYM0_rc	99
9.2.34	I_fund_Q_SYM+_rc	99
9.2.35	I_fund_Q_SYM-_rc	99
9.2.36	I_fund_Q_SYM0_rc	99
9.2.37	PF_fund_SYM+_rc	100
9.2.38	PF_fund_SYM-_rc	100
9.2.39	PF_fund_SYM0_rc	100

This chapter describes the Rolling Computation feature. It is designed for analysing fast changes in power grid connected applications e.g. renewable energy testing. In advance to the "normal" calculation, which is performed each single fundamental period, the computation in default setting is done every 1ms over the period of one fundamental cycle.

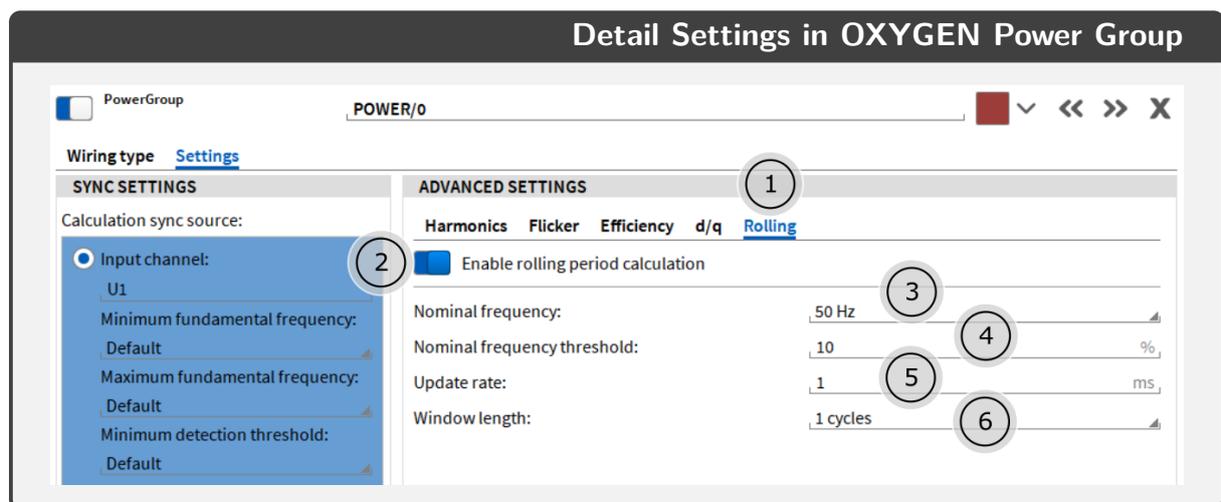


- ① Details Tab for Settings of the rolling computation
- ② Enable/Disable Rolling Calculation

-
- ③ Selector for nominal frequency fallback (50 Hz / 60 Hz)
 - ④ Input field for frequency threshold.
If a frequency is detected within the nominal frequency \pm threshold %, the rolling window size is the actual period duration. Otherwise, e.g. in the case of a voltage interruption, where no frequency can be measured, the window size is the inverse nominal frequency (0 - 95 %)
 - ⑤ Update rate (0.1 - 20 ms)
 - ⑥ Window length (0.5 cycles / 1 cycles)

INFORMATION

The following graph shows the details of the operation principle. It is similar to a moving average calculation, but with a variable window size, which depends on the actual measured fundamental frequency. If the calculate window size exceeds the maximum allowed size, which is given by $(1/\text{Nominal Frequency}) * (1 + \text{Frequency Threshold}/100)$, the window size is set to $1/\text{Nominal Frequency}$.

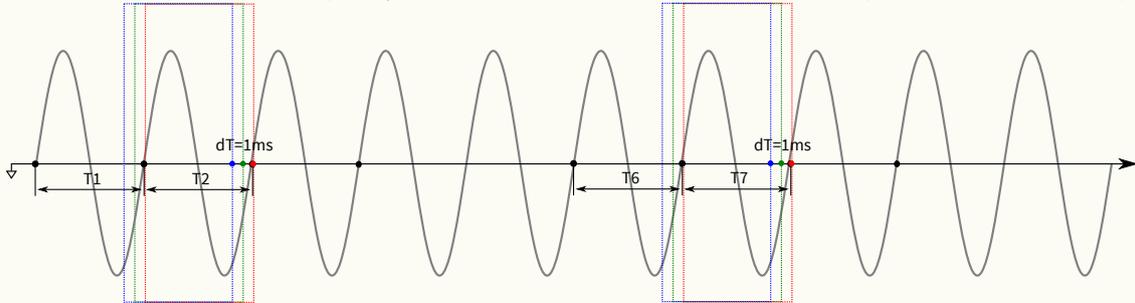**9.1 Channel Reference (Basic)**

Some of the shown intermediate results or variables are not available in the software today. They are marked with a *.

Table 9.1: Legend

Symbol	Equation	Description
SR	-	Samplerate
NP	-	Number of Power Phases
N	$\frac{SR}{f_{fund}}$	Number of Samples

9.1.1 $U[i]_{tRMS_rc}$

This is the Power Phase number i True RMS Voltage, updated every 1ms.

$$U[i]_{tRMS_rc} = \sqrt{\frac{1}{N} \sum_{n=0}^N u_i[n]^2} \quad \text{Unit : V} \quad (9.1)$$

9.1.2 $U[ij]_{tRMS_rc}$

This is the Line-Line ij True RMS Voltage, updated every 1ms. This channel is only available in 3-Phase Power Configurations.

$$U[ij]_{tRMS_rc} = \sqrt{\frac{1}{N} \sum_{n=0}^N (u_i[n] - u_j[n])^2} \quad \text{Unit : V} \quad (9.2)$$

9.1.3 I[i]_tRMS_rc

This is the Power Phase number i True RMS Current, updated every 1ms.

$$I[i]_{tRMS_rc} = \sqrt{\frac{1}{N} \sum_{n=0}^N i_i[n]^2} \quad \text{Unit : A} \quad (9.3)$$

9.1.4 P_t_rc

This is the Power Group Overall active Power, updated every 1ms.

$$P_{t_rc} = \sum_{i=1}^{NP} P[i]_t \quad \text{Unit : W} \quad (9.4)$$

9.1.5 P[i]_t_rc

This is the Power Phase number i active Power, updated every 1ms.

$$P[i]_{t_rc} = \frac{1}{N} \sum_{n=0}^N u_i[n] \cdot i_i[n] \quad \text{Unit : W} \quad (9.5)$$

9.1.6 P_fund_rc

This is the Power Group Overall fundamental active Power, updated every 1ms.

$$P_{fund_rc} = \sum_{i=1}^{NP} P[i]_{fund_rc} \quad \text{Unit : W} \quad (9.6)$$

9.1.7 P[i]_fund_rc

This is the Power Phase number i fundamental active Power, updated every 1ms.

$$P[i]_{fund_rc} = U[i]_{fundRMS_rc} \cdot I[i]_{fundRMS_rc} \cdot \cos(P[i]_{fundPHI_rc}) \quad \text{Unit : W} \quad (9.7)$$

$U[i]_{fundRMS_rc}$, $P[i]_{fundPHI_rc}$ are internal channels, not available for users.

9.1.8 Q_t_rc

This is the Power Group Overall reactive Power, updated every 1ms.

$$Q_{t_rc} = s \cdot \sqrt{S_{t_rc}^2 - P_{t_rc}^2} \quad s = \begin{cases} 1 & \text{if } Q_{fund_rc} > 0 \\ -1 & \text{if } Q_{fund_rc} \leq 0 \end{cases} \quad \text{Unit : var} \quad (9.8)$$

9.1.9 Q[i]_t_rc

This is the Power Phase number i reactive Power, updated every 1ms.

$$Q[i]_{t_rc} = s \cdot \sqrt{S[i]_{t_rc}^2 - P[i]_{t_rc}^2} \quad s = \begin{cases} 1 & \text{if } Q_{fund_rc} > 0 \\ -1 & \text{if } Q_{fund_rc} \leq 0 \end{cases} \quad \text{Unit : var} \quad (9.9)$$

9.1.10 Q_fund_rc

This is the Power Group Overall fundamental reactive Power, updated every 1ms.

$$Q_{fund_rc} = \sum_{i=1}^{NP} Q[i]_{fund_rc} \quad \text{Unit : var} \quad (9.10)$$

9.1.11 Q[i]_fund_rc

This is the Power Phase number i fundamental reactive Power, updated every 1ms.

$$Q[i]_{fund_rc} = U[i]_{fundRMS_rc} \cdot I[i]_{fundRMS_rc} \cdot \sin(P[i]_{fundPHI_rc}) \quad \text{Unit : var} \quad (9.11)$$

9.1.12 S_t_rc

This is the Power Group Overall apparent Power, updated every 1ms.

$$S_{t_rc} = \sum_{i=1}^{NP} S[i]_{t_rc} \quad \text{Unit : VA} \quad (9.12)$$

9.1.13 S[i]_t_rc

This is the Power Phase number i apparent Power, updated every 1ms.

$$S[i]_{t_rc} = U[i]_{tRMS_rc} \cdot I[i]_{tRMS_rc} \quad \text{Unit : VA} \quad (9.13)$$

9.1.14 S_fund_rc

This is the Power Group Overall fundamental apparent Power, updated every 1ms.

$$S_{fund_rc} = \sum_{i=1}^{NP} S[i]_{fund_rc} \quad \text{Unit : VA} \quad (9.14)$$

9.1.15 S[i]_fund_rc

This is the Power Phase number i fundamental apparent Power, updated every 1ms.

$$S[i]_{fund_rc} = U[i]_{fundRMS_rc} \cdot I[i]_{fundRMS_rc} \quad \text{Unit : VA} \quad (9.15)$$

9.1.16 U_DC_rc

This is the DC Voltage in case the DC Power Analysis is enabled in the Efficiency tab, updated every 1ms.

$$U_{DC_rc} = \frac{1}{N} \sum_{n=0}^N u_{DC}[n] \quad \text{Unit : V} \quad (9.16)$$

9.1.17 I_DC_rc

This is the DC Current in case the DC Power Analysis is enabled in the Efficiency tab, updated every 1ms.

$$I_{DC_rc} = \frac{1}{N} \sum_{n=0}^N i_{DC}[n] \quad \text{Unit : A} \quad (9.17)$$

9.1.18 P_DC_rc

This is the DC Power in case the DC Power Analysis is enabled in the Efficiency tab, updated every 1ms.

$$P_{DC_rc} = \frac{1}{N} \sum_{n=0}^N u_{DC}[n] \cdot i_{DC}[n] \quad \text{Unit : W} \quad (9.18)$$

9.2 Channel Reference (Symmetrical Components)

This section describes the equations for symmetrical components according to FGW-TG3 Annex F and IEC 61400-21 Annex C.

9.2.1 U[i]_fund_cos_rc

This is the Real part of the fourier coefficients of the signal. (F-1 in FGW-TG3 Annex F)

$$U[i]_{fund_cos_rc} = \frac{2}{N} \sum_{n=-N-1}^0 u_i[n] \cdot \cos(2 \cdot \pi \cdot F_{fund} \cdot \frac{n}{SR}) \quad \text{Unit : V} \quad (9.19)$$

9.2.2 U[i]_fund_sin_rc

This is the Imaginary part of the fourier coefficients of the signal. (F-2 in FGW-TG3 Annex F)

$$U[i]_{fund_sin_rc} = \frac{2}{N} \sum_{n=-N-1}^0 u_i[n] \cdot \sin(2 \cdot \pi \cdot F_{fund} \cdot \frac{n}{SR}) \quad \text{Unit : V} \quad (9.20)$$

9.2.3 U_fundCOS_SYM+_rc

This is the real vector component of the Positive Voltage Sequence.

$$U_{fundCOS_SYM+_rc} = \frac{1}{6} \left(2 \cdot U1_{fund_cos_rc} - U2_{fund_cos_rc} - U3_{fund_cos_rc} - \sqrt{3} (U3_{fund_sin_rc} - U2_{fund_sin_rc}) \right) \quad (9.21)$$

9.2.4 U_fundSIN_SYM+_rc

This is the imaginary vector component of the Positive Voltage Sequence.

$$U_{fundSIN_SYM+_rc} = \frac{1}{6} \left(2 \cdot U1_{fund_sin_rc} - U2_{fund_sin_rc} - U3_{fund_sin_rc} - \sqrt{3} (U2_{fund_cos_rc} - U3_{fund_cos_rc}) \right) \quad \text{Unit : V} \quad (9.22)$$

9.2.5 U_fundPHI_SYM+_rc

This is the phase angle of the Positive Voltage Sequence.

$$U_{fundPHI_SYM+_rc} = \arctan2(U_{fundSIN_SYM+_rc}, U_{fundCOS_SYM+_rc}) \quad \text{Unit : deg}(\circ) \quad (9.23)$$

9.2.6 U_fundCOS_SYM-_rc

This is the real vector component of the Negative Voltage Sequence.

$$U_{fund_SYM_cos_rc} = \frac{1}{6} \left(2 \cdot U_{1fund_cos_rc} - U_{2fund_cos_rc} - U_{3fund_cos_rc} - \sqrt{3} (U_{2fund_sin_rc} - U_{3fund_sin_rc}) \right) \quad \text{Unit : V} \quad (9.24)$$

9.2.7 U_fundSIN_SYM-_rc

This is the imaginary vector component of the Negative Voltage Sequence.

$$U_{fund_SYM_sin_rc} = \frac{1}{6} \left(2 \cdot U_{1fund_sin_rc} - U_{2fund_sin_rc} - U_{3fund_sin_rc} - \sqrt{3} (U_{3fund_cos_rc} - U_{2fund_cos_rc}) \right) \quad \text{Unit : V} \quad (9.25)$$

9.2.8 U_fundPHI_SYM-_rc

This is the phase angle of the Negative Voltage Sequence.

$$U_{fundPHI_SYM_rc} = \arctan2(U_{fundSIN_SYM_rc}, U_{fundCOS_SYM_rc}) \quad \text{Unit : deg}(\circ) \quad (9.26)$$

9.2.9 U_fundCOS_SYM0_rc

This is the real vector component of the Zero Voltage Sequence.

$$U_{fundCOS_SYM0_rc} = \frac{1}{3 \cdot \sqrt{3}} (U_{1fund_cos_rc} + U_{2fund_cos_rc} + U_{3fund_cos_rc}) \quad \text{Unit : V} \quad (9.27)$$

9.2.10 U_fundSIN_SYM0_rc

This is the real vector component of the Zero Voltage Sequence.

$$U_{fundSIN_SYM0_rc} = \frac{-1}{3 \cdot \sqrt{3}} (U_{1fund_sin_rc} + U_{2fund_sin_rc} + U_{3fund_sin_rc}) \quad \text{Unit : V} \quad (9.28)$$

9.2.11 U_fund_SYM+_rc

This is the RMS value of the Phase-Phase (Line-Line) voltages positive sequence system.

$$U_{fund_SYM+_rc} = \sqrt{\frac{3}{2} (U_{fundCOS_SYM+_rc}^2 + U_{fundSIN_SYM+_rc}^2)} \quad \text{Unit : V} \quad (9.29)$$

9.2.12 U_fund_SYM-_rc

This is the RMS value of the Phase-Phase (Line-Line) voltages negative sequence system.

$$U_{fund_SYM-_rc} = \sqrt{\frac{3}{2} (U_{fundCOS_SYM-_rc}^2 + U_{fundSIN_SYM-_rc}^2)} \quad \text{Unit : V} \quad (9.30)$$

9.2.13 U_fund_SYM0_rc

This is the RMS value of the Phase-Phase (Line-Line) voltages zero sequence system.

$$U_{fund_SYM0_rc} = \sqrt{3 \cdot \left(U_{fundCOS_SYM0_rc}^2 + U_{fundSIN_SYM0_rc}^2 \right)} \quad \text{Unit : V} \quad (9.31)$$

9.2.14 I[i]_fund_cos_rc

This is the Real part of the fourier coefficients of the signal. (F-1 in FGW-TG3 Annex F)

$$I[i]_{fund_cos_rc} = \frac{2}{N} \sum_{n=-N-1}^0 I_i[n] \cdot \cos\left(2 \cdot \pi \cdot F_{fund} \cdot \frac{n}{SR}\right) \quad \text{Unit : A} \quad (9.32)$$

9.2.15 I[i]_fund_sin_rc

This is the Imaginary part of the fourier coefficients of the signal. (F-2 in FGW-TG3 Annex F)

$$I[i]_{fund_sin_rc} = \frac{2}{N} \sum_{n=-N-1}^0 I_i[n] \cdot \sin\left(2 \cdot \pi \cdot F_{fund} \cdot \frac{n}{SR}\right) \quad \text{Unit : A} \quad (9.33)$$

9.2.16 I_fundCOS_SYM+_rc

This is the real vector component of the Positive Current Sequence.

$$I_{fundCOS_SYM+_rc} = \frac{1}{6} \left(2 \cdot I1_{fund_cos_rc} - I2_{fund_cos_rc} - I3_{fund_cos_rc} - \sqrt{3} (I3_{fund_sin_rc} - I2_{fund_sin_rc}) \right) \quad (9.34)$$

9.2.17 I_fundSIN_SYM+_rc

This is the imaginary vector component of the Positive Current Sequence.

$$I_{fundSIN_SYM+_rc} = \frac{1}{6} \left(2 \cdot I1_{fund_sin_rc} - I2_{fund_sin_rc} - I3_{fund_sin_rc} - \sqrt{3} (I2_{fund_cos_rc} - I3_{fund_cos_rc}) \right) \quad \text{Unit : A} \quad (9.35)$$

9.2.18 I_fundCOS_SYM-_rc

This is the real vector component of the Negative Current Sequence.

$$I_{fundCOS_SYM-_rc} = \frac{1}{6} \left(2 \cdot I1_{fund_cos_rc} - I2_{fund_cos_rc} - I3_{fund_cos_rc} - \sqrt{3} (I2_{fund_sin_rc} - I3_{fund_sin_rc}) \right) \quad \text{Unit : A} \quad (9.36)$$

9.2.19 I_fundSIN_SYM-_rc

This is the imaginary vector component of the Negative Current Sequence.

$$I_{fundSIN_SYM-_rc} = \frac{1}{6} \left(2 \cdot I1_{fund_sin_rc} - I2_{fund_sin_rc} - I3_{fund_sin_rc} - \sqrt{3} (I3_{fund_cos_rc} - I2_{fund_cos_rc}) \right) \quad \text{Unit : A} \quad (9.37)$$

9.2.20 I_fundCOS_SYM0_rc

This is the real vector component of the Zero Current Sequence.

$$I_{fundCOS_SYM0_rc} = \frac{1}{3 \cdot \sqrt{3}} (I1_{fund_cos_rc} + I2_{fund_cos_rc} + I3_{fund_cos_rc}) \quad \text{Unit : A} \quad (9.38)$$

9.2.21 I_fundSIN_SYM0_rc

This is the real vector component of the Zero Current Sequence.

$$I_{fundSIN_SYM0_rc} = \frac{-1}{3 \cdot \sqrt{3}} (I1_{fund_sin_rc} + I2_{fund_sin_rc} + I3_{fund_sin_rc}) \quad \text{Unit : A} \quad (9.39)$$

9.2.22 P_fund_SYM+_rc

$$P_{fund_SYM+_rc} = \frac{3}{2} \cdot (U_{fundCOS_SYM+_rc} \cdot I_{fundCOS_SYM+_rc} + U_{fundSIN_SYM+_rc} \cdot I_{fundSIN_SYM+_rc}) \quad \text{Unit : W} \quad (9.40)$$

9.2.23 P_fund_SYM-_rc

$$P_{fund_SYM-_rc} = \frac{3}{2} \cdot (U_{fundCOS_SYM-_rc} \cdot I_{fundCOS_SYM-_rc} + U_{fundSIN_SYM-_rc} \cdot I_{fundSIN_SYM-_rc}) \quad \text{Unit : W} \quad (9.41)$$

9.2.24 P_fund_SYM0_rc

$$P_{fund_SYM0_rc} = 3 \cdot (U_{fundCOS_SYM0_rc} \cdot I_{fundCOS_SYM0_rc} + U_{fundSIN_SYM0_rc} \cdot I_{fundSIN_SYM0_rc}) \quad \text{Unit : W} \quad (9.42)$$

9.2.25 Q_fund_SYM+_rc

$$Q_{fund_SYM+_rc} = \frac{3}{2} \cdot (U_{fundCOS_SYM+_rc} \cdot I_{fundSIN_SYM+_rc} - U_{fundSIN_SYM+_rc} \cdot I_{fundCOS_SYM+_rc}) \quad \text{Unit : var} \quad (9.43)$$

9.2.26 Q_fund_SYM-_rc

$$Q_{fund_SYM-_rc} = \frac{3}{2} \cdot (U_{fundCOS_SYM-_rc} \cdot I_{fundSIN_SYM-_rc} - U_{fundSIN_SYM-_rc} \cdot I_{fundCOS_SYM-_rc}) \quad \text{Unit : var} \quad (9.44)$$

9.2.27 Q_fund_SYM0_rc

$$Q_{fund_SYM0_rc} = 3 \cdot (U_{fundSIN_SYM0_rc} \cdot I_{fundCOS_SYM0_rc} - U_{fundCOS_SYM0_rc} \cdot I_{fundSIN_SYM0_rc}) \quad \text{Unit : var} \quad (9.45)$$

9.2.28 S_fund_SYM+_rc

$$S_{fund_SYM+_rc} = \sqrt{P_{fund_SYM+_rc}^2 + Q_{fund_SYM+_rc}^2} \quad \text{Unit : VA} \quad (9.46)$$

9.2.29 S_fund_SYM-_rc

$$S_{fund_SYM-_rc} = \sqrt{P_{fund_SYM-_rc}^2 + Q_{fund_SYM-_rc}^2} \quad \text{Unit : VA} \quad (9.47)$$

9.2.30 S_fund_SYM0_rc

$$S_{fund_SYM0_rc} = \sqrt{P_{fund_SYM0_rc}^2 + Q_{fund_SYM0_rc}^2} \quad \text{Unit : VA} \quad (9.48)$$

9.2.31 I_fund_P_SYM+_rc

$$I_{fund_P_SYM+_rc} = \frac{P_{fund_SYM+_rc}}{\sqrt{3} \cdot U_{fund_SYM+_rc}} \quad \text{Unit : A} \quad (9.49)$$

9.2.32 I_fund_P_SYM-_rc

$$I_{fund_P_SYM-_rc} = \frac{P_{fund_SYM-_rc}}{\sqrt{3} \cdot U_{fund_SYM-_rc}} \quad \text{Unit : A} \quad (9.50)$$

9.2.33 I_fund_P_SYM0_rc

$$I_{fund_P_SYM0_rc} = \frac{P_{fund_SYM0_rc}}{\sqrt{3} \cdot U_{fund_SYM0_rc}} \quad \text{Unit : A} \quad (9.51)$$

9.2.34 I_fund_Q_SYM+_rc

$$I_{fund_Q_SYM+_rc} = \frac{Q_{fund_SYM+_rc}}{\sqrt{3} \cdot U_{fund_SYM+_rc}} \quad \text{Unit : A} \quad (9.52)$$

9.2.35 I_fund_Q_SYM-_rc

$$I_{fund_Q_SYM-_rc} = \frac{Q_{fund_SYM-_rc}}{\sqrt{3} \cdot U_{fund_SYM-_rc}} \quad \text{Unit : A} \quad (9.53)$$

9.2.36 I_fund_Q_SYM0_rc

$$I_{fund_Q_SYM0_rc} = \frac{Q_{fund_SYM0_rc}}{\sqrt{3} \cdot U_{fund_SYM0_rc}} \quad \text{Unit : A} \quad (9.54)$$

9.2.37 PF_fund_SYM+_rc

$$PF_{fund_SYM+_rc} = \frac{P_{fund_SYM+_rc}}{\sqrt{P_{fund_SYM+_rc}^2 + Q_{fund_SYM+_rc}^2}} \quad \text{Unit : -} \quad (9.55)$$

9.2.38 PF_fund_SYM-_rc

$$PF_{fund_SYM-_rc} = \frac{P_{fund_SYM-_rc}}{\sqrt{P_{fund_SYM-_rc}^2 + Q_{fund_SYM-_rc}^2}} \quad \text{Unit : -} \quad (9.56)$$

9.2.39 PF_fund_SYMO_rc


$$PF_{fund_SYMO_rc} = \frac{P_{fund_SYMO_rc}}{\sqrt{P_{fund_SYMO_rc}^2 + Q_{fund_SYMO_rc}^2}} \quad \text{Unit : -} \quad (9.57)$$

10 Efficiency (OPT-POWER-ADV)

Contents

10.1 Channel Reference	102
10.1.1 P_mech	102
10.1.2 n_mech	102
10.1.3 M_mech	103
10.1.4 Eff_DC_AC	103
10.1.5 Eff_mech	103
10.1.6 Eff_sys	103

This chapter describes the Efficiency Computation feature. It is designed for analyzing DC power and mechanical power. The DC power analysis is done via voltage and current, while mechanical power is measured with speed and torque sensors, in the same calculation period. It calculates power, average speed, average torque and efficiency regarding the electrical power. In case of electrical excitation of the machine, excitation voltage and excitation current can be entered here and taken into account for the efficiency calculation.

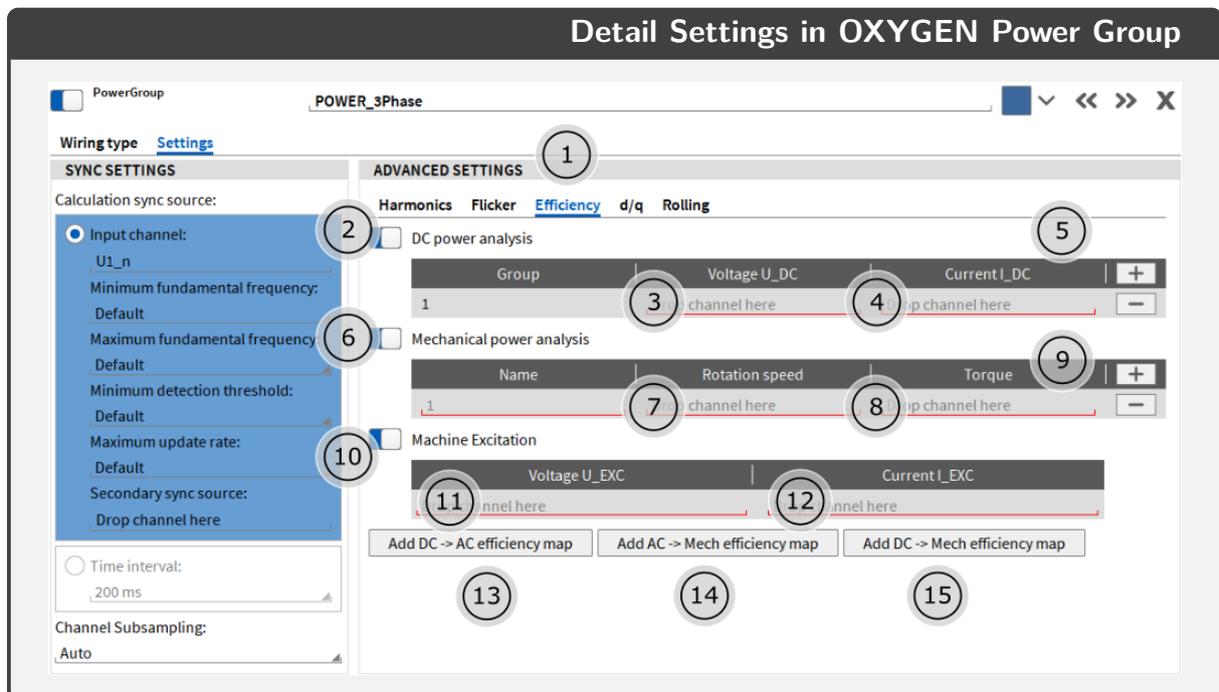

- ① Details Tab for Settings of Efficiency calculation.
- ② Enable/Disable DC power analysis.
- ③ Input field for DC voltage channel (unit must be V).

- ④ Input field for DC current channel (unit must be A).
- ⑤ Button to add DC power analysis group. Voltage & Current Pair (up to 6)
- ⑥ Enable/Disable Mechanical power analysis.
- ⑦ Input field for rotation speed channel (unit must be rpm or U/min).
- ⑧ Input field for torque channel (unit must be Nm).
- ⑨ Button to add Mechanical power analysis group. (up to 6)
- ⑩ Enable/Disable Machine Excitation.
- ⑪ Input field for Machine Excitation voltage channel (unit must be V).
- ⑫ Input field for Machine Excitation current channel (unit must be A).
- ⑬ Button for creation of a DC power to AC power efficiency map module (Matrix Sampler).
- ⑭ Button for creation of an AC to Mechanical power efficiency map module (Matrix Sampler).
- ⑮ Button for creation of a DC to Mechanical power efficiency map module (Matrix Sampler).

10.1 Channel Reference

Table 10.1: Legend

Symbol	Equation	Description
SR	-	Samplerate (may differ from electrical input channels)
N	$\frac{SR}{f_{fund}}$	Number of Samples in calculation cycle

10.1.1 P_mech

This is the mechanical power, updated every calculation cycle given by calculation sync source (same as electrical power).

$$P_{mech} = \frac{1}{N} \sum_{n=0}^N speed[n] \cdot torque[n] \cdot \frac{2 \cdot \pi}{60} \quad \text{Unit : W} \quad (10.1)$$

10.1.2 n_mech

This is the rotational speed average, updated every calculation cycle given by calculation sync source (same as electrical power).

$$n_{mech} = \frac{1}{N} \sum_{n=0}^N speed[n] \quad \text{Unit : rpm} \quad (10.2)$$

10.1.3 M_mech

This is the mechanical torque average, updated every calculation cycle given by calculation sync source (same as electrical power).

$$M_{mech} = \frac{1}{N} \sum_{n=0}^N torque[n] \quad \text{Unit : Nm} \quad (10.3)$$

10.1.4 Eff_DC_AC

This is the efficiency of the inverter, related by the DC power input to the AC power output, updated every calculation cycle given by calculation sync source (same as electrical power).

$$Eff_{DC_AC} = \begin{cases} \frac{P_{t_AC}}{P_{DC}} \cdot 100 & \text{if } P_{t_AC} > 0 \\ \frac{P_{DC}}{P_{t_AC}} \cdot 100 & \text{if } P_{t_AC} < 0 \text{ and } P_{DC} < 0 \end{cases} \quad \text{Unit : \%} \quad (10.4)$$

With P_{t_AC} being total AC active Power.

10.1.5 Eff_mech

This is the efficiency of the Motor, related to electrical power input, updated every calculation cycle given by calculation sync source (same as electrical power).

$$Eff_{mech} = \begin{cases} \frac{P_{mech}}{P_{t_AC} + P_{exc}} \cdot 100 & \text{if } P_{t_AC} > 0 \\ \frac{|P_{t_AC}|}{|P_{mech}| + P_{exc}} \cdot 100 & \text{if } P_{t_AC} < 0 \text{ and } P_{mech} < 0 \end{cases} \quad \text{Unit : \%} \quad (10.5)$$

With P_{t_AC} being total AC active Power. In case the Machine Excitation is not used P_{exc} is zero.

10.1.6 Eff_sys

This is the efficiency of the system, related by electrical DC power input to mechanical power output, updated every calculation cycle given by calculation sync source (same as electrical power).

$$Eff_{sys} = \begin{cases} \frac{P_{mech}}{P_{DC} + P_{exc}} \cdot 100 & \text{if } P_{DC} > 0 \\ \frac{|P_{DC}|}{|P_{mech}| + P_{exc}} \cdot 100 & \text{if } P_{DC} < 0 \text{ and } P_{mech} < 0 \end{cases} \quad \text{Unit : \%} \quad (10.6)$$

In case the Machine Excitation is not used P_{exc} is zero.

INFORMATION

In case of more groups for P_{mech} or P_{DC} (see (5) and (7)) P_{mech} or P_{DC} refers to the sum of power of these groups respectively.

11 d/q Analysis (OPT-POWER-ADV)

Contents


11.1 Quick Start	108
11.2 Angle Measurement	108
11.3 Channel Reference	109
11.3.1 U_d	109
11.3.2 U_q	109
11.3.3 I_d	109
11.3.4 I_q	109

This chapter describes the d/q analysis feature. The d/q analysis can be performed with a mechanical angle signal and sensorless without the need of an angle signal. The sensorless calculation requires specification of stator resistance and stator inductance. The d/q analysis is designed for use with 3-phase synchronous machines.

The d/q transformation is also known as Park-Clarke transformation, often used in field oriented control to get steady state feedback of the machines current and flux. To perform the analysis with mechanical angle, any kind of angle signal (rotor position) must be provided.

Measured Angle


Following settings are for the d/q analysis with mechanical angle input.

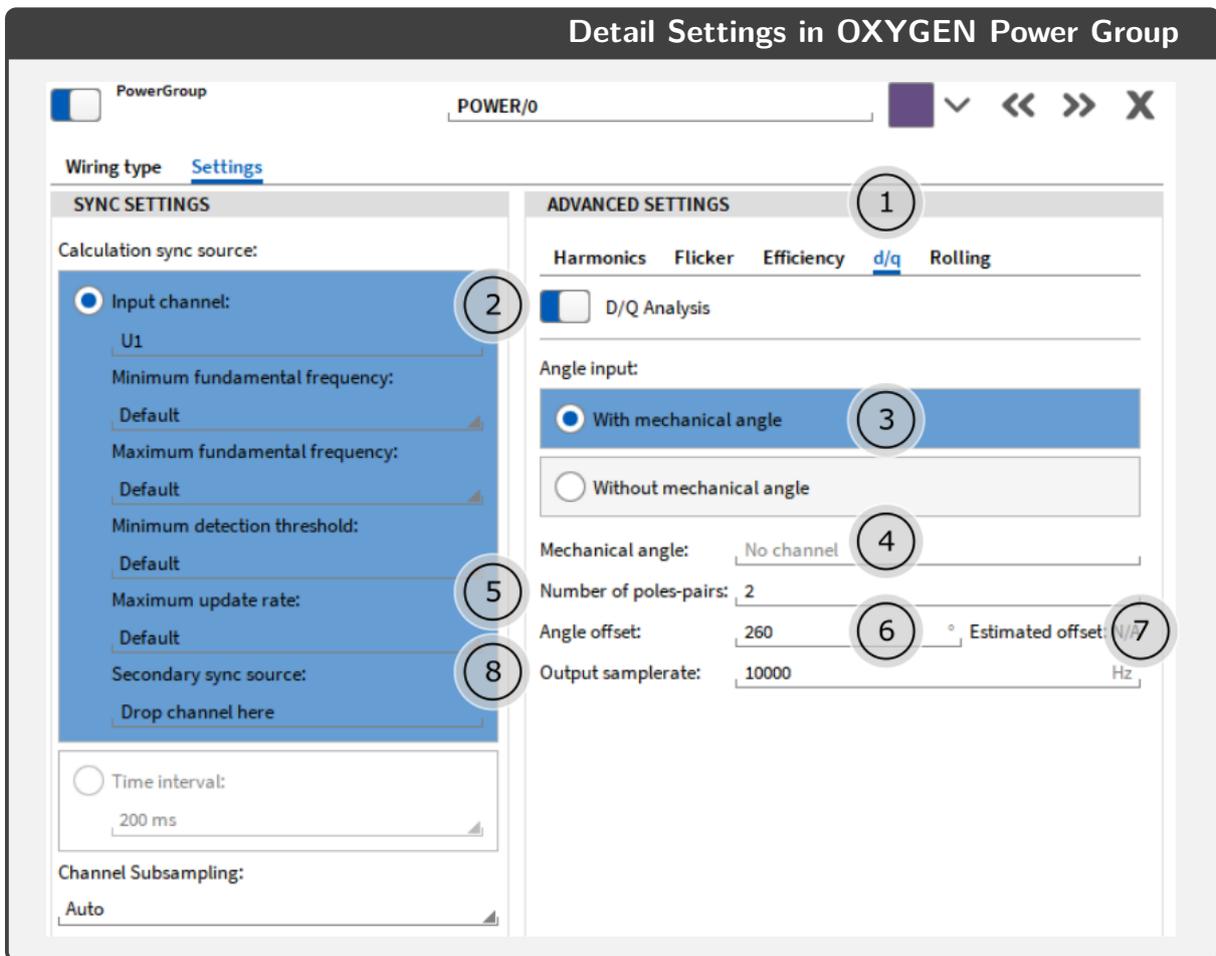

- ① Details Tab for Settings of the d/q analysis
- ② Enable/Disable d/q calculation
- ③ Angle input selection, calculation with mechanical angle is selected
- ④ Input field for mechanical angle channel (drag-n-drop), must provide an angle signal between 0-360 deg.
- ⑤ Input field for number of pole-pairs
- ⑥ Input field for offset of the mechanical angle to the electrical (deg)
- ⑦ Button to detect the actual angle offset (use only without load)
- ⑧ Channel Output Sample rate (100 Hz is default).

Estimated Angle

Following settings are for the d/q analysis without mechanical angle input.

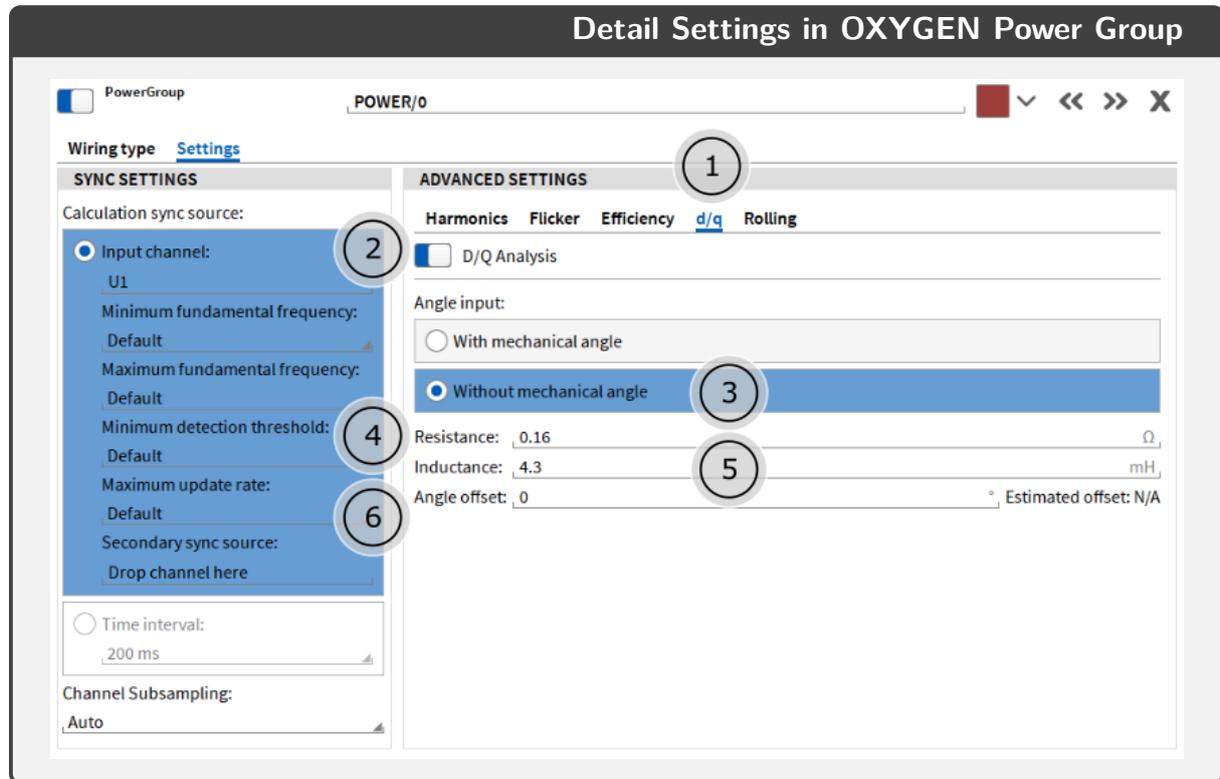

- ① Details Tab for Settings of the d/q analysis
- ② Enable/Disable d/q calculation
- ③ Angle input selection, calculation without mechanical angle is selected
- ④ Input field for stator resistance (Ohm)
- ⑤ Input field for stator inductance (mH)
- ⑥ Input field for offset of the electrical angle to exact d-axis alignment (deg).
This is just a debug channel and can be kept at zero.

The sensorless d/q computes the rotor position by calculating the electromotoric force (EMF) of the synchronous machine under use of stator resistance and inductance. This calculation assumes electric and magnetic symmetry and uniformity in all orientations. Since EMF is bound to the change of the magnetic field and thus the speed of the machine, the accuracy of the sensorless calculation suffers at low speeds. Acceptable results are achieved for speeds above 5% of nominal speed ($n > 5\% n_n$).

The calculated angle of the sensorless computation can be found in the "dq_angle" channel of the d/q analysis. Unlike the calculation with mechanical angle input the sensorless version does not have a fixed output rate. It calculates 100 samples per electrical period and is therefore inherently asynchronous, just like the power group.

The following quick start guide is intended for the d/q analysis with mechanical angle input.

11.1 Quick Start

The key to get accurate readings from the resulting d/q channels is a good alignment of the Rotor Axis to the angle measurement sensor. To support the user with this task, we implemented a semi-automatic workflow.

1. Prepare the Typical power group settings for power analysis
2. Enable the d/q analysis feature (only possible within 3-phase measurements)
3. Assign the angle channel
4. Edit the number of pole-pairs according to your engine
5. Drive the DUT (device under test) with an auxiliary engine at constant speed (idle)
6. Press the "Detect" Button
7. Check the detected value

If there is no possibility to run the engine with an auxiliary drive, there are two other methods:

- Use the moment of inertia and use the induced voltage during coast down
- Drive your engine without any load at slow speed e.g. 100 rpm to reduce the effects of friction and ventilation

11.2 Angle Measurement

There are different methods available to measure the actual rotor position, these are necessary for the d/q analysis with mechanical angle:

Rotary Encoder

The rotary encoder is typically used in slow to medium speed drives. The signal of this encoders can be processed by the following Hardware inputs and transformed to an angle signal:

- TRION-CNT
- TRION-Base
- TRION-Timing / VGPS
- TRION-1802-dLV

One Pulse per Turn

In the case, where there no option to mount a rotary encoder, a single impulse (Z) can also be used as source for the angle measurement (with the same hardware listed above). The single pulse can be generated by a inductive or laser sensor.

SIN/COS Sensors

If your engine is equipped with an SIN/COS sensor (Magnetic field sensor, XMR-Sensor), use an analog input for these two signals. To calculate the correct angle, please create the following formula in OXYGEN: $mech_angle = mod((atan2('sin', 'cos') + 2 * pi) * 180 / pi, 360)$

11.3 Channel Reference

The channel reference reveals how the d/q analysis output channels are calculated. Note that the variant with mechanical angle input uses raw waveforms channels for voltage and current and the sensorless method uses the fundamental counterparts.

Table 11.1: Legend

Symbol	Equation	Description
θ	$mech_angle \cdot \frac{\pi}{180}$	Actual rotor angle
SR	-	Samplerate of U/I Channels
red_SR	-	Reduced Samplerate for Output
U_{iN}	-	Line-to-Neutral Voltage of Phase i

11.3.1 U_d

d-Axis Voltage, reduced with block-wise average to given output samplerate.

$$U_d^* = \frac{2}{3} \cdot \left(U_{1N} \cdot \cos(\theta) + U_{2N} \cdot \cos\left(\theta - \frac{2\pi}{3}\right) + U_{3N} \cdot \cos\left(\theta + \frac{2\pi}{3}\right) \right) \quad (11.1)$$

$$U_d = \frac{red_SR}{SR} \cdot \sum_{i=0}^{\frac{SR}{red_SR}} U_d^* \quad \text{Unit : V} \quad (11.2)$$

11.3.2 U_q

q-Axis Voltage, reduced with block-wise average to given output samplerate.

$$U_q^* = \frac{2}{3} \cdot \left(-U_{1N} \cdot \sin(\theta) - U_{2N} \cdot \sin\left(\theta - \frac{2\pi}{3}\right) - U_{3N} \cdot \sin\left(\theta + \frac{2\pi}{3}\right) \right) \quad (11.3)$$

$$U_q = \frac{red_SR}{SR} \cdot \sum_{i=0}^{\frac{SR}{red_SR}} U_q^* \quad \text{Unit : V} \quad (11.4)$$

11.3.3 I_d

d-Axis Current, reduced with block-wise average to given output samplerate.

$$I_d^* = \frac{2}{3} \cdot \left(I_1 \cdot \cos(\theta) + I_2 \cdot \cos\left(\theta - \frac{2\pi}{3}\right) + I_3 \cdot \cos\left(\theta + \frac{2\pi}{3}\right) \right) \quad (11.5)$$

$$I_d = \frac{red_SR}{SR} \cdot \sum_{i=0}^{\frac{SR}{red_SR}} I_d^* \quad \text{Unit : A} \quad (11.6)$$

11.3.4 I_q

q-Axis Current, reduced with block-wise average to given output samplerate.

$$I_q^* = \frac{2}{3} \cdot \left(-I_1 \cdot \sin(\theta) - I_2 \cdot \sin\left(\theta - \frac{2\pi}{3}\right) - I_3 \cdot \sin\left(\theta + \frac{2\pi}{3}\right) \right) \quad (11.7)$$

$$I_q = \frac{red_SR}{SR} \cdot \sum_{i=0}^{\frac{SR}{red_SR}} I_q^* \quad \text{Unit : A} \quad (11.8)$$

12 Realtime (OPT-POWER-RT)

OXYGEN offers a low latency (typ. 2ms) realtime calculation option for the POWER Group.

For more information, refer to the to the OXYGEN Power Realtime Technical Reference Manual which is available on the DEWETRON CCC-portal (<https://ccc.dewetron.com>).

