




OXYGEN in 6 *easy* steps

Start OXYGEN and set up your channels


Open OXYGEN on the desktop 

 Open the channel list to full screen (double click or swipe)


Click on the channel name to change it



Open the detailed settings for further options

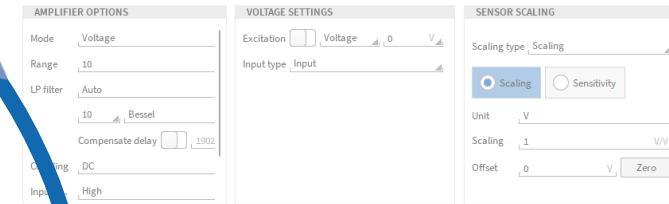


2 Set data file name and folder

 Open the OXYGEN Setup to full screen


Set the data file name and data folder in the tab Storing & Filename

3 Design your measurement screen

Return to the measurement screen by closing the menu again


 Open the instrument menu (single click)


Drag and drop instruments on your measurement screen, arrange them

 Open the channel list (single click) and drag and drop channel(s) on the instruments

Return to the Recording Mode


6

 If desired, save the file if any changes were made

 Close the data file with the eject button

Open the data file and export the data

5



Open the data file 

Open the export menu 

Select the channels to be exported

Select your desired export format


Hit the export button

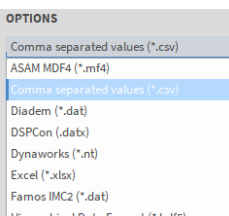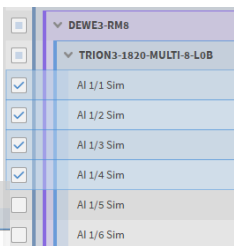

Export...

4 Do a recording

 Hit the record button to start

Hit the stop button to stop 

Menu Tabs

Menu Tabs

Measurement Screen

Action Bar

Post-Processing Mode (PLAY)

