



Automotive  
Energy & Power Analysis  
Field Service  
Environmental  
Research & Development

# DEWE-50-USB2-16-NI

*Technical reference manual*



... the precision signal conditioning company



Copyright © DEWETRON elektronische Messgeraete Ges.m.b.H.

This document contains information which is protected by copyright. All rights are reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

All trademarks and registered trademarks are acknowledged to be the property of their owners.

## Content

<b>General Information, Safety Instructions</b>	<b>5</b>
Warranty Information .....	5
Support .....	5
Printing History.....	5
Safety symbols in the manual .....	6
Safety instructions for all DEWETRON systems .....	7
Environmental Considerations .....	8
<b>Main System</b>	<b>9</b>
DEWE-50-USB2-16-NI .....	9
System specifications .....	9
<b>A/D &amp; D/A Conversion</b>	<b>A1</b>
<b>Internal Wiring</b>	<b>B1</b>
<b>Declaration of conformity</b>	<b>C1</b>

# Technical Reference

---

The information contained in this document is subject to change without notice.

DEWETRON elektronische Messgeraete Ges.m.b.H. (DEWETRON) shall not be liable for any errors contained in this document. DEWETRON MAKES NO WARRANTIES OF ANY KIND WITH REGARD TO THIS DOCUMENT, WHETHER EXPRESS OR IMPLIED. DEWETRON SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. DEWETRON shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any other legal theory, in connection with the furnishing of this document or the use of the information in this document.

## Warranty Information

A copy of the specific warranty terms applicable to your DEWETRON product and replacement parts can be obtained from your local sales and service office.

## Support

For any support please contact your local distributor first or DEWETRON directly.

For Asia and Europe, please contact:

DEWETRON Ges.m.b.H.  
Parkring 4  
A-8074 Graz-Grambach  
AUSTRIA  
Tel.: +43 316 3070  
Fax: +43 316 307090  
Email: [support@dewetron.com](mailto:support@dewetron.com)  
Web: <http://www.dewetron.com>

The telephone hotline is available  
Monday to Friday between  
08:00 and 17:00 CET (GMT +1:00)

For the Americas, please contact:

DEWETRON, Inc.  
10 High Street, Suite K  
Wakefield, RI 02879  
U.S.A.  
Tel.: +1 401 284 3750  
Toll-free: +1 877 431 5166  
Fax: +1 401 284 3755  
Email: [support@dewamerica.com](mailto:support@dewamerica.com)  
Web: <http://www.dewamerica.com>

The telephone hotline is available  
Monday to Friday between  
08:00 and 17:00 GST (GMT -5:00)

## Restricted Rights Legend

Use austrian law for duplication or disclosure.

DEWETRON GesmbH  
Parkring 4  
A-8074 Graz-Grambach / Austria

## Printing History

Please refer to the page bottom for printing version.

Copyright © DEWETRON elektronische Messgeraete Ges.m.b.H.

This document contains information which is protected by copyright. All rights are reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

All trademarks and registered trademarks are acknowledged to be the property of their owners.

# Safety instructions

---

## Safety symbols in the manual

---



*Indicates hazardous voltages.*

---

**WARNING** *Calls attention to a procedure, practice, or condition that could cause bodily injury or death.*

---

**CAUTION** *Calls attention to a procedure, practice, or condition that could possibly cause damage to equipment or permanent loss of data.*

---

### **WARNINGS**

*The following general safety precautions must be observed during all phases of operation, service, and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the product. DEWETRON Elektronische Messgeraete Ges.m.b.H. assumes no liability for the customer's failure to comply with these requirements.*

---

**All accessories shown in this document are available as option and will not be shipped as standard parts.**



*For safety reasons max. 50 V may be applied to the BNC input-connectors!  
Refer to the regulation of maximum allowable touch potential.*

---

## Safety instructions for all DEWETRON systems

- The DEWETRON data acquisition systems may only be installed by experts.
- Read your manual before operating the system.
- Observe local laws when using the instrument.
- Ground the equipment: For Safety Class 1 equipment (equipment having a protective earth terminal), a non interruptible safety earth ground must be provided from the mains power source to the product input wiring terminals or supplied power cable.
- DO NOT operate the product in an explosive atmosphere or in the presence of flammable gases or fumes and do not bring the system in contact with water.
- DO NOT operate damaged equipment: Whenever it is possible that the safety protection features built into this product have been impaired, either through physical damage, excessive moisture, or any other reason, REMOVE POWER and do not use the product until safe operation can be verified by service-trained personnel. If necessary, return the product to a DEWETRON sales and service office for service and repair to ensure that safety features are maintained.
- Keep away from live circuits: Operating personnel must not remove equipment covers or shields. Procedures involving the removal of covers or shields are for use by service-trained personnel only. Under certain conditions, dangerous voltages may exist even with the equipment switched off. To avoid dangerous electrical shock, DO NOT perform procedures involving cover or shield removal unless you are qualified to do so.
- No modifications are allowed at the instrument. The fuse in the power module has to be replaced by the same type. For continued protection against fire, replace the line fuse(s) only with fuse(s) of the same voltage and current rating and type. DO NOT use repaired fuses or short-circuited fuse holder labels and print on the power module may not be removed.
- DO NOT service or adjust alone. Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.
- DO NOT substitute parts or modify equipment: Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the product. Return the product to a DEWETRON sales and service office for service and repair to ensure that safety features are maintained.
- Before opening the instrument (experts only) or exchanging the fuse in the power module disconnect power!
- Don't touch internal wiring!
- Don't use higher supply voltage than specified and take care of the correct polarity, otherwise the system will be damaged!
- Use only original plugs and cables for harnessing.
- Install filler-panels in unused slots.
- The power-cable and -connector serve as Power-Breaker. The cable must not exceed 10 feet, disconnect function must be possible without tools.
- Keep the ventilation slots free and check them frequently to avoid an overheating of the system. The cleaning interval of the filter pads depends on the environmental conditions.
- Safety of the operator and the unit depend on following these rules.
- DEWETRON is not responsible for any damage or injury that could result from improper connection or misuse!

# General Information

---

## **CAUTION**

- The system BIOS is protected by password. Any change in the BIOS may cause a system crash. When the system is booting, do not press ESC-button on keyboard. This may clear the BIOS settings and cause system faults.
- Any change in the file structure as deleting or adding files or directories might cause a system crash.
- Before installing software updates contact DEWETRON or your local distributor. Use only software packages which are released by DEWETRON. Further informations are also available in the internet (<http://www.dewetron.com>).
- After power off the system wait at least 10 seconds before switching the system on again. Otherwise the system may not boot correct. This prolongs also the life of all system components.

## **Environmental Considerations**

Information about the environmental impact of the product.

### **Product End-of-Life Handling**

Observe the following guidelines when recycling a DEWETRON system:

### **System and Components Recycling**

Production of these components required the extraction and use of natural resources. The substances contained in the system could be harmful to your health and to the environment if the system is improperly handled at it's end of life! Please recycle this product in an appropriate way to avoid an unnecessary pollution of the environment and to keep natural resources.



This symbol indicates that this system complies with the European Union's requirements according to Directive 2002/96/EC on waste electrical and electronic equipment (WEEE). Please find further informations about recycling on the DEWETRON web site [www.dewetron.com](http://www.dewetron.com)



### **Restriction of Hazardous Substances**

This product has been classified as Monitoring and Control equipment, and is outside the scope of the 2002/95/EC RoHS Directive. This product is known to contain lead.

## DEWE-50-USB2-16-NI


- 16 slot signal conditioning with system isolation (in conjunction with DEWE-DAQ modules)
- A/D converter specs: see appendix A
- Wiring to A/D converter: see appendix B



## System specifications

	DEWE-50-xx
A/D converter interface:	<input type="checkbox"/> USB 2.0 <input type="checkbox"/> USB 1.x <input type="checkbox"/> IEEE 1394 (FireWire®)
Power supply:	<input type="checkbox"/> 230 V <sub>AC</sub> <input type="checkbox"/> 115 / 230 V <sub>AC</sub> (switchable) <input type="checkbox"/> 100 to 250 V <sub>AC</sub> <input type="checkbox"/> 9 to 40 V <sub>DC</sub> <input type="checkbox"/> 10 to 32 V <sub>DC</sub> with UPS battery and external 115 / 230 V <sub>AC</sub> power supply
RS232 / 485 interface:	<input type="checkbox"/> yes <input type="checkbox"/> no
Motherboard:	<input type="checkbox"/> DAQ-MOTH-16-DE-x <input type="checkbox"/> 5 V <input type="checkbox"/> 10 V <input type="checkbox"/> DAQ-MOTH-16-NI-x-x <input type="checkbox"/> 5 V <input type="checkbox"/> 10 V <input type="checkbox"/> USB interface on-board
Operating temperature:	0 °C to 50 °C (standard)
Storage temperature:	-20 °C to +60 °C
Humidity (operating):	10 % to 80 %, non condensing 5 % to 95 %, rel. humidity
Vibration:	MIL-STD 810F 514.5 procedure I operating test procedure frequency range: 5 to 200 to 5 Hz; 5 x 12 min each direction displacement amplitude ±3.5 mm (5 to 8.45 Hz) acceleration amplitude 1 g (8.45 to 92 Hz) displacement amplitude 92 to 113 Hz: ±0.029 mm acceleration amplitude 1.5 g (113 to 200 Hz)
Shock:	MIL-STD 810F 516.5 procedure I non operating test procedure ½ sinus 11 ms 10 g, 3 shocks positive, 3 shocks negative
Dimensions (W x D x H):	approx. 438 x 253 x 133 mm (17.2 x 10 x 5.2 in.) with 50-MK option(3U 19" mountingrack): 513 x 256 x 133 (20.2 x 10.1 x 5.2 in.)
Weight:	typ. 5.5 kg (7 lbs), depending on configuration

## Dimensions\*

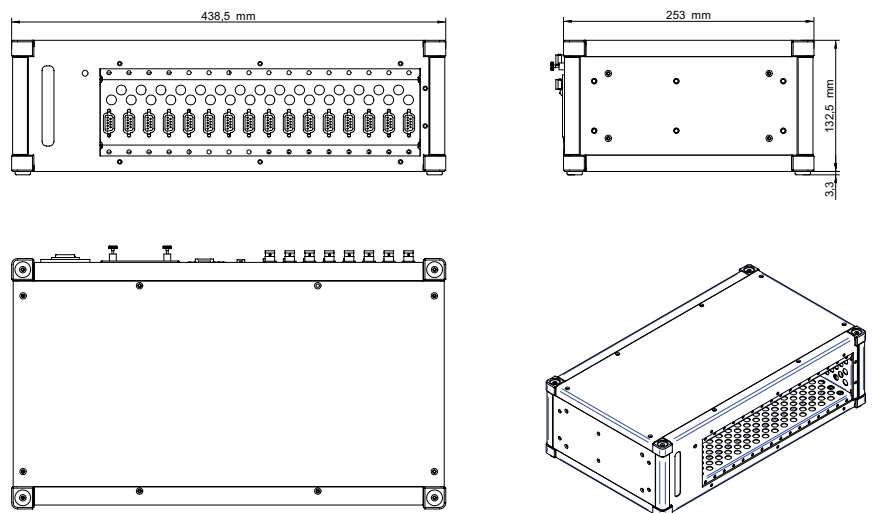

\* Dimensions in mm  
(1 inch = 25.4 mm)

# Main System

---

# A/D & D/A Conversion

---

## **A/D Conversion**

Detailed information about the A/D card are not included in this manual.

For detailed information see the manufacturer's A/D card manual.

## **D/A Conversion**

Detailed information about the D/A card are not included in this manual.

For detailed information see the manufacturer's D/A card manual.

# A/D & D/A Conversion

---

Notes

## 16 slot DEWE-MOTHERBOARD DAQ-MOTH-16-DE-x

**Rear view**

GND  
+15 V ORION  
-15 V ORION

5 = 5 V output; 330 kHz filter  
10 = 10 V output; 330 kHz filter

16 channels single ended analog output (output resistance 15 Ohm) Please find the pin-assignment on the next page!

5 V ORION  
Ext. CLK  
Ext. TRIG  
DGND ORION  
Ext. CLK 2 OUT  
Ext. CLK 1 OUT (CAMERA TRIGGER)  
DGND ORION  
GND

W7 W1

W10 W11

W8

W9

W5

16 x analog OUT (resistance 50 Ohm)

16x GND

W1 Terminate RS-485  
W2 Connect GND to GND<sub>p</sub>  
W3 Connect +12 V to +V (pin 6)  
W4 Terminate RS-485  
W5 Connect chassis to GND  
W6 Connect chassis to GND  
W7 Connect chassis to GND  
W8 Activate ORION RS-485 (A)  
W9 Activate ORION RS-485 (B)

W10 Activate analog output 0 on CH 14  
W11 Activate analog output 1 on CH 15

**Note: If you connect signals to these contacts you have to open the solder jumpers W10 and W11 first!**

Connection to CH14 (pin 7)  
Connection to CH15 (pin 7)

GND  
RES  
RS-232  
RS-485  
POWER

DM  
DP  
GND<sub>c</sub>  
TX  
RX  
GND<sub>c</sub>  
TX  
RX  
GND<sub>c</sub>  
A (RS-485)  
GND<sub>c</sub>  
B (RS-485)  
GND<sub>p</sub>  
+V  
+12 V  
-12 V  
-V

POWER  
RS-485  
POWER

W6

W4

**Front view**

CH 0  
CH 1  
CH 2  
CH 3  
CH 4  
CH 5  
CH 6  
CH 7  
CH 8  
CH 9  
CH 10  
CH 11  
CH 12  
CH 13  
CH 14  
CH 15

Indicator  
+9 V  
-9 V

1 2 3 4 5  
6 7 8 9

**9-pin SUB-D pin assignment:**


- Module input ( $\pm 5$  V)
- RS-485 (A)
- RS-485 (B)
- GND
- +9 V power supply
- +12 V power (default) / +V sensor supply
- Module output (from A/D board)
- V sensor supply
- 9 V power supply

The 16 slot DEWE-MOTHERBOARD receives the  $\pm 12$  V<sub>DC</sub> power supply via a DC/DC converter from the internal power supply.

# Internal Wiring


## Analog output connector pin-assignment

Connector for DEWE-ORION-1616 cards

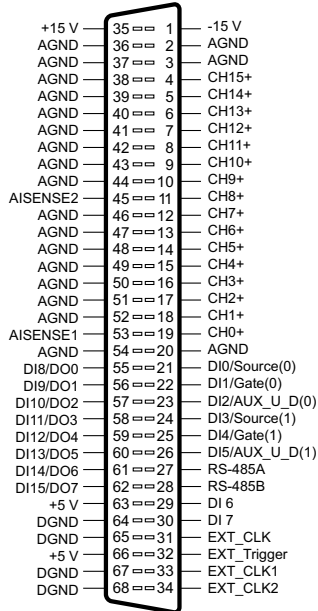

68-pin high density connector


Connector for DEWE-ORION-1624 cards

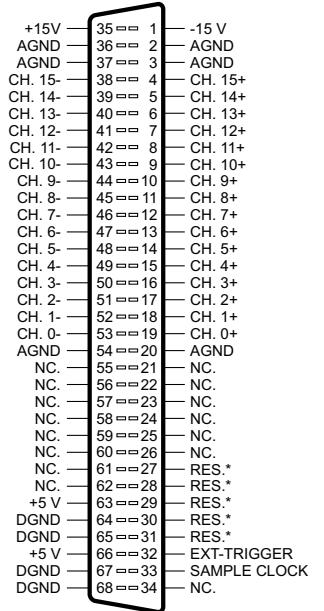


\* DONT CONNECT

68-pin high density connector


## 16 slot DEWE-MOTHERBOARD DAQ-MOTH-16-NI-x-U

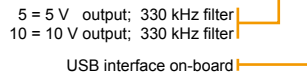

Connector for National Instruments™ A/D cards

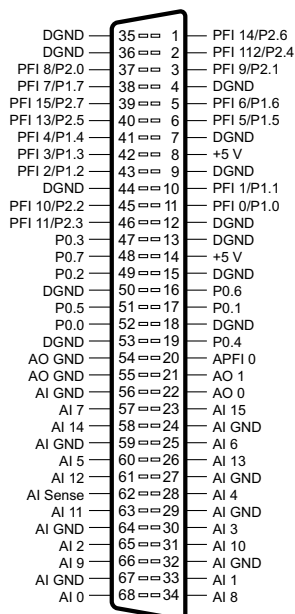

68-pin high density connector

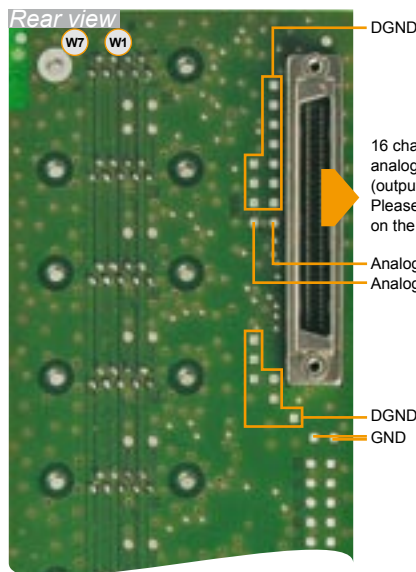

16 channels single ended analog output (output resistance 15 Ohm)  
Please find the pin-assignment on the next page!  
Analog OUT Ch. 1  
Analog OUT Ch. 0

- W1 Terminate RS-485
- W2 Connect GND to GND<sub>P</sub>
- W3 Connect +12 V to +V (pin 6)
- W4 Terminate RS-485
- W5 Connect chassis to GND
- W6 Connect chassis to GND
- W7 Connect chassis to GND

# CE-Certificate of conformity



Manufacturer: **DEWETRON Elektronische Messgeraete Ges.m.b.H.**

Address: **Parking 4  
A-8074 Graz-Grambach Austria**

Tel.: +43 316 3070 0

Fax: +43 316 3070 90

e-mail: sales@dewetron.com

http://www.dewetron.com

Name of product: **DEWE-50-USB2-16-NI**

Kind of product: *Data acquisition instrument*

The product meets the regulations of the following EC-directives:

### **73/23/EEC**

**"Directive on the approximation of the laws of the Member States relating to electrical equipment designed for use within certain voltage limits amended by the directive 93/68/EEC"**

### **89/336/EEC**

**"Directive on the approximation of the laws of the Member States relating to electromagnetic compatibility amended by the directives 91/263/EEC, 92/31/EEC, 93/68/EEC and 93/97/EEC"**

The accordance is proved by the observance of the following standards:

<b>L V E M C</b>	<b>Safety</b>	IEC/EN 61010-1:1992/93 IEC/EN 61010-2-031	IEC 61010-1:1992/300 V CATIII PoI. D. 2 IEC 1010-2-031
	<b>Emissions</b>	EN 61000-6-4	EN 55011 Class B
	<b>Immunity</b>	EN 61000-6-2	Group standard

**Graz, October 14, 2008**

Place / Date of the CE-marking

  
Dipl.-Ing. Roland Jeutter / Managing director

# Notes

---