

---


# DEWE-571

## TECHNICAL REFERENCE MANUAL

---

### WELCOME TO THE WORLD OF DEWETRON!

Congratulations on your new device! It will supply you with accurate, complete and reproducible measurement results for your decision making.  
Look forward to the easy handling and the flexible and modular use of your DEWETRON product and draw upon more than 25 years of DEWETRON expertise in measurement engineering.

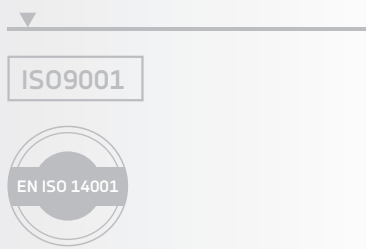

CUSTOMIZED



MODULAR



COMPETENT



COMMITTED



APPROVED

Copyright © DEWETRON GmbH

This document contains information which is protected by copyright. All rights are reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

All trademarks and registered trademarks are acknowledged to be the property of their owners.  
DEWESoft™ is a trademark of Dewesoft d.o.o

## Thank you!

Thank you very much for your investment in DEWETRON's unique data acquisition systems. These are top-quality instruments which are designed to provide you years of reliable service. This guide has been prepared to help you get the most from your investment, starting from the day you take it out of the box, and extending for years into the future.

This guide includes important startup notes, as well as safety notes and information about keeping your DEWETRON system in good working condition over time.

We strongly suggest that you read this entire manual, especially the safety and care sections, as well as to avoid damaging your DEWETRON system.

## What is the DEWE-571?

This product is used for measuring of different physical and/or electrical sizes (depending on model or configuration). The connection is depending on model or configuration and takes place via safety banana plugs, BNC connectors ( $\pm 50V$  max.), D-SUB connectors ( $\pm 50V$  max.), thermocouple connectors ( $\pm 50V$  max.), BINDER® connectors ( $\pm 50V$  max.), SMB connectors ( $\pm 50V$  max.),  $\mu$ dot connectors ( $\pm 50V$  max.), LEMO® connectors or RJ-45 connectors.

# Preface

---

Notes

## Content

<b>General Information, Safety Instructions</b>	<b>7</b>
Training .....	7
Calibration.....	7
Support .....	7
Service/repairs .....	7
Warranty Information .....	8
Printing History.....	8
Safety conventions .....	9
General safety and hazard warnings for all DEWETRON systems .....	10
Maintenance.....	13
Windows updates and antivirus/security software .....	14
Problematic network stacks .....	14
Environmental Considerations .....	14
Blockdiagram of the internal signal processing .....	15
First steps .....	16
<b>Main System</b>	<b>17</b>
DEWE-571 - All-in-one Instrument .....	17
System specifications .....	17
Connectors .....	18
MDAQ series amplifiers overview.....	21
Power supply .....	23
Maintenance.....	27
<b>A/D Conversion</b>	<b>A1</b>
<b>Internal Wiring</b>	<b>B1</b>
<b>CE-Certificate of conformity</b>	<b>C1</b>

# Table of content

---

## Training

DEWETRON offers training at various offices around the world several times each year. DEWETRON headquarters in Austria have a very large and professional conference and seminar center, where training classes are conducted on a regular basis starting with sensors and signal conditioning, A/D technology and software operation. For more information about training services, please visit:  
<http://www.dewetron.com/support/training>

Dewetron Inc. in the USA also has a dedicated training facility connected to its headquarters, located in Rhode Island. For more information about training services in the US, please visit:  
<http://www.dewamerica.com/support/trainingsclasses>

## Calibration

Every instrument needs to be calibrated at regular intervals. The standard norm across nearly every industry is annual calibration. Before your DEWETRON data acquisition system is delivered, it is calibrated at our DEWETRON headquarter. Each of this system is delivered with a certificate of compliance with our published specifications. Detailed calibration reports from our calibration system are available for purchase with each order. We retain them for at least one year, so calibration reports can be purchased for up to one year after your system was delivered.

## Support

DEWETRON has a team of people ready to assist you if you have any questions or any technical difficulties regarding the system. For any support please contact your local distributor first or DEWETRON directly.

For Asia and Europe, please contact:

DEWETRON GmbH  
Parkring 4  
8074 Grambach  
AUSTRIA  
Tel.: +43 316 3070  
Fax: +43 316 307090  
Email: [support@dewetron.com](mailto:support@dewetron.com)  
Web: <http://www.dewetron.com>

The telephone hotline is available  
Monday to Friday between  
08:00 and 17:00 CET (GMT +1:00)

## Service/repairs

Only the team of DEWETRON is allowed to perform any kinds of repairs to your system to assure a safe and proper operation in future. For information regarding service and repairs please contact your local distributor first or DEWETRON directly.



Any spare parts (screws, backplanes, cables,...) must be obtained from DEWETRON only.

For the Americas, please contact:

DEWETRON, Inc.  
10 High Street, Suite K  
Wakefield, RI 02879  
U.S.A.  
Tel.: +1 401 284 3750  
Toll-free: +1 877 431 5166  
Fax: +1 401 284 3755  
Email: [support@dewamerica.com](mailto:support@dewamerica.com)  
Web: <http://www.dewamerica.com>

The telephone hotline is available  
Monday to Friday between  
08:00 and 17:00 GST (GMT -5:00)

# Notice

---

The information contained in this document is subject to change without notice.

DEWETRON GmbH (DEWETRON) shall not be liable for any errors contained in this document. DEWETRON MAKES NO WARRANTIES OF ANY KIND WITH REGARD TO THIS DOCUMENT, WHETHER EXPRESS OR IMPLIED. DEWETRON SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. DEWETRON shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any other legal theory, in connection with the furnishing of this document or the use of the information in this document.

## Warranty Information

A copy of the specific warranty terms applicable to your DEWETRON product and replacement parts can be obtained from your local sales and service office.

## Restricted Rights Legend

Use austrian law for duplication or disclosure.

DEWETRON GmbH  
Parkring 4  
8074 Grambach / Austria

TRION™ is a trademark of DEWETRON GmbH.

SYNC-CLOCK™ is a trademark of DEWETRON GmbH.

SUPER-COUNTER™ is a trademark of DEWETRON GmbH.

DEWESoft™ is a trademark of DEWESoft d.o.o.

Any other trademarks and registered trademarks are acknowledged to be the property of their owners.

## Printing History

Please refer to the page bottom for printing version.

Copyright © DEWETRON GmbH.

This document contains information which is protected by copyright. All rights are reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

# Safety conventions

---

## Safety conventions

---



*Observe precautions for handling electrostatic sensitive devices!*

---



*This icon denotes a caution, which advises you of precautions to take to avoid injury, data loss, or a system crash. When this symbol is marked on the product, refer to the technical reference manual.*

---



*Indicates hazardous voltages.*

---



*Indicates the chassis terminal*

---

**WARNING** *Calls attention to a procedure, practice, or condition that could cause bodily injury or death.*

---

**CAUTION** *Calls attention to a procedure, practice, or condition that could possibly cause damage to equipment or permanent loss of data.*

---

### **WARNINGS**

*The following general safety precautions must be observed during all phases of operation, service, and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the product. DEWETRON Elektronische Messgeraete Ges.m.b.H. assumes no liability for the customer's failure to comply with these requirements.*

---

# Safety instructions

---

**Your safety is our primary concern! Please be safe!**



## **General safety and hazard warnings for all DEWETRON systems**

- Use this system under the terms of the specifications only to avoid any possible danger. If the unit is used in a manner not specified by the manufacturer the protection can be impaired!
- This product is intended for use in industrial locations. As a result, this product may cause interference if used in residential areas. Such use must be avoided unless the user takes special measures to reduce electromagnetic emissions to prevent interferences to the reception of radio and television broadcasts.
- Maintenance will be executed by qualified staff only.
- During the use of the system, it might be possible to access another parts of a more comprehensive system. Please read and follow the safety instructions provided in the manuals of all other components regarding warning and security advices for using the system.
- With this product, only use the power cable delivered or defined for the host country.
- DO NOT connect or disconnect sensors, probes or test leads, as these parts are connected to a voltage supply unit.
- The system is grounded via a protective conductor in the power supply cord. To avoid electric shocks, the protective conductor has to be connected with the ground of the power network. Before connecting the input or output connectors of the system, make sure that there is a proper grounding to guarantee potential free usage. For countries, in which there is no proper grounding, please refer to your local legally safety regulations for safety use.

DC systems: Every DC system has a grounding connected to the chassis (yellow/green safety banana plug).

- Please note the characteristics and indicators on the system to avoid fire or electric shocks. Before connecting the system, please carefully read the corresponding specifications in the product manual.
- The inputs are not, unless otherwise noted (CATx identification), for connecting to the main circuits of category II, III and IV. The measurement category can be adjusted depending on module configuration.
- The power cord separates the system from the power supply. Do not block the power cord, since it has to be accessible for the users.
- Supply overvoltage category is II.
- DO NOT use the system if equipment covers or shields are removed.
- If you assume the system is damaged, get it examined by authorised personnel only.
- Any use in wet rooms, outdoors or in adverse environmental condition is not allowed!  
Adverse environmental conditions are:
  - Moisture or high humidity
  - Dust, flammable gases, fumes or dissolver
  - Thunderstorm or thunderstorm conditions (except assembly PNA)
  - Electrostatic fields, et cetera.
- Any direct voltage output is protected with a fuse against short cut and reverse-polarity, but is NOT galvanically isolated (except it is explicit marked on the system).
- The system must be connected and operated to an earthed wall socket at the AC mains power supply only (except for DC systems).
- Any other use than described above may damage your system and is attended with dangers like shortcut, fire or electric shocks.

# Safety instructions

- The whole system must not be changed, rebuilt or opened (except for changing TRION™ modules).
  - If you assume a more riskless use is not provided anymore, the system has to be rendered inoperative and should be protected against inadvertent operation. It is assumed that a more riskless operation is not possible anymore, if
    - the system is damaged obviously or causes strange noises.
    - the system does not work anymore.
    - the system has been exposed to long storage in adverse environmental.
    - the system has been exposed to heavy shipment strain.
  - DO NOT touch any exposed connectors or components if they are live wired. The use of metal bare wires is not allowed. There is a risk of short cut and fire hazard!
  - Warranty void if damages caused by disregarding this manual. For consequential damages NO liability will be assumed!
  - Warranty void if damages to property or persons caused by improper use or disregarding the safety instructions.
  - Unauthorized changing or rebuilding the system is prohibited due to safety and permission reasons (CE). Exception: changing TRION™ modules.
  - The assembly of the system is equivalent to protection class I. For power supply, only the correct power socket of the public power supply must be used, except the system is DC powered.
  - Be careful with voltages  $>25 V_{AC}$  or  $>35 V_{DC}$ ! These voltages are already high enough in order to get a perilous electric shock by touching the wiring.
  - Maximum input voltage for measuring cards are  $70 V_{DC}$  and  $46.7 V_{PEAK}$
  - The product heats during operation. Make sure there is adequate ventilation. Ventilation slots must not covered!
  - Only fuses of the specified type and nominal current may be used. The use of patched fuses is prohibited.
  - Prevent using metal bare wires! Risk of short cut and fire hazard!
  - DO NOT use the system before, during or shortly after a thunderstorm (risk of lightning and high energy overvoltage). An advanced range of application under certain conditions is allowed with therefore designed products only. For details please refer to the specifications.
  - Make sure that your hands, shoes, clothes, the floor, the system or measuring leads, integrated curcuits and so on, are dry.
  - DO NOT use the system in rooms with flammable gases, fumes or dust or in adverse environmental conditions.
  - Avoid operation in the immediate vicinity of:
    - high magnetic or electromagnetic fields
    - transmitting antennas or high-frequency generators
- For exact values please refere to enclosed specifications.
- Use measurement leads or measurement accessories aligned to the specification of the system only. Fire hazard in case of overload!
  - Do not switch on the system after transporting it from a cold into a warm room and vice versa. The thereby created condensation may damage your system. Acclimatise the system unpowered to room temperature.
  - Do not disassemble the system! There is a high risk of getting a perilous electric shock. Capacitors still might charged, even the system has been removed from the power supply.

# Safety instructions

---

- Direct exposure of any DEWETRON product to strong sunlight or other heat radiation shall be prevented, as this could excessively heat up the product and lead to permanent damage of the product.
- The electrical installations and equipments in industrial facilities must be observed by the security regulations and insurance institutions.
- The use of the measuring system in schools and other training facilities must be observed by skilled personnel.
- The measuring systems are not designed for use at humans and animals.
- Please contact a professional if you have doubts about the method of operation, safety or the connection of the system.
- Please be careful with the product. Shocks, hits and dropping it from already lower level may damage your system. For exact values please refer to enclosed specifications.
- Please also consider the detailed technical reference manual as well as the security advices of the connected systems.

This product has left the factory in safety-related flawless and proper condition.

In order to maintain this condition and guarantee safety use, the user has to consider the security advices and warnings in this manual.

EN 61326-3-1:2008

IEC 61326-1 applies to this part of IEC 61326 but is limited to systems and equipment for industrial applications intended to perform safety functions as defined in IEC 61508 with SIL 1-3.

The electromagnetic environments encompassed by this product family standard are industrial, both indoor and outdoor, as described for industrial locations in IEC 61000-6-2 or defined in 3.7 of IEC 61326-1. Equipment and systems intended for use in other electromagnetic environments, for example, in the process industry or in environments with potentially explosive atmospheres, are excluded from the scope of this product family standard, IEC 61326-3-1.

Devices and systems according to IEC 61508 or IEC 61511 which are considered as “operationally well-tried”, are excluded from the scope of IEC 61326-3-1.

Fire-alarm and safety-alarm systems, intended for protection of buildings, are excluded from the scope of IEC 61326-3-1.

## Maintenance

The information in this section is designed for use by qualified service personal.

### Service interval:

Clean dust from the chassis exterior/interior and exchange filter foam based on the operating environment.

### Cleaning:

Clean surface of the chassis with dry lint-free cloth.

Use a dry velocity stream of air to clean the chassis interior.



- Disconnect all cables before servicing the unit!
- Many components within the chassis are sensitive to static discharge damage. Always wear a ground wrist strap and service the unit only in static-free environment.
- Do not use harsh chemical cleaning agents!

# General information

## CAUTION

- The system BIOS is protected by password. Any change in the BIOS may cause a system crash. When the system is booting, do not press ESC-button on keyboard. This may clear the BIOS settings and cause system faults.
- Any change in the file structure as deleting or adding files or directories might cause a system crash.
- Before installing software updates contact DEWETRON or your local distributor. Use only software packages which are released by DEWETRON. Further informations are also available in the internet (<http://www.dewetron.com>).
- After power off the system wait at least 10 seconds before switching the system on again. Otherwise the system may not boot correct. This prolongs also the life of all system components.

## Windows updates and antivirus/security software

Before installing Windows software updates consult with DEWETRON for compatibility guidance. Please also keep in mind that the use of any antivirus or other security software may slow down your system and may cause data loss.

## Problematic network stacks

Often intrusive IT software or network processes can interfere with the primary function of the DEWETRON system: to record data. Therefore we recommend strongly against the installation of IT/MIS software and running their processes on any DEWETRON data acquisition system, and cannot guarantee the performance of our systems if they are so configured.



## Environmental Considerations

Information about the environmental impact of the product.

## Product End-of-Life Handling

Observe the following guidelines when recycling a DEWETRON system:

## System and Components Recycling


Production of these components required the extraction and use of natural resources. The substances contained in the system could be harmful to your health and to the environment if the system is improperly handled at it's end of life! Please recycle this product in an appropriate way to avoid an unnecessary pollution of the environment and to keep natural resources.

This symbol indicates that this system complies with the European Union's requirements according to Directive 2002/96/EC on waste electrical and electronic equipment (WEEE). Please find further information about recycling on the DEWETRON website [www.dewetron.com](http://www.dewetron.com)

## Restriction of Hazardous Substances

This product has been classified as Monitoring and Control equipment, and is outside the scope of the 2011/65/EU RoHS Directive. This product is known to contain lead.

## Blockdiagram of the internal signal processing

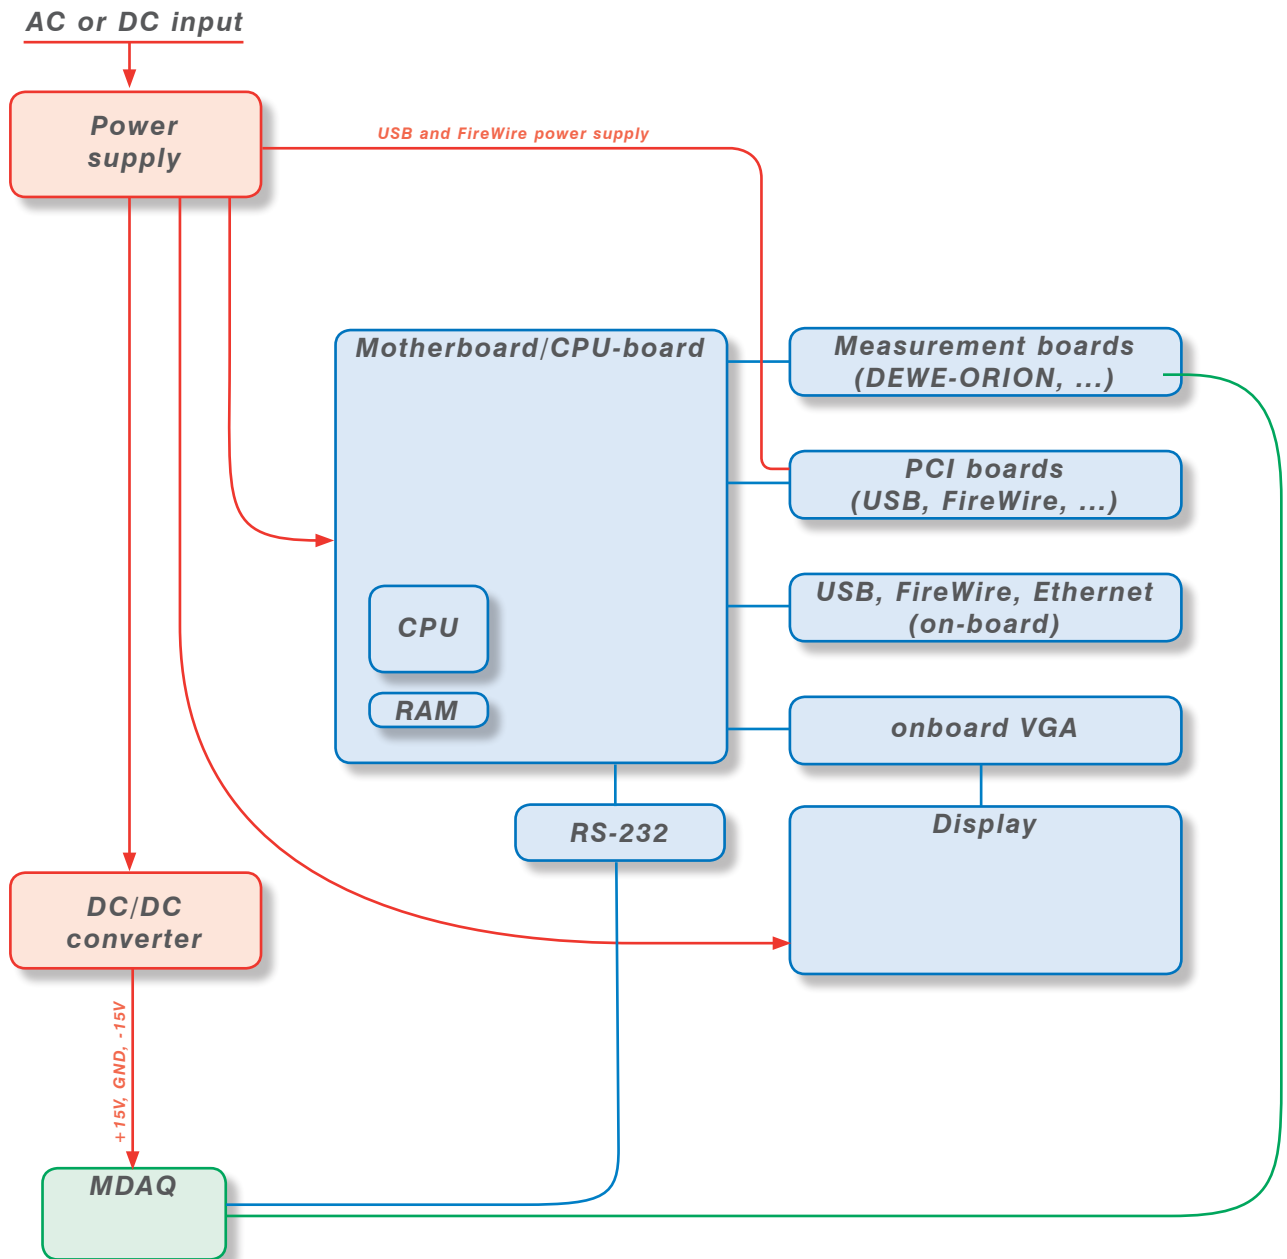

# First steps

---


## First steps

1



Power-on your system.

2

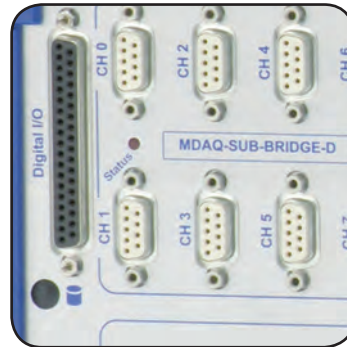


Connect your sensors to the system.

3



Run DEWESoft usually via "Start" >"Programs" > "Dewetron" > "DEWESoft x.x" > "DEWESoft x.x"

4

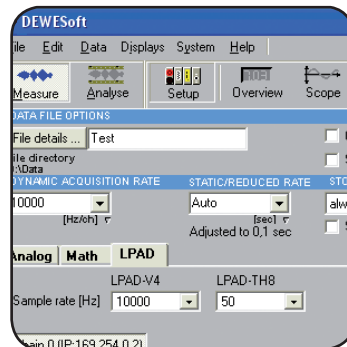

Start recording your data!

All accessories shown in this document are available as option and will not be shipped as standard parts. These parts are described as "option".

## DEWE-571 - All-in-one Instrument

- Portable data acquisition system
- Hot-swappable batteries for continuous operation without a power source (up to two hours)
- Up to 16 channels with differential inputs (in conjunction with DEWE-MDAQ modules)
- 4 Voltage inputs (in conjunction with MDAQ-PQL-SUB-HV)
- 4 current inputs for current clamps (in conjunction with MDAQ-PQL-SUB-HV)
- Internal 12.1" TFT display



## System specifications

DEWE-571	
Channel 0 to 7 Channel 8 to 15	<input type="checkbox"/> MDAQ-DIRECT <input type="checkbox"/> MDAQ-V-10 <input type="checkbox"/> MDAQ-V-100 <input type="checkbox"/> MDAQ-SUB-V-200 <input type="checkbox"/> MDAQ-SUB-ACC-X <input type="checkbox"/> MDAQ-SUB-ACC-A-X <input type="checkbox"/> MDAQ-SUB-BRIDGE <input type="checkbox"/> MDAQ-SUB-STG <input type="checkbox"/> MDAQ-BASE-5 <input type="checkbox"/> MDAQ-BASE-10 <input type="checkbox"/> MDAQ-FILT-5-BU <input type="checkbox"/> MDAQ-FILT-5-BE <input type="checkbox"/> MDAQ-FILT-5-BU-S1 <input type="checkbox"/> MDAQ-FILT-10 <input type="checkbox"/> MDAQ-FILT-10-S1 <input type="checkbox"/> MDAQ-AAF4-5-BU
<input type="checkbox"/> DEWE-571-PNA	Channel 0 to 3: Voltage inputs ( $V_{LX}$ ) with MDAQ-SUB-PQL-HV (U) Channel 4 to 7: Current inputs ( $I_{LX}$ ) with MDAQ-SUB-PQL-HV (I)
<input type="checkbox"/> DEWE-571-PNA-4U12I:	Channel 0 to 3: Voltage inputs ( $V_{LX}$ ) with MDAQ-SUB-PQL-HV (U) Channel 4 to 15: Current inputs ( $I_{LX}$ ) with MDAQ-SUB-PQL-HV (I)
Power supply:	Battery powered with 18 to 24 $V_{DC}$ input External AC power supply 100 to 240 $V_{AC}$ included External DC power supply 9 to 36 $V_{DC}$ optional <input type="checkbox"/> BBDC-02 <input type="checkbox"/> DEWE-POW-24-350 <input type="checkbox"/> DEWE-DCDC-24-300-ISO
Operating temperature: discharging batteries charging batteries without batteries	0 °C to +50 °C 0 °C to +45 °C -5 °C to +50 °C
Storage temperature:	-20 °C to +60 °C
Humidity (operating):	10 % to 90 %, non condensing 5 % to 95 %, rel. humidity
Vibration test* EN 60068-2-6 (exceeds MIL-STD 810F 514.5 procedure I)	Shape Frequency range Acceleration Sweep rate Duration Test in 3 directions
Vibration test* EN 60721-3-2 Class 2M2	Shape Frequency range Power spectral density Duration
Shocktests* EN 60068-2-27 (Exceeds MIL-STD 810F 516.5 procedure I)	Shape Acceleration amplitude Duration Test in 3 axis, 3 shocks in each axis and direction
Dimensions: (W x D x H):	approx. 360 x 300 x 150 mm (14.2 x 11.8 x 5.9 in.)
Weight:	typ. 5 kg (11 lbs), depending on configuration
*) tested with SSD disc.	

# Main System

## Connectors

Typical DEWE-571 rear view



Connector overview:

- 1 Power supply connector
- 2 Power supply switch
- 3 Ground connector
- 4 EPAD interface connector
- 5 USB interface connector
- 6 VGA connector
- 7 Ethernet LAN connector
- 8 PAD interface connector
- 9 Digital I/O connector
- 10 MDAQ input channels
- 11 Internal 10.4" display
- 12 Battery panel


Typical DEWE-571 left side view



Typical DEWE-571 right side view



Typical DEWE-571 with MDAQ-PQL-SUB-HV module (side view)

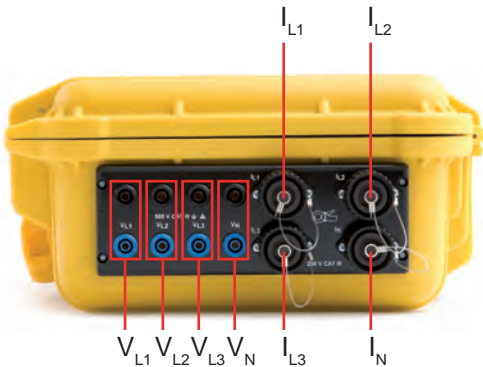

Typical DEWE-571-PNA-4U121 (ELOG) side view



Connector overview:

- V<sub>LX</sub>, V<sub>N</sub> - Voltage inputs
- I<sub>L1</sub>, I<sub>L2</sub>, I<sub>L3</sub>, I<sub>N</sub> - Current inputs for current clamps (Ampflex or direct current (5A))
- I<sub>LX</sub> - Current inputs for current clamps (Ampflex, voltage input)

*Note: The location of the connectors might vary from system to system and depends on configuration*

## Power-on button

The power-on push button has to be used to switch on the system.

## Ground connector


For some kind of measurements, it's necessary to give the system an additional ground connection.

## Power supply input connector

For details see next pages.

## EPAD connector (LEMO, optional)

To connect DEWETRON EPAD modules to the system.

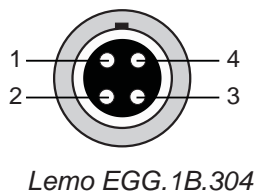

Pin assignment

- 1: RS-485 A
- 2: RS-485 B
- 3: +12 V
- 4: GND

Shield is connected on housing

## USB interface connectors (Universal Serial Bus)


The USB interface connectors meets standard USB pin assignment.

## Digital I/O connector

This connector supports the digital input and output lines of the built-in A/D board. If this board does not support digital I/O's, the connector is not available.



9-pin SUB-D connector (female)

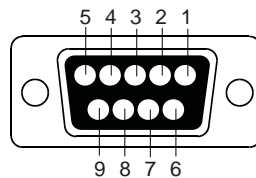

Schematic

Pin assignment

- 1: Digital IN 1 (max. 24 V<sub>DC</sub>)
- 2: n.c.
- 3: n.c.
- 4: Digital IN 2 (max. 24 V<sub>DC</sub>)
- 5: n.c.
- 6: Relais output (normally open)
- 7: Relais output (normally open)
- 8: n.c.
- 9: Common


# Main System

## PAD interface connector

The PAD interface connector offers the possibility to connect additional PAD modules to your DEWE-571.



9-pin SUB-D connector (female)

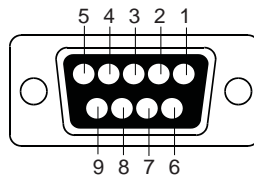

Schematic

### Pin assignment

- 1: n.c.
- 2: RS485-A
- 3: RS485-B
- 4: n.c.
- 5: n.c
- 6: n.c.
- 7: n.c.
- 8: +12 V
- 9: GND

## Ethernet connector

The DEWE-571 system supports 10/100/1000 BaseT Ethernet with standard RJ45 connector.

## RS-485 interface connector (optional)

The RS-485 interface connector (male) is located on the rear side of the DEWE-571. It meets standard RS-485 pin assignment.


## VGA connector

The VGA connector offers the possibility to connect a CRT or other standard VGA displays to the system. This connector meets standard VGA pin assignment.

## Current connector for current clamps



7-pin AMPFLEX connector (male)

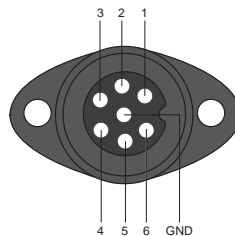

Schematic

### Pin assignment

- 1: (+) Current input (max. 10 A)
- 2: (-) Current input (max. 10A)
- 3: (+) AmpFLEX Input
- 4: (-) AmpFLEX Input
- 5: TEDS
- 6: (+) Current clamp
- GND: (-) Current clamp




**CAUTION:** The Voltage input of the current connector is not isolated!  
Do not use this for any shunt measurement!

## Current connector for 12I (I<sub>LX</sub>)

6-pin female LEMO PLG.M0.6GL.LR (red)






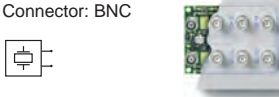

Schematic

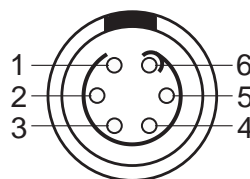

### Pin assignment

- 1: (+) AmpFLEX Input
- 2: (-) AmpFLEX Input
- 3: (+) Current clamp (Voltage input)
- 4: (-) Current clamp (Voltage input)
- 5: TEDS
- 6: +12 V

## MDAQ series amplifiers overview

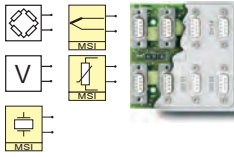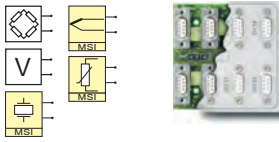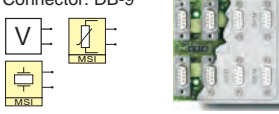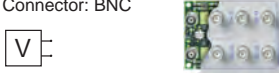SUB Modules for MDAQ-BASE-x							
Module	# CH	Input type	Ranges	TEDS	Bandwidth (BW), Highpass filters (HP)	Excitation	
<b>MDAQ-SUB-STG-D</b> Connector: DB-9 	8	Strain-gage (Full-, half and quarter-bridge, incl. shunt calibration) for strain gage application	14 ranges from $\pm 0.5$ to 1000 mV/V (@ 5 V <sub>DC</sub> excitation)	✓	BW: 30 kHz	0 to 12 V <sub>DC</sub>	
		Voltage up to $\pm 10$ V	15 ranges from $\pm 2.5$ mV to $\pm 10$ V				
		ICP via MSI-BR-ACC	7 ranges from $\pm 0.25$ mV to $\pm 10$ V				
		Voltage up to 200 V via MSI-BR-V-200	6 ranges from $\pm 10$ to $\pm 200$ V				
		Thermocouple via MSI-BR-TH-x	full range of TC type				
Pt100, Pt200, Pt500, Pt1000, Pt2000 and resistance via MSI-BR-RTD	-200 °C to 1000 °C and 0 to 6.5 kOhm						
<b>MDAQ-SUB-BRIDGE-D</b> Connector: DB-9 	8	Strain-gage (Full-, and half bridge) for strain gage sensors	14 ranges from $\pm 0.5$ to 1000 mV/V (@ 5 V <sub>DC</sub> excitation)	✓	BW: 30 kHz HP: 0.16 Hz	+15 V <sub>DC</sub> and 0 to 12 V <sub>DC</sub>	
		Voltage up to $\pm 10$ V	15 ranges from $\pm 2.5$ mV to $\pm 10$ V				
		ICP, via MSI-BR-ACC	7 ranges from $\pm 0.25$ mV to $\pm 10$ V				
		Voltage up to 200 V via MSI-BR-V-200	6 ranges from $\pm 10$ to $\pm 200$ V				
		Thermocouple via MSI-BR-TH-x	full range of TC type				
Pt100, Pt200, Pt500, Pt1000, Pt2000 and resistance via MSI-BR-RTD	-200 °C to 1000 °C and 0 to 6.5 kOhm						
<b>MDAQ-SUB-V-200-D</b> Connector: DB-9 	8	Voltage up to $\pm 200$ V	13 ranges from $\pm 0.125$ to $\pm 200$ V	✓	BW: 300 kHz	$\pm 15$ V <sub>DC</sub> and 0 to 12 V <sub>DC</sub>	
		ICP, via MSI-V-ACC	7 ranges from $\pm 0.25$ mV to $\pm 10$ V				
		Pt100, Pt200, Pt500, Pt1000, Pt2000 and resistance via MSI-V-RTD	-200 °C to 1000 °C and 0 to 6.5 kOhm				
<i>Note: for safety reasons, max. 120 V<sub>DC</sub> or 50 V<sub>AC</sub> are allowed at this connector</i>							
<b>MDAQ-SUB-V-200-BNC</b> Connector: BNC 	8	Voltage up to $\pm 200$ V	13 ranges from $\pm 0.125$ to $\pm 200$ V	-	BW: 300 kHz	-	
		<i>Note: for safety reasons, max. 120 V<sub>DC</sub> or 50 V<sub>AC</sub> are allowed at this connector</i>					
<b>MDAQ-SUB-ACC-BNC</b> Connector: BNC 	8	ICP <sup>®</sup> or voltage up to $\pm 10$ V	8 ranges from $\pm 125$ mV to $\pm 10$ V	✓	BW: 300 kHz HP: 3.4 Hz	4 / 8 mA	
		Single-ended or differential input and one highpass filter					
		3.4 Hz highpass filter for noise and shock response measurement MDAQ-SUB-ACC-BNC-S1					
<i>0,16 Hz for structural and modal analysis, human body vibration measurement (rest same as MDAQ-SUB-ACC-BNC)</i>							
<b>MDAQ-SUB-ACC-A-BNC</b> Connector: BNC 	8	ICP <sup>®</sup> or voltage up to $\pm 10$ V	8 ranges from $\pm 125$ mV to $\pm 10$ V	✓	BW: 300 kHz HP: 0.16 Hz, 3.4 Hz	4 / 8 mA	
		Single-ended input and two HP filters					
		0.16 Hz for structural and modal analysis, human body vibration measurement 3.4 Hz for noise and shock response measurement					
<b>MDAQ-SUB-ACC-A-MD</b> Connector: Microdot 	8	ICP <sup>®</sup> or voltage up to $\pm 10$ V	8 ranges from $\pm 125$ mV to $\pm 10$ V	✓	BW: 300 kHz HP: 0.16 Hz, 3.4 Hz	4 / 8 mA	
		Single-ended input, two HP filters and sensor failure detection					
		0.16 Hz for structural and modal analysis, human body vibration measurement 3.4 Hz for noise and shock response measurement					
Option: test signal input for all channels							




## Power supply

### Internal DC power supply

DC power supply	100 W DC power supply with BBDC-02 battery management
Input:	
Input range:	18 to 24 V <sub>DC</sub> (nom. 18 V <sub>DC</sub> )
Input frequency:	DC
Max. input current:	8.5 A
Output:	
Output power:	100 W with BBDC-02 battery management (integrated DC-DC)
Output voltages:	+3.3 V (max. 10 A) +5 V (max. 10 A) +12 V (max. 7 A)

Power supply pin assignment:

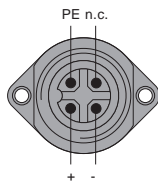

Connector type  
4-pole chassis connector  
HIRSCHMANN CA3GS

Standard shipment includes 2 smart batteries, more can be ordered additionally (option BAT-95WH).


**Note:** If the system is powered by batteries, please take care that there are at least 2 batteries installed! In some special applications 3 batteries are necessary! (Hot swap of the batteries not possible)

### External AC/DC power supply (included)

AC/DC power supply	DEWE-POW-24-350
Input:	
Rated input voltage:	100 to 240 V <sub>AC</sub> (max. 90 to 264 V <sub>AC</sub> )
Input frequency:	47 to 63 Hz
Input current (typ.):	2 A @ 230 V <sub>AC</sub> / 4 A @ 115 V <sub>AC</sub>
Inrush current (typ.):	44 A @ 230 V <sub>AC</sub> / 22 A @ 115 V <sub>AC</sub>
Leakage current:	<2 mA @ 240 V <sub>AC</sub>
P.F.C. (typ.):	0.95 @ 230 V <sub>AC</sub> / 0.98 @ 115 V <sub>AC</sub>
Output:	
Output voltage:	24 V
Min. load:	0 A
Rated load (free / fan):	12.5 A / 14.6 A
Output tolerance:	±2 %
Ripple & Noise (max.):	150 mV
Efficiency (typ.):	88 %
Output connector:	Banana jacks and LEMO EGG.2B.302
Protection:	
Overload:	105 % to 130 % constant current limiting, auto recovery
Over voltage:	26.7 to 32.4 V; Hiccup mode, auto recovery after fault has been removed
Over temperature:	> 80°C ±5°C detect on heat sink of power transistor Shutdown, auto recovery after temp. has fallen
Short circuit:	Yes
Setup time:	<2000ms @ 230V <sub>AC</sub> / 4000ms @ 115V <sub>AC</sub>
Rise time:	<100ms @ 230 V <sub>AC</sub> / 100ms @ 115 V <sub>AC</sub>
Holdup time:	16ms @ 230 V <sub>AC</sub> / 16ms @ 115 V <sub>AC</sub>
Withstand voltage:	I/P-O/P: 3 KV <sub>AC</sub> , I/P-FG: 1.5 KV <sub>AC</sub> , O/P-FG: 0.5 KV <sub>AC</sub> / 1 minute
Isolation resistance:	I/P-O/P, I/P-FG, O/P-FG: 500 V <sub>DC</sub> / 100 MOhm
Switching frequency:	100 kHz
Temperature:	
Operating:	-10 to 65°C
Derating:	45 to 60°C: 2 %/°C (3.5 & 5 V: 40 to 65°C: 2 %/°C)
Storage:	-40 to 85°C
Humidity:	
Operating:	20 to 90 % RH
Storage:	10 to 95 % RH (non condensing)
M.T.B.F.:	> 106 K hours ( according to MIL-HDBK-217F at 25°C environment)
Safety:	Approved: UL 60950-1 / TUV EN60950-1
EMC:	
EMI	EN55022 Class B / EN61000-3-2,3
EMS	EN61000-4-2,3,4,5,6,8,11 / ENV50204
Dimensions (W x D x H):	248 x 106 x 62 mm (9.8 x 4.2 x 2.4 in.)
Weight:	1.7 kg (3.7 lbs)

# Main System

## DEWE-571 with batteries and external AC/DC power supply

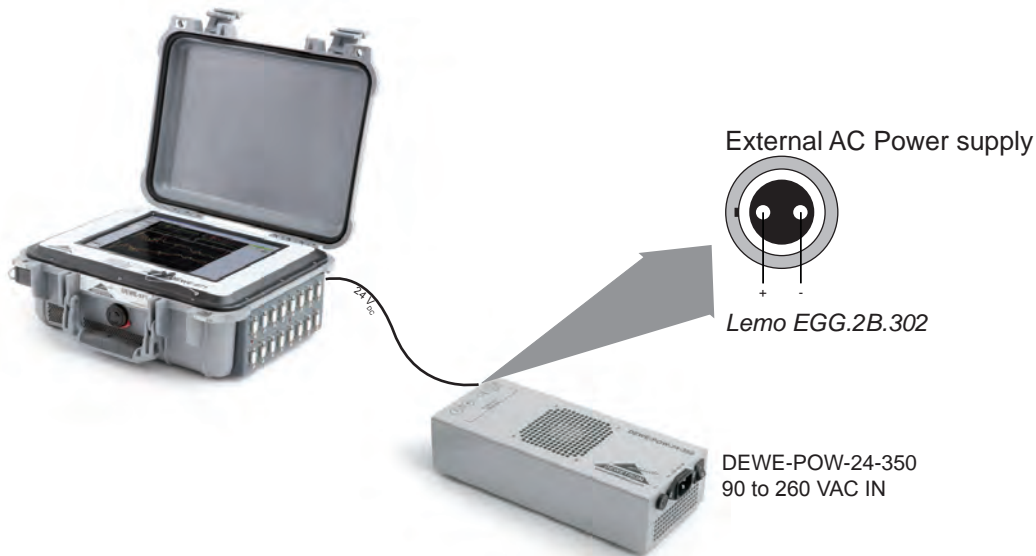

## Smart battery packs



Smart battery packs are equipped with an integrated circuit which stores information (such as manufacturer, serial number, production date etc.) and monitors the current battery status in terms of discharge rate, predicted remaining capacity, temperature, voltage etc. The battery packs, supplied with every battery powered DEWETRON system, are even capable of displaying their charge state without a separate device. With the push of a button, a LED display on the battery pack shows the current charge state in 25% steps. An intelligent battery controller, integrated in our DEWETRON systems, takes care of the charging and discharging process in order to ensure maximum battery performance and life time.



*Note: If smart battery packs are installed in your system and you don't use the system for more than 2 weeks, please remove the batteries and store them separately! Otherwise the batteries will be discharged completely and may be destroyed!*

## External battery charger (optional)

External battery charger	CH5000A/E/U
Power supply:	
Input voltage:	90 to 260 VAC, 24V
Input current:	2.5 A
Mains Cord:	CH5000E - 220 V European 2-pin connector with ground recess
Dimensions (WxDxH):	180 mm x 92 mm x 58 mm
Weight:	ca. 250 g
Mating connector:	5-blade standard battery connector

From time to time, due to the aging process of the batteries, it is necessary to recalibrate the battery in order to retain the accuracy and reliability of the fuel gauge. This can be achieved with an external battery charger (BAT-CHARGER) which is optionally available. Another advantage of the BAT-CHARGER is that additional batteries can be recharged without being in the measurement unit. This allows the measurement unit to run non-stop without being connected to the power net, thanks to the hot-swap capability of the battery packs.



# Main System

## External DC/DC power supply (optional)


DC/DC power supply	DEWE-DCDC-24-300-ISO
Input:	
Input voltage:	10 to 36 V <sub>DC</sub> (the input is protected against wrong polarity)
Max. input current:	36 A @ 10 V <sub>DC</sub> input voltage (15 A @ 24 V <sub>DC</sub> )
Input connector:	2-pin LEMO connector male, type: EGJ.2B.302
Output:	
Output voltages:	24 V
Output power:	300 W
Output current:	12.5 A
Output connector:	2-pin LEMO connector female, type: EGG.2B.302
Operating temperature:	-20 °C to 60 °C
Derating above 45 °C:	8 Watt/°C
Isolation voltage:	500 V <sub>DC</sub>
Status LED:	Green LED indicates an output voltage > 21 V <sub>DC</sub>
Dimensions: (W x D x H):	approx. 219 x 122 x 50 mm (8.6 x 4.8 x 2 in.)
Weight:	1.3 kg (2.9 lbs)
Power on sequence:	
First:	Connect the system and the DEWE-DCDC-24-300 followed by the power supply connection.

As an option the DEWE-571 is shipped with the DEWE-DCDC-24-300-ISO. This power supply serves galvanic isolated voltage with a wide input range from 10 to 36 V<sub>DC</sub>. The output voltage is fixed with 24 V<sub>DC</sub> with a maximum output power of 300 W.

Depending on the configuration, the DEWE-571 takes usually not more than 150 W. The typical power consumption is just around 70 W. However, if the batteries are empty the input current can go up to 12 Ampere which is an equivalent power consumption of 280 Watt! If the unit is supplied from a typical board supply of 12 V it needs an input current of 28 A!

If this high power is not available in the board supply please operate the DEWE-2600 without or with charged batteries.

### Dimensions\*

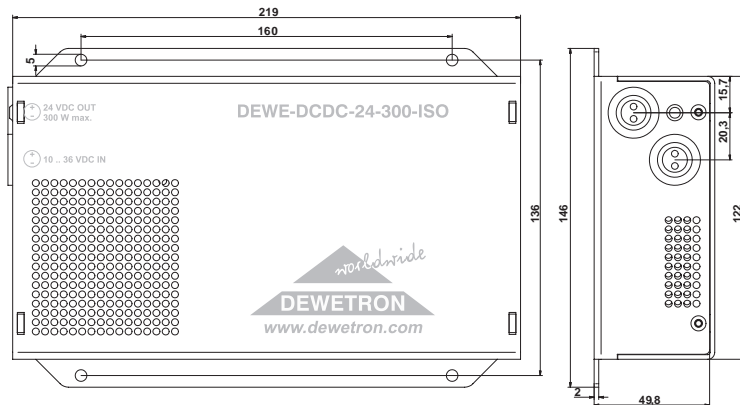

\* Dimensions in mm  
(1 inch = 25.4 mm)

### Input connector



Lemo EGJ.3B.302

Pin assignment  
1: 10 .. 36 V<sub>DC</sub> input  
2: GND

### Output connector



Lemo EGG.1B.302

Pin assignment  
1: 24 V<sub>DC</sub> output  
2: GND

## Maintenance

### Removing smart battery packs



# Main System

---

Notes

# A/D & D/A Conversion

---

## **A/D Conversion**

Please find information about the A/D conversion in the attached DEWE-ORION series manual. The latest version of the manual can be downloaded from:

<https://ccc.dewetron.com/pl/a-d-boards>

Informations regarding different manufacturer's see the corresponding D/A card manual.

# A/D & D/A Conversion

---

Notes

# Internal Wiring

---

Please find information about the MDAQ amplifiers in the attached DEWE-MDAQ series manual. The latest version of the manual can be downloaded from:

<http://download.dewetron.com/dl/products/signal/mdaq>

# Internal Wiring

---

Notes

# CE-Certificate of conformity



Manufacturer:

**DEWETRON GmbH**

Address:

**Parkring 4  
8074 Grambach, Austria**

Tel.: +43 316 3070 0

Fax: +43 316 3070 90

e-mail: sales@dewetron.com

http://www.dewetron.com

Name of product:

**DEWE-571**

Kind of product:

*Data acquisition instrument*

The product meets the regulations of the following EC-directives:

**73/23/EEC**

**"Directive on the approximation of the laws of the Member States relating to electrical equipment designed for use within certain voltage limits amended by the directive 93/68/EEC"**

**89/336/EEC**

**"Directive on the approximation of the laws of the Member States relating to electromagnetic compatibility amended by the directives 91/263/EEC, 92/31/EEC, 93/68/EEC and 93/97/EEC"**

The accordance is proved by the observance of the following standards:

<b>L V E M C</b>	<b>Safety</b>	IEC/EN 61010-1:1992/93 IEC/EN 61010-2-031	IEC 61010-1:1992/300 V CATIII Pol. D. 2 IEC 1010-2-031
	<b>Emissions</b>	EN 61000-6-4	EN 55011 Class B
	<b>Immunity</b>	EN 61000-6-2	Group standard

**Graz, October 14, 2008**

Place / Date of the CE-marking

Dipl.-Ing. Roland Jeutter / Managing director

# Notes

---