



DEWETRON

▼

DEWE3-PA8

TECHNICAL REFERENCE MANUAL

▼

WELCOME TO THE WORLD OF DEWETRON!

Congratulations on your new device! It will supply you with accurate, complete and reproducible measurement results for your decision making.

Look forward to the easy handling and the flexible and modular use of your DEWETRON product and draw upon more than 30 years of DEWETRON expertise in measurement engineering.



ISO9001



THE MEASURABLE DIFFERENCE.

Copyright © DEWETRON GmbH

This document contains information which is protected by copyright. All rights are reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

All trademarks and registered trademarks are acknowledged to be the property of their owners.

Thank you!

Thank you very much for your investment in DEWETRON's unique data acquisition systems. These are top-quality instruments which are designed to provide you years of reliable service. This guide has been prepared to help you get the most from your investment, starting from the day you take it out of the box, and extending for years into the future.

This guide includes important startup notes, as well as safety notes and information about keeping your DEWETRON system in good working condition over time.

We strongly suggest that you read this entire manual, especially the safety and care sections, as well as to avoid damaging your DEWETRON system.

What is the DEWE3-PA8?

A DEWETRON DEWE3-PA8 Power Analyzer is the high-speed solution for the simultaneous analysis of several motors, converters or complete drive trains. The instrument offers 8 slots for user exchangeable TRION/TRION3™ series modules and with the dedicated TRION3-1810M-POWER-4 high-speed module and the capability for calculation of power parameters even for polyphase motors (up to 9 phases), turn the DEWE3-PA8, with high-speed PXI Express technology, into a multi power analyzer.

▼

PREFACE

Notes

Content

General Information, Safety Instructions	7
Training	7
Calibration	7
Support	7
Service/Repair Policy.....	7
Warranty Information	8
Printing History	8
Safety conventions	9
General safety and hazard warnings for all DEWETRON systems	10
Maintenance	13
Windows updates and antivirus/security software	14
Problematic network stacks	14
Environmental Considerations	14
Main System	15
DEWE3-PA8 at a glance	15
Configuration examples with TRION3-1810M-POWER-4 module	19
DEWE3 / TRION™ / TRION3™ hardware compatibility	21
Synchronization examples.....	21
Installing a TRION™/TRION3™ module into the DEWE3-PA8	23
Touchscreen gestures	24
TRION3-1810M-POWER-4	25
Module specifications	25
Signal connection	29
Exchanging current modules	30
Block diagram.....	31
Connection examples	33
Bessel/Butterworth filter characteristics for Power Analysis	36
Main System	37
System specifications	37
Power supply	38
Sensor power supply.....	39
Maintenance	40
Cooling considerations.....	41
Dimensions	42
CE-Certificate of conformity	C1

▼

TABLE OF CONTENT

Training

DEWETRON offers training at various offices around the world several times each year. DEWETRON headquarters in Austria have a very large and professional conference and seminar center, where training classes are conducted on a regular basis starting with sensors and signal conditioning, A/D technology and software operation. For more information about training services, please visit:

<http://www.dewetron.com/services/dewetron-academy/>

Dewetron Inc. in the USA also has a dedicated training facility connected to its headquarters, located in Rhode Island. For more information about training services in the US, please visit:

<http://www.dewetron.us/service-support/system-training-usa/>

Calibration

Every instrument needs to be calibrated at regular intervals. The standard norm across nearly every industry is annual calibration. Before your DEWETRON data acquisition system is delivered, it is calibrated at our DEWETRON headquarter. Each of this system is delivered with a certificate of compliance with our published specifications. Detailed calibration reports from our calibration system are available for purchase with each order. We retain them for at least one year, so calibration reports can be purchased for up to one year after your system was delivered.

Support

DEWETRON has a team of people ready to assist you if you have any questions or any technical difficulties regarding the system. For any support please contact your local distributor first or DEWETRON directly.

For Asia and Europe, please contact:

DEWETRON GmbH
Parkring 4
8074 Grambach
AUSTRIA
Tel.: +43 316 3070
Fax: +43 316 307090
Email: support@dewetron.com
Web: <http://www.dewetron.com>

The telephone hotline is available
Monday to Friday between
08:00 and 17:00 CET (GMT +1:00)

For the Americas, please contact:

DEWETRON, Inc. (HQ USA)
2850 South County Trail, Unit 1
East Greenwich, RI 02818
U.S.A.
Tel.: +1 401 284 3750
Toll-free: +1 866 598 3393
Fax: +1 401 284 3755
Email: us.support@dewetron.com
Web: <http://www.dewetron.us>

The telephone hotline is available
Monday to Friday between
08:00 and 4:30 EST

Service/Repair Policy

We are very sorry that your DEWETRON system is not operating properly. Our team is here to ensure that your DEWETRON product is returned to peak performance as quickly as possible.

Please help us to help you by following the RMA policy.

Some problems can be solved remotely by our support team. To facilitate a quicker resolution to the problem and save unnecessary shipping costs, we ask you to first have your problem investigated by our technical support before sending your product. Contact details for our support can be found on our [website](#). Please describe the error accurately and with as much detail as possible. This helps expedite the repair process.

If a repair is necessary, please complete our [online RMA form](#). You will then receive an RMA (Return Material Authorization) number and detailed instructions that identify where to ship the damaged product.

Please note: Products arriving at our repair department without RMA require follow-up calls and investigation, which lead to longer turnaround. Only the team of DEWETRON is allowed to perform any kinds of repairs to your system to assure a safe and proper operation in future.



Any spare parts (screws, backplanes, cables,...) must be obtained from DEWETRON only.

NOTICE

The information contained in this document is subject to change without notice.

DEWETRON GmbH (DEWETRON) shall not be liable for any errors contained in this document. DEWETRON MAKES NO WARRANTIES OF ANY KIND WITH REGARD TO THIS DOCUMENT, WHETHER EXPRESS OR IMPLIED. DEWETRON SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. DEWETRON shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any other legal theory, in connection with the furnishing of this document or the use of the information in this document.

Warranty Information

A copy of the specific warranty terms applicable to your DEWETRON product and replacement parts can be obtained from your local sales and service office.

Restricted Rights Legend

Use austrian law for duplication or disclosure.

DEWETRON GmbH
Parkring 4
A-8074 Grambach / Austria

TRION™ is a trademark of DEWETRON GmbH.

Any other trademarks and registered trademarks are acknowledged to be the property of their owners.

Printing History

Please refer to the page bottom for printing version.

Copyright © DEWETRON GmbH.

This document contains information which is protected by copyright. All rights are reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

Safety conventions



Observe precautions for handling electrostatic sensitive devices!



This icon denotes a caution, which advises you of precautions to take to avoid injury, data loss, or a system crash. When this symbol is marked on the product, refer to the technical reference manual.



Indicates hazardous voltages.



Indicates the chassis terminal

WARNING *Calls attention to a procedure, practice, or condition that could cause bodily injury or death.*

CAUTION *Calls attention to a procedure, practice, or condition that could possibly cause damage to equipment or permanent loss of data.*

WARNINGS

The following general safety precautions must be observed during all phases of operation, service, and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the product. DEWETRON GmbH assumes no liability for the customer's failure to comply with these requirements.

SAFETY INSTRUCTIONS

Your safety is our primary concern! Please be safe!



General safety and hazard warnings for all DEWETRON systems

- > Use this system under the terms of the specifications only to avoid any possible danger. If the unit is used in a manner not specified by the manufacturer the protection can be impaired!
- > This product is intended for use in industrial locations. As a result, this product may cause interference if used in residential areas. Such use must be avoided unless the user takes special measures to reduce electromagnetic emissions to prevent interferences to the reception of radio and television broadcasts.
- > Maintenance will be executed by qualified staff only.
- > During the use of the system, it might be possible to access another parts of a more comprehensive system. Please read and follow the safety instructions provided in the manuals of all other components regarding warning and security advices for using the system.
- > With this product, only use the power cable delivered or defined for the host country.
- > DO NOT connect or disconnect sensors, probes or test leads, as these parts are connected to a voltage supply unit.
- > The system is grounded via a protective conductor in the power supply cord. To avoid electric shocks, the protective conductor has to be connected with the ground of the power network. Before connecting the input or output connectors of the system, make sure that there is a proper grounding to guarantee potential free usage. For countries, in which there is no proper grounding, please refer to your local legally safety regulations for safety use.

DC systems: Every DC system has a grounding connected to the chassis (yellow/green safety banana plug).

- > Please note the characteristics and indicators on the system to avoid fire or electric shocks. Before connecting the system, please carefully read the corresponding specifications in the product manual.
- > The inputs are not, unless otherwise noted (CATx identification), for connecting to the main circuits of category II, III and IV. The measurement category can be adjusted depending on module configuration.
- > The power cord separates the system from the power supply. Do not block the power cord, since it has to be accessible for the users.
- > Supply overvoltage category is II.
- > DO NOT use the system if equipment covers or shields are removed.
- > If you assume the system is damaged, get it examined by authorised personnel only.
- > Any use in wet rooms, outdoors or in adverse environmental condition is not allowed!
Adverse environmental conditions are:
 - > Moisture or high humidity
 - > Dust, flammable gases, fumes or dissolver
 - > Thunderstorm or thunderstorm conditions (except assembly PNA)
 - > Electrostatic fields, et cetera.
- > Any direct voltage output is protected with a fuse against short cut and reverse-polarity, but is NOT galvanically isolated (except it is explicit marked on the system).
- > The system must be connected and operated to an earthed wall socket at the AC mains power supply only (except for DC systems).
- > Any other use than described above may damage your system and is attended with dangers like shortcut, fire or electric shocks.

SAFETY INSTRUCTIONS

- > The whole system must not be changed, rebuilt or opened (except for changing TRION™ modules).
 - > If you assume a more riskless use is not provided anymore, the system has to be rendered inoperative and should be protected against inadvertent operation. It is assumed that a more riskless operation is not possible anymore, if
 - > the system is damaged obviously or causes strange noises.
 - > the system does not work anymore.
 - > the system has been exposed to long storage in adverse environmental.
 - > the system has been exposed to heavy shipment strain.
 - > DO NOT touch any exposed connectors or components if they are live wired. The use of metal bare wires is not allowed. There is a risk of short cut and fire hazard!
 - > Warranty void if damages caused by disregarding this manual. For consequential damages NO liability will be assumed!
 - > Warranty void if damages to property or persons caused by improper use or disregarding the safety instructions.
 - > Unauthorized changing or rebuilding the system is prohibited due to safety and permission reasons (CE). Exception: changing DAQP/PAD/HSI/TRION™/TRION3™ modules.
 - > The assembly of the system is equivalent to protection class I. For power supply, only the correct power socket of the public power supply must be used, except the system is DC powered.
 - > Be careful with voltages $>25 V_{AC}$ or $>35 V_{DC}$! These voltages are already high enough in order to get a perilous electric shock by touching the wiring.
 - > Unless otherwise stated, maximum input voltage for measuring cards are $70 V_{DC}$ and $46.7 V_{PEAK}$.
 - > The product heats during operation. Make sure there is adequate ventilation. Ventilation slots must not covered!
 - > Only fuses of the specified type and nominal current may be used. The use of patched fuses is prohibited.
 - > Prevent using metal bare wires! Risk of short cut and fire hazard!
 - > DO NOT use the system before, during or shortly after a thunderstorm (risk of lightning and high energy overvoltage). An advanced range of application under certain conditions is allowed with therefore designed products only. For details please refer to the specifications.
 - > Make sure that your hands, shoes, clothes, the floor, the system or measuring leads, integrated circuits and so on, are dry.
 - > DO NOT use the system in rooms with flammable gases, fumes or dust or in adverse environmental conditions.
 - > Avoid operation in the immediate vicinity of:
 - > high magnetic or electromagnetic fields
 - > transmitting antennas or high-frequency generators
- For exact values please refer to enclosed specifications.
- > Use measurement leads or measurement accessories aligned to the specification of the system only. Fire hazard in case of overload!
 - > Do not switch on the system after transporting it from a cold into a warm room and vice versa. The thereby created condensation may damage your system. Acclimatise the system unpowered to room temperature.
 - > Do not disassemble the system! There is a high risk of getting a perilous electric shock. Capacitors still might be charged, even the system has been removed from the power supply.

SAFETY INSTRUCTIONS

- > Direct exposure of any DEWETRON product to strong sunlight or other heat radiation shall be prevented, as this could excessively heat up the product and lead to permanent damage of the product.
- > The electrical installations and equipments in industrial facilities must be observed by the security regulations and insurance institutions.
- > The use of the measuring system in schools and other training facilities must be observed by skilled personnel.
- > The measuring systems are not designed for use at humans and animals.
- > Please contact a professional if you have doubts about the method of operation, safety or the connection of the system.
- > Please be careful with the product. Shocks, hits and dropping it from already lower level may damage your system. For exact values please refer to enclosed specifications.
- > Please also consider the detailed technical reference manual as well as the security advices of the connected systems.

This product has left the factory in safety-related flawless and proper condition.

In order to maintain this condition and guarantee safety use, the user has to consider the security advices and warnings in this manual.

EN 61326-3-1:2008

IEC 61326-1 applies to this part of IEC 61326 but is limited to systems and equipment for industrial applications intended to perform safety functions as defined in IEC 61508 with SIL 1-3.

The electromagnetic environments encompassed by this product family standard are industrial, both indoor and outdoor, as described for industrial locations in IEC 61000-6-2 or defined in 3.7 of IEC 61326-1. Equipment and systems intended for use in other electromagnetic environments, for example, in the process industry or in environments with potentially explosive atmospheres, are excluded from the scope of this product family standard, IEC 61326-3-1.

Devices and systems according to IEC 61508 or IEC 61511 which are considered as “operationally well-tried”, are excluded from the scope of IEC 61326-3-1.

Fire-alarm and safety-alarm systems, intended for protection of buildings, are excluded from the scope of IEC 61326-3-1.

Maintenance

The information in this section is designed for use by qualified service personal.

Service interval:

Clean dust from the chassis exterior/interior and exchange filter foam based on the operating environment.

Cleaning:

Clean surface of the chassis with dry lintfree cloth.

Use a dry velocity stream of air to clean the chassis interior.



- > Disconnect all cables before servicing the unit!
- > Many components within the chassis are sensitive to static discharge damage. Always wear a ground wrist strap and service the unit only in static-free environment.
- > Do not use harsh chemical cleaning agents!

GENERAL INFORMATION

CAUTION

- > The system BIOS is protected by password. Any change in the BIOS may cause a system crash. When the system is booting, do not press ESC-button on keyboard. This may clear the BIOS settings and cause system faults.
- > Any change in the file structure as deleting or adding files or directories might cause a system crash.
- > Before installing software updates contact DEWETRON or your local distributor. Use only software packages which are released by DEWETRON. Further informations are also available in the internet (<http://www.dewetron.com>).
- > After power off the system wait at least 10 seconds before switching the system on again. Otherwise the system may not boot correct. This prolongs also the life of all system components.

Windows updates and antivirus/security software

Before installing Windows software updates consult with DEWETRON for compatibility guidance. Please also keep in mind that the use of any antivirus or other security software may slow down your system and may cause data loss.

Problematic network stacks

Often intrusive IT software or network processes can interfere with the primary function of the DEWETRON system: to record data. Therefore we recommend strongly against the installation of IT/MIS software and running their processes on any DEWETRON data acquisition system, and cannot guarantee the performance of our systems if they are so configured.



Environmental Considerations

Information about the environmental impact of the product.

Product End-of-Life Handling

Observe the following guidelines when recycling a DEWETRON system:

System and Components Recycling

Production of these components required the extraction and use of natural resources. The substances contained in the system could be harmful to your health and to the environment if the system is improperly handled at it's end of life! Please recycle this product in an appropriate way to avoid an unnecessary pollution of the environment and to keep natural resources.


This symbol indicates that this system complies with the European Union's requirements according to Directive 2012/19/EU on waste electrical and electronic equipment (WEEE). Please find further information about recycling on the DEWETRON website www.dewetron.com

Restriction of Hazardous Substances

This product has been classified as Monitoring and Control equipment, and is outside the scope of the 2011/65/EU RoHS Directive. This product is known to contain lead.

DEWE3-PA8 at a glance

- | | | | | | |
|---|---|----|--|----|--|
| 1 | 11.6" multi-touch display | 10 | Power switch for redundant SENSOR supply | 20 | Power supply connectors for current clamps |
| 2 | Power on/off switch | 11 | PS/2 interface connector (mouse) | 21 | TRION™/TRION3™ series module slots |
| 3 | LED display for load of current clamps | 12 | PS/2 interface connector (keyboard) | 22 | Audio interface |
| 4 | USB 2.0 interface connectors | 13 | Display port connectors | 23 | Dual LAN GBit connectors |
| 5 | USB 3.1 GEN1 interface connectors | 14 | Main power supply input connector | 24 | USB 3.1 GEN2 interface connectors |
| 6 | Intake vent and filter pad | 15 | LED for main power supply | 25 | RS-232 interface connector (COM1) |
| 7 | HDD/SSD drive bay for high speed drives | 16 | Main power switch | 26 | DVI interface connector |
| 8 | HDD/SSD drive bay for operating system and application software | 17 | TRION™-SYNC-BUS | | |
| 9 | Power supply input connector for redundant SENSOR supply | 18 | EPAD2 interface connector | | |
| | | 19 | Chassis terminal | | |

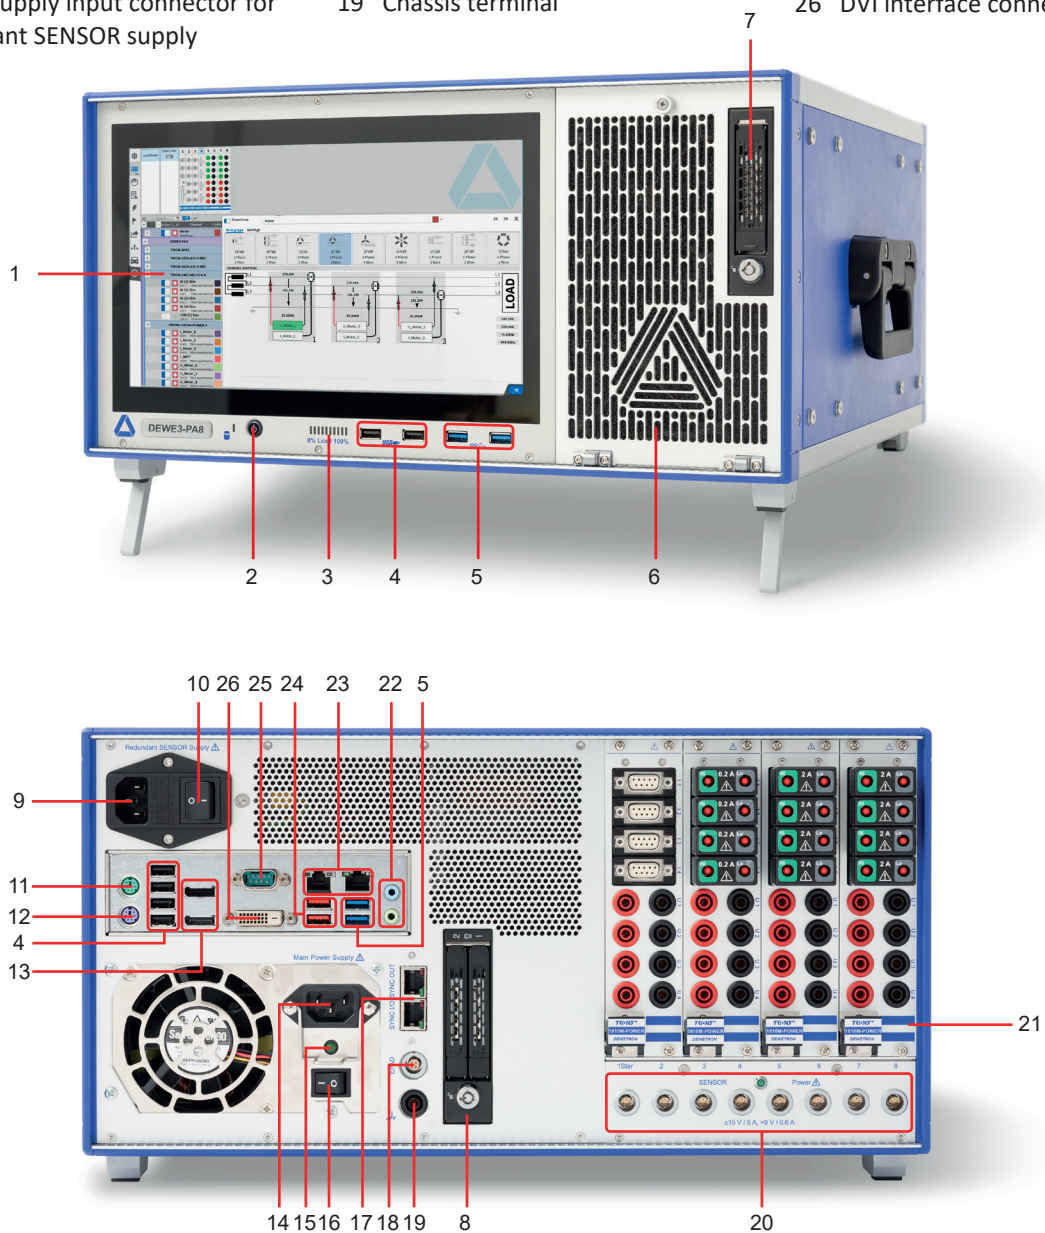

Note: The amount and location of the connectors might vary from system to system and depends on system configuration

MAIN SYSTEM

1 11.6" multi-touch display

The DEWE3-PA8 is equipped with a bright 11.6" wide screen multi-touch panel (1920 x 1080, full HD) to control the instrument. Familiar gestures such as pinch and zoom are fully implemented within the operating system and will be described in chapter '[Operating with the touchscreen](#)'.

2 Power on/off switch

The power on/off switch at the front of the system is used to switch on the system. It only works if the main power switch (14) is switched to position 'I'.

3 LED display for load of current clamps

The 10 Segment LED display indicates the load attached to the power supply connectors for current clamps (18) at the rear of the instrument. One LED segment equals 10 %. When exceeding 80 % during active power measurement, consider using an additional DW2-CLAMP-DC-POWER-8 box to split the power (e.g. when using 8 * PA-IT-1000). Further information refer to chapter '[Sensor power supply](#)'.



4 USB2.0 interface connectors (Universal Serial Bus, 6x)

The USB2.0 interface connectors meet standard USB pin assignment.

5 USB3.1 interface connectors (Universal Serial Bus, 4x)

The USB3.1 Gen 1 interface connectors meet standard USB pin assignment.

6 Intake vent and filter pad

Intake vent and filter pad. Further information on how to remove filter pad please refer to chapter '[Maintenance](#)'.

7 HDD/SSD drive bay for high speed drives

The DEWE3-PA8 comes with a preinstalled 1 TB HDD dedicated for data storage (drive bay at the front).

Optional upgrades:

> SSD-PCIe-1T-2T: Upgrade from 1 TB to 2 TB industrial grade, PCIe attached solid state disk

8 HDD/SSD drive bay for operating system

Additionally to the high speed drive at the front, the DEWE3-PA8 is equipped with a 120 GB SSD for operating system and application software (drive bay at the rear panel).

CAUTION: Information for systems with SSD drives



Wait for 40 seconds after big files were deleted. The HDD activity LED is lit to indicate that the SSD is deleting the file and TRIM/garbage collection is in progress. Wait until the process is finished before you start to write the next file.

9 Power supply input connector for redundant SENSOR supply

Input range: 100 .. 240 VAC (power cord included).

For details see chapter '[Power supply](#)'.

10 Power switch for redundant SENSOR supply (current clamps)

This switch turns on/off the power supply for the current clamp connectors.

Further information refer to chapter '[Power supply](#)'.

11 PS/2 interface connector (mouse)

To connect an external PS/2 mouse to the system. The connector meets standard pin assignment.

12 PS/2 interface connector (keyboard)

To connect a keyboard to the system. The connector meets standard pin assignment.

13 Display port connectors

Additional to the DVI connector interface the DEWE3-PA8 supports two display port connectors with standard pin assignment.

14 Main power supply input connector

Input range: 100 .. 240 VAC (power cord included).

For details see chapter '[Power supply](#)'.

15 LED for main power supply

The LED indicates if the main power supply is switched on or off.

16 Main power switch


The main power switch separates the system from the grid. The Power on/off switch (2) only works if the main power switch (14) is switched to position 'I'.

17 TRION™-SYNC-BUS

The TRION™-SYNC-BUS allows easy high-speed channel expansion with TRIONet front-ends or distributed high channel-count systems featuring OXYGEN with software option OXY-OPT-NET.

18 EPAD2 interface connector (LEMO)

To connect EPAD2 modules to the instrument.

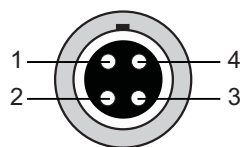

Lemo EGG.1B.304

Pin assignment

1: RS-485 A

2: RS-485 B

3: +12 V

4: GND

Shield is connected on housing

Mating connector:

LEMO FGG.1B.304.CLAD52Z (for cable diameter 4.1 to 5.0 mm)

LEMO FGG.1B.304.CLAD62Z (for cable diameter 5.1 to 6.0 mm)

19 Chassis terminal


For some kind of measurements, it's necessary to provide the system with an additional ground connection.

MAIN SYSTEM

20 Power supply connectors for current clamps

These connectors support $\pm 15\text{ V}$ / $+9\text{ V}$ current power probe supply for connecting current clamps. These connectors are powered by a separate power supply at the rear panel of the instrument.

Input range: 100 .. 240 VAC (power cord included).

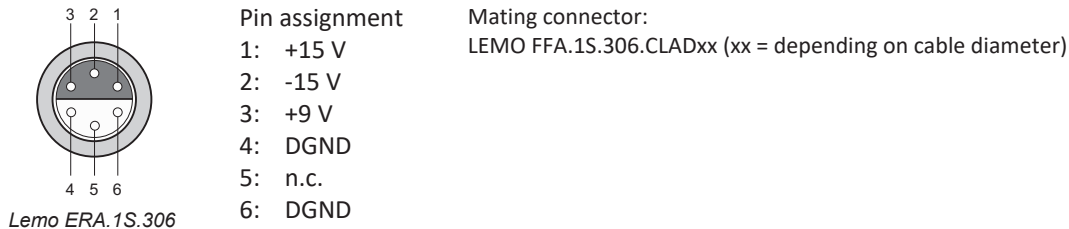

Further information refer to chapter '[Sensor power supply](#)'.

21 TRION3™/TRION™ series module slots

8x slots for TRION3™/TRION™ series modules. The DEWE3-PA8 supports all modules.

For details see chapter '[DEWE3 / TRION™ / TRION3™ hardware compatibility](#)'.

22 Audio I/O interface

Line In / Line Out.

23 Dual LAN GBit connector


The DEWE3-PA8 supports 10/100/1000 Dual LAN with standard RJ45 connector.

24 USB3.1 interface connectors (Universal Serial Bus, 2x)


The USB3.1 Gen 2 interface connectors meet standard USB pin assignment.

25 RS-232 interface connector (COM1)

The RS-232 interface connector (male) is configured as standard RS-232 interface COM 1 and can be used for mouse or other peripheral units.



9-pin SUB-D connector (male)

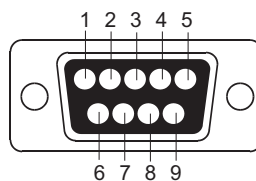

Schematic

Pin assignment

- 1: DCD (Data Carrier Detector)
- 2: RD (Received Data)
- 3: TD (Transmitted Data)
- 4: DTR (Data Terminal Ready)
- 5: GND (Ground)
- 6: DSR (Data Set Ready)
- 7: RTS (Request To Send)
- 8: CTS (Clear To Send)
- 9: RI (Ring Indicator)

26 DVI connector


The DVI connector meets standard DVI pin assignment.

Configuration examples with TRION3-1810M-POWER-4 module

In order to tap the full potential of the DEWE3-PA8, DEWETRON developed the highspeed TRION3-1810M-POWER-4 module which can be easily installed into the instrument. The modular design of the TRION3-1810-POWER-4 module allows for flexible measurement of current, voltage or power with input ranges of up to $1000\text{ V}_{\text{RMS}} / 20\text{ A}_{\text{RMS}}$ respectively. The following page will give you an overview of typical configuration examples with the TRION3-1810M-POWER-4 module.


Standard 4-phase power analyzer with direct input

This is the standard configuration of a DEWE3-PA8 for 4-phase (1x 3-phase AC and 1x 1-phase DC) applications.

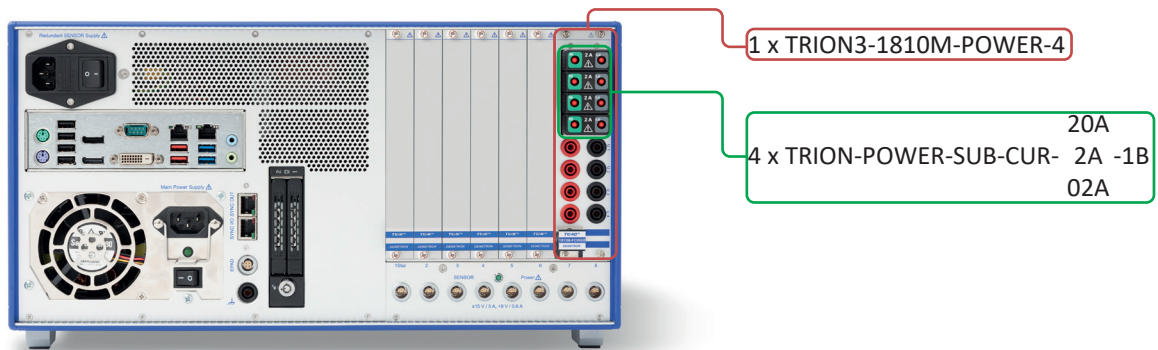


Standard 4-phase power analyzer with clamp input

Configuration for use with current clamps with voltage output for 4-phase applications.

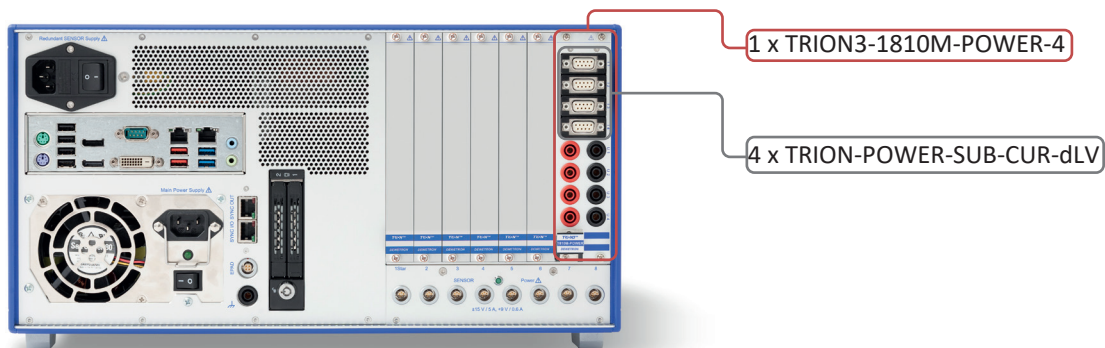

Standard 4-phase power analyzer with mixed input


Configuration for a mixed use of direct inputs and clamp inputs for 4-phase applications.

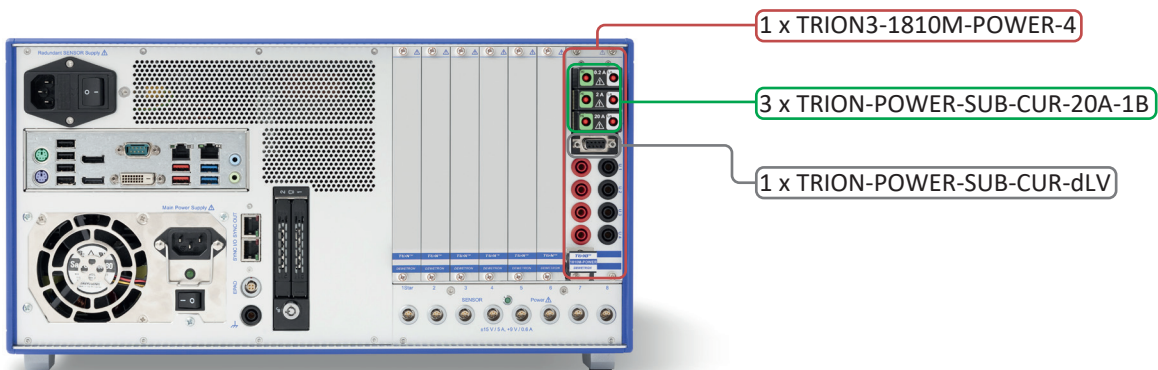

MAIN SYSTEM



Standard 4-phase power analyzer with mixed input

Advanced configuration for motor analysis with torque and speed inputs as well as auxiliary high-speed analog inputs for voltage and acceleration analysis.

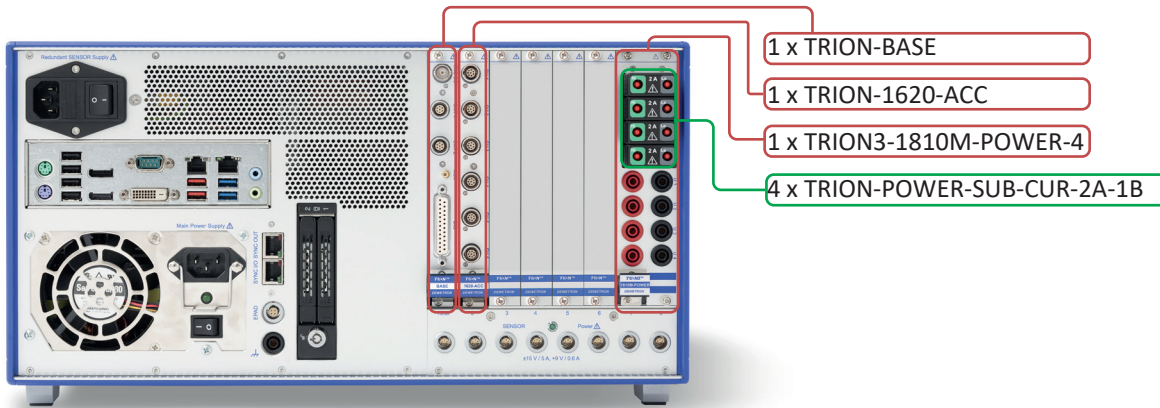

Absolute time synchronization option

With this option, the power analyzer can operate synchronized with other measurement devices with an absolute time reference.

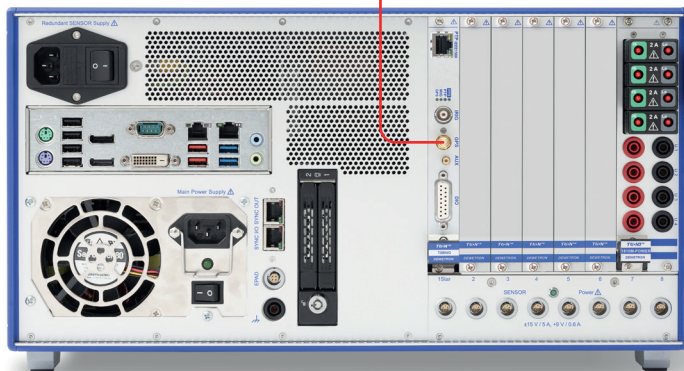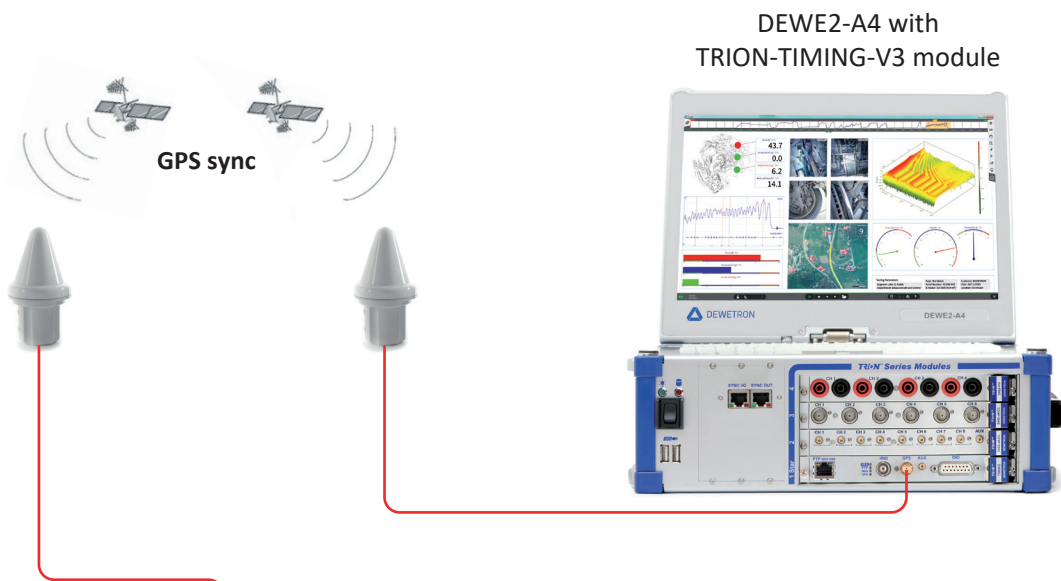

1 x TRION-BASE for IRIG-B timing source
 or
 1 x TRION-TIMING-V3 for IRIG-B, GPS, PPS or PTP (IEEE 1588) timing source

1 x TRION3-1810M-POWER-4

DEWE3 / TRION™ / TRION3™ hardware compatibility

In 2019, DEWETRON introduced a new family of data acquisition systems, the DEWE3 and TRION3™ express series. The DEWE3-PA8 chassis feature a PXIe hybrid backplane and supports any TRION3™ series modules. It is also backward compatible and does support all TRION™ series modules from previous generation. The illustrations below will give you an overview of the hardware compatibility and it's limitations:

DEWE3-PA8

TRION3™ series module
(e.g. TRION3-1810M-POWER-4)

max. data throughput up to 1 GB/s

DEWE3-PA8

TRION series module
(e.g. TRION-1820-POWER-4)

Data throughput up to 100 MB/s

Synchronization examples

The TRION-SYNC-BUS (SYNC I/O, SYNC OUT) is used to synchronize two or more DEWE3/DEWE2 systems with up to 100 m distance between each node. The TRION-SYNC-BUS consists of two RJ-45 sockets. One socket being a synchronization OUT, whilst the other one could either be used as synchronization IN or OUT.


LED indication:

	SYNC OUT	SYNC I/O
RED (stable)	Clock detected	Clock detected / Receiving clock
GREEN (stable)	Acquisition running	Acquisition running


Depending on the usage of the SYNC I/O (input or output) the LED indicates if the system clock is available or received correctly from another system. The green LED indicates that the acquisition is running. If the acquisition stops the LED will be off.

MAIN SYSTEM


Channel expansion with TRIONet

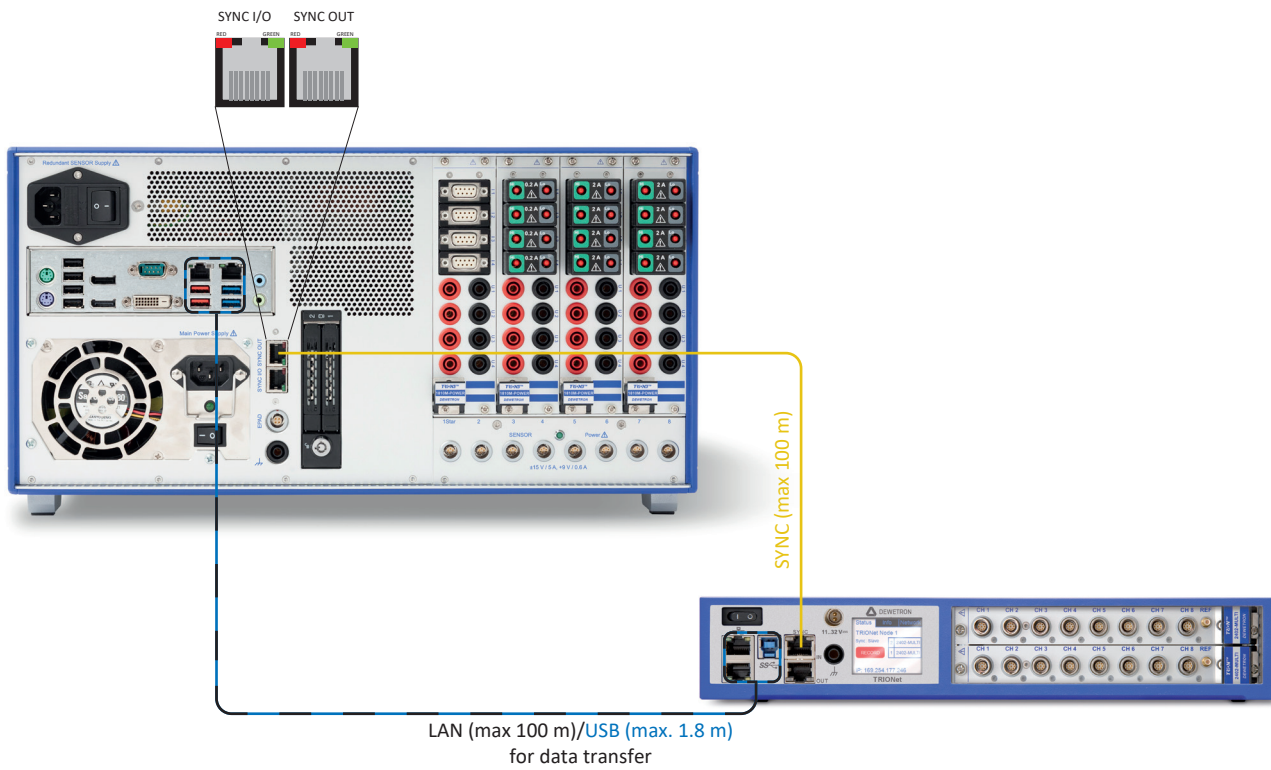


Network with multiple systems

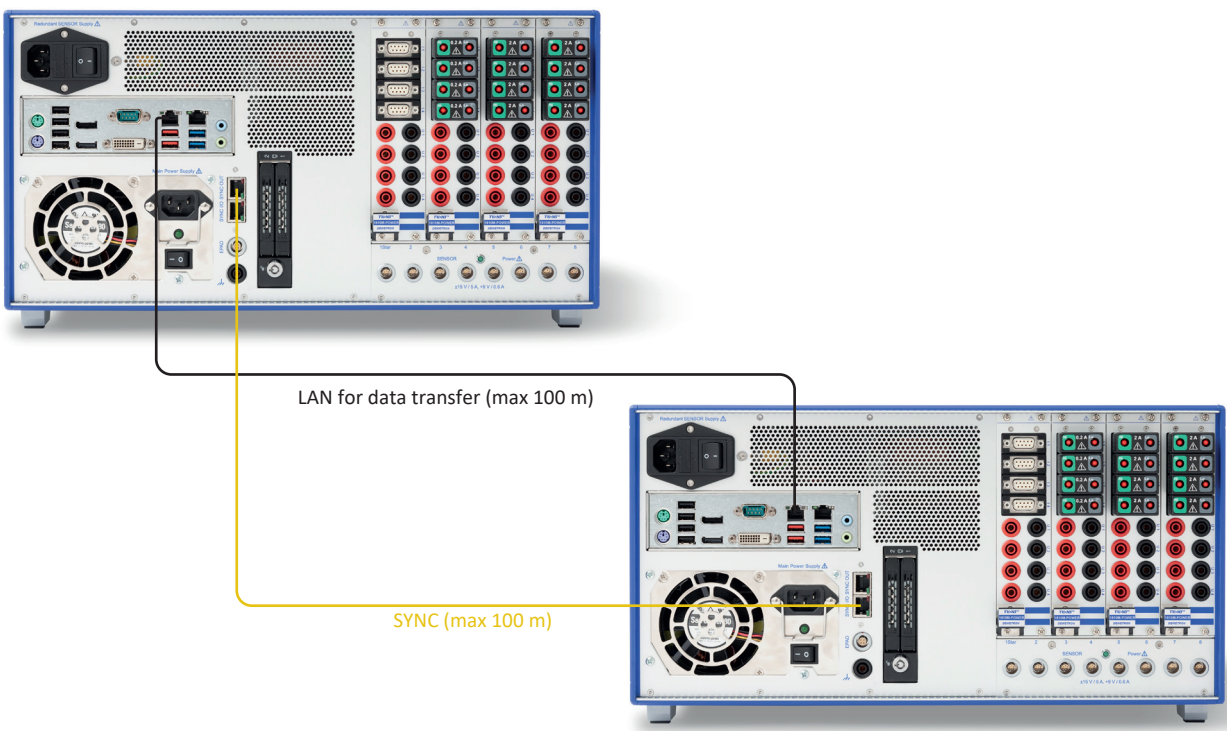

Installing a TRION™/TRION3™ module into the DEWE3-PA8

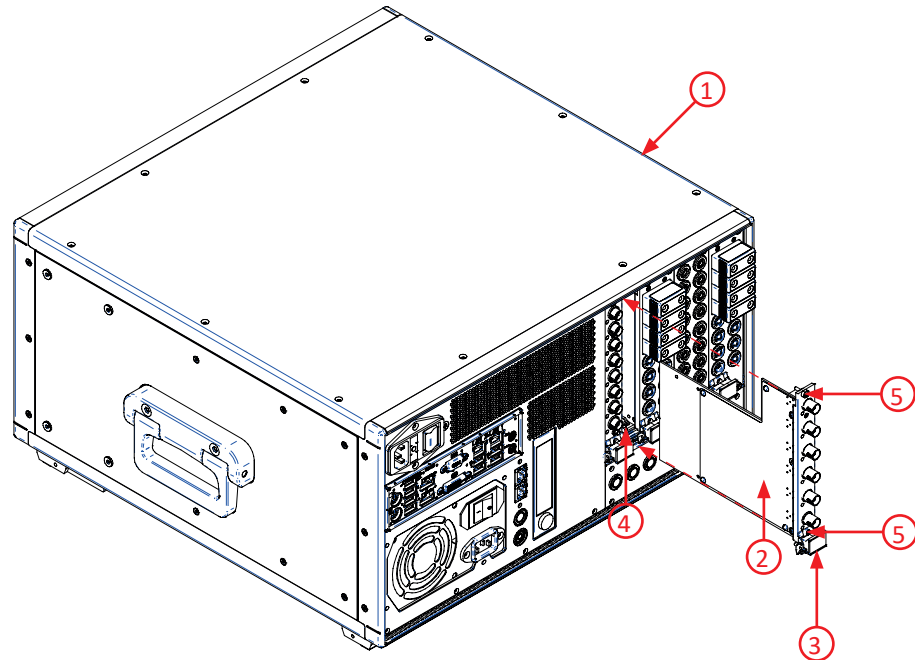

- 1 DEWE3-PA8 chassis
- 2 TRION™/TRION3™ series module
- 3 Injector/ejector handle
- 4 Module guides
- 5 Mounting screws

Step 1:  Proper ESD precautions must be taken to avoid any damage to the unit.

Step 2: Power off and unplug all connected cables including sensors from the DEWE3-PA8 and TRION™/TRION3™ series modules.

Step 3: Identify a supported TRION™/TRION3™ peripheral slot. Some modules require a TRION™ STAR-slot.

Step 4: Remove the filler panel of an unused TRION™ peripheral or STAR-slot.

Step 5: Place the module edges of the TRION™/TRION3™ modules into the module guides at the top and bottom of the chassis.

Step 6: Insert the TRION™/TRION3™ module to the rear of the chassis until a resistance appears.

Step 7: Pull up on the injector/ejector handle to latch the device

Step 8: Secure the installed TRION™/TRION3™ front panel to the chassis using the mounting screws.

WARNING: *Unused TRION slots must not remain uncovered! Make sure to reinstall the filler panels of unused TRION™ slots to guarantee proper cooling of the installed modules. WARRANTY VOID if the modules overheat due to missing filler panels!*



MAIN SYSTEM


Operating with the Touchscreen

Touchscreen gestures

The DEWE3-PA8 is equipped with a bright 11.6" full HD wide screen multi-touch panel to control the DEWE3-PA8. You can use your fingers on the touchscreen, like you would on a smartphone. For example, drag the sidebar from the right side across the screen to open the channel setup.


Tap? Swipe? Here's a glossary of touch gestures that you can use with the DEWE3-PA8.

Tap

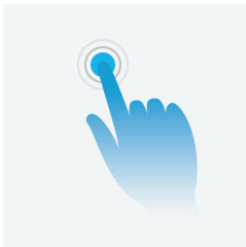


How to do it: Tap once on something.
What it does: Open, selects, or activates whatever you tap. Similar to clicking with a mouse.

Pinch or stretch

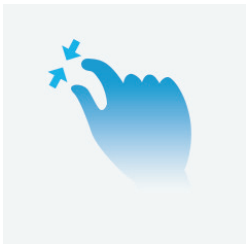


How to do it: Touch the screen with two fingers, and then move the fingers toward each other (pinch) or away from each other (stretch).
What it does: Zooms in or out of a graph or data.

Tap and hold

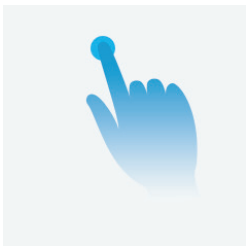

How to do it: Press your finger down and hold for about a second.
What it does: Rearranges objects on your main screen.

Swipe / Drag

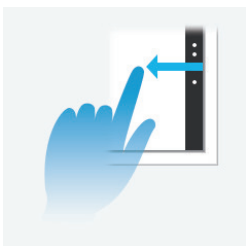


How to do it: Drag your finger on the screen.
What it does:
- Scrolls through recorded data (like scrolling with a mouse).
- Drags the sidebar from the right side across the screen to open the channel setup



Further information on how to operate with OXYGEN please find in the corresponding user manual available at: <https://ccc.dewetron.com/pl/oxygen>

TRION3™ module for 4-phase power analysis

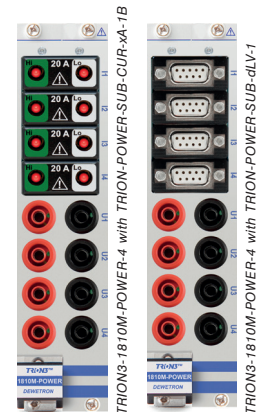- Channels: 4 power channels
- Sampling: up to 10 MS/s
- Resolution: 18-bit
- Voltage input: 1000 V_{RMS}
- Modular input: Current (CAT II): 0.2 A_{RMS} to 20 A_{RMS}
Voltage (not isolated): 5 V_{RMS} / 1 V_{RMS}
Voltage (CAT II): 600 V_{RMS} / 5 V_{RMS}












Module specifications

TRION3-1810M-POWER-4		
Input channels	4 Power channels, each with one voltage and one current input	
Resolution	18-bit	
Sample Rate	up to 10 MS/sec; 512 MByte onboard data buffer	
The following are all accuracy conditions referenced in this section: Temperature: 23±5°C, Humidity: 40 to 60 % RH, Input waveform: sine wave, Common mode voltage: 0 V, Line filter: Auto (8th order Butterworth), Sample rate: 10 MS/s, Resolution: 24 bit, Driver Version >= 3.7, Power factor: 1, After warm-up. After zero level, 12-month Accuracy ±(Reading error + Range error), Accuracy: Frequency (f) in [kHz]		
Fixed high-voltage inputs U1 .. U4 (permanently installed)		
	Input range	1000 V (±2000 V _{PEAK}) CF = 2
	Accuracy ¹⁾²⁾	DC: ±0.02 % of reading ±0.02 % of range 0.5 Hz to 1 kHz: ±0.03 % of reading 1 kHz to 5 kHz: ±0.15 % of reading 5 kHz to 10 kHz: ±0.35 % of reading 10 kHz to 50 kHz: ±0.6 % of reading 50 kHz to 300 kHz: ±(0.02 % * f) of reading
	Gain drift	20 ppm / °C
	Offset drift	5 mV / °C
	Typical THD	-95 dB
	CMRR	>85 dB @ 50 Hz; >60 dB @ 1 kHz; >40 dB @ 100 kHz
	Bandwidth	5 MHz
	Safety	CAT IV 600 V / CAT III 1000 V
	Instantaneous maximum allowable input	4000 V _{PEAK} or 3000 V _{RMS} (1s)
	Continuous maximum allowable input	2000 V _{RMS} or 2000 V _{DC}
	Input resistance	5 MΩ; 2 pF
	Isolation (earth) resistance	100 GΩ; 2.5 pF
	Connector	Safety banana sockets
	¹⁾ add 0.02 % of reading with filter settings OFF ²⁾ below 1 % of range, add 10 ppm of range	
Interchangeable sub-modules (I1 .. I4)		
20 A module	TRION-POWER-SUB-CUR-20A-1B	
	Range	20 A (±40 A _{PEAK})
	Accuracy ¹⁾²⁾	DC: ±0.02 % of reading ±0.02 % of range ³⁾ 0.5 Hz to 1 kHz: ±0.03 % of reading 1 kHz to 5 kHz: ±0.15 % of reading 5 kHz to 10 kHz: ±0.35 % of reading 10 kHz to 50 kHz: ±(0.3 % + 0.05 % * f) of reading 50 kHz to 300 kHz: ±(0.10 % * f) of reading
	Safety	CAT II 600 V, unfused
	Bandwidth	300 kHz
	Connector	Safety banana sockets (male)
	Instantaneous maximum allowable input	50 A _{PEAK} or 40 A _{RMS} (1s)
	Continuous maximum allowable input	20 A _{RMS}
	Input resistance	2 mΩ
	¹⁾ For self-generated heat caused by current input, add 0.00008 * I ² % of reading + 15 * I ² μA to the current accuracy. 'I' is the current reading [A]. The influence from self-generated heat continues until the temperature of the shunt resistor inside the DEWE3-Chassis lowers even if the current input changes to a small value. ²⁾ below 1 % of range, add 50 ppm of range ³⁾ add 0.03 % of range with no zero level	

→ continued on next page ...




MAIN SYSTEM

continued from previous page ...

2 A module		TRION-POWER-SUB-CUR-2A-1B
	Range	2 A ($\pm 4 A_{PEAK}$)
	Accuracy ¹⁾	DC: $\pm 0.02\%$ of reading $\pm 0.02\%$ of range ²⁾ 0.5 Hz to 10 kHz: $\pm 0.03\%$ of reading 10 kHz to 30 kHz: $\pm 0.1\%$ of reading 30 kHz to 200 kHz: $\pm (0.015\% * f)$ of reading 200 kHz to 300 kHz: $\pm (0.1\% * f)$ of reading
	Safety	CAT II 600 V, unfused
	Bandwidth	300 kHz
	Connector	Safety banana sockets (male)
	Instantaneous maximum allowable input	$10 A_{PEAK}$ or $5 A_{RMS}$ (1s)
	Continuous maximum allowable input	$3 A_{RMS}$
	Input resistance	50 m Ω
¹⁾ below 1 % of range, add 25 ppm of range ²⁾ add 0.03 % of range with no zero level		
1 A module		TRION-POWER-SUB-CUR-1A-1B
	Range	1 A ($\pm 2 A_{PEAK}$)
	Accuracy ¹⁾	DC: $\pm 0.02\%$ of reading $\pm 80 \mu A^2)$ 0.5 Hz to 10 kHz: $\pm 0.03\%$ of reading 10 kHz to 30 kHz: $\pm 0.1\%$ of reading 30 kHz to 200 kHz: $\pm (0.015\% * f)$ of reading 200 kHz to 300 kHz: $\pm (0.1\% * f)$ of reading
	Safety	CAT II 600 V, unfused
	Bandwidth	300 kHz
	Connector	Safety banana sockets (male)
	Instantaneous maximum allowable input	$4 A_{PEAK}$ or $2 A_{RMS}$ (1s)
	Continuous maximum allowable input	$1.1 A_{RMS}$
	Input resistance	500 m Ω
¹⁾ below 1 % of range, add 25 ppm of range ²⁾ add 0.03 % of range with no zero level		
0.2 A module		TRION-POWER-SUB-CUR-02A-1B
	Range	0.2 A ($\pm 0.4 A_{PEAK}$)
	Accuracy ¹⁾	DC: $\pm 0.02\%$ of reading $\pm 0.02\%$ of range ²⁾ 0.5 Hz to 5 kHz: $\pm 0.03\%$ of reading 10 kHz to 30 kHz: $\pm 0.1\%$ of reading 30 kHz to 200 kHz: $\pm (0.015\% * f)$ of reading 200 kHz to 300 kHz: $\pm (0.1\% * f)$ of reading
	Safety	CAT II 600 V, unfused
	Bandwidth	300 kHz
	Connector	Safety banana sockets (male)
	Instantaneous maximum allowable input	$2 A_{PEAK}$ or $1 A_{RMS}$ (1s)
	Continuous maximum allowable input	$0.4 A_{RMS}$
	Input resistance	500 m Ω
¹⁾ below 1 % of range, add 25 ppm of range ²⁾ add 0.03 % of range with no zero level		
Clamp input module with high bandwidth		TRION-POWER-SUB-dLV-xV
 	TRION-POWER-SUB-dLV-5V range	5 V ($\pm 10 V_{PEAK}$) NOT ISOLATED 
	TRION-POWER-SUB-dLV-1V range	1 V ($\pm 2 V_{PEAK}$) NOT ISOLATED 
 	Accuracy	DC: 0.015 % of reading $\pm 200 \mu V$ 0.5 Hz to 10 kHz: 0.03 % of reading 10 kHz to 500 kHz: $\pm (0.006\% * f)$ of reading 500 kHz to 3000 kHz: $\pm (0.006\% * f)$ of reading
	Gain drift	10 ppm / °C
	Offset drift	10 μV / °C
	Typical THD	-100 dB
	Typical CMRR	>70 dB @ 50 Hz; >65 dB @ 10 kHz; >45 dB @ 100 kHz
	Bandwidth (-3dB)	5 MHz
	Isolation	None. Use with isolated current transducer!
	Common mode voltage	10 V _{DC}
	Overvoltage protection	$\pm 300 V_{DC}$
	Connector	DSUB-9
	Input impedance	5 M Ω ; 15 pF
	Sensor supply (+9 V)	max. 40 mA

continued on next page ...

continued from previous page ...

<p>Clamp input module</p> 	<p>TRION-POWER-SUB-dLV-1</p> <p>Range Accuracy¹⁾ 5 V ($\pm 10 V_{PEAK}$) NOT ISOLATED ⚠</p> <p>DC: ± 0.02 % of reading ± 0.02 % of range</p> <p>0.5 Hz to 5 kHz: ± 0.03 % of reading</p> <p>5 kHz to 30 kHz: $\pm (0.01 \% * f)$ of reading</p> <p>30 kHz to 50 kHz: $\pm (0.02 \% * f)$ of reading</p> <p>50 kHz to 100 kHz: $\pm (0.1 \% * f)$ of reading</p> <p>Typical THD -95 dB</p> <p>Typical CMRR 80 dB @ 50 Hz; 80 dB @ 1 kHz; 65 dB @ 10 kHz; 45 dB @ 100 kHz</p> <p>Safety Depending on connected clamp</p> <p>Absolute maximum voltage ± 30 V</p> <p>Bandwidth 100 kHz</p> <p>Connector DSUB-9</p> <p>Input resistance 1 MΩ</p> <p>Sensor supply (+9 V) max. 40 mA</p>
<p>¹⁾ below 1 % of range, add 10 ppm of range</p>	
<p>Voltage input 5 V (600 V isolated) module</p> 	<p>TRION-SUB-5V</p> <p>Range Accuracy 5 V ($\pm 10 V_{PEAK}$) CF=2</p> <p>DC: ± 0.02 % of reading ± 0.005 % of range</p> <p>0.5 Hz to 1 kHz: ± 0.03 % of reading</p> <p>1 kHz to 100 kHz: $\pm (0.02 \% * f)$ of reading</p> <p>100 kHz to 200 kHz: $\pm (0.04 \% * f)$ of reading</p> <p>Gain drift 20 ppm / °C</p> <p>Offset drift 1 μV / °C</p> <p>Typical THD -102 dB</p> <p>Typical CMRR >140 dB @ 50 Hz; >106 dB @ 10 kHz; >102 dB @ 100 kHz</p> <p>Bandwidth (-3dB) 300 kHz</p> <p>Rated voltage according to EN 61010-2-30 600 V CAT II</p> <p>Isolation 600 V_{RMS}; 35 kV/μs transient immunity</p> <p>Common mode voltage 600 V_{RMS}</p> <p>Transient immunity 35 kV/μs</p> <p>Overvoltage protection 600 V_{RMS} or 1000 V_{DC}</p> <p>Input impedance 5 MΩ; 22 pF</p> <p>Isolation (earth) resistance 100 GΩ; 4 pF (IN- to GND)</p> <p>Connector Safety banana sockets</p>
<p>Voltage input 600 V CATII module</p> 	<p>TRION-SUB-600V</p> <p>Range Accuracy 600 V ($\pm 1500 V_{PEAK}$) CF=2.5</p> <p>DC: ± 0.02 % of reading ± 0.005 % of range</p> <p>0.5 Hz to 10 kHz: ± 0.03 % of reading</p> <p>10 kHz to 100 kHz: $\pm (0.015 \% * f)$ of reading</p> <p>100 kHz to 200 kHz: $\pm (0.04 \% * f)$ of reading</p> <p>Gain drift 20 ppm / °C</p> <p>Offset drift 1 mV / °C</p> <p>Typical THD -105 dB</p> <p>typical CMRR >100 dB @ 50 Hz; >90 dB @ 1 kHz; >70 dB @ 10 kHz; >50 dB @ 100 kHz</p> <p>Bandwidth (-3dB) 300 kHz</p> <p>Rated voltage according to EN 61010-2-30 600 V CAT II</p> <p>Isolation 600 V_{RMS}; 35 kV/μs transient immunity</p> <p>Common mode voltage 600 V_{RMS}</p> <p>Transient immunity 35 kV/μs</p> <p>Overvoltage protection 1500 V_{PEAK} (1s) 1000 V_{RMS} or 1500 V_{DC}</p> <p>Input impedance 5 MΩ; 3.5 pF</p> <p>Isolation (earth) resistance 100 GΩ; 4 pF (IN- to GND)</p> <p>Connector Safety banana sockets</p>

continued on next page ...

MAIN SYSTEM

continued from previous page ...

Input impedance	DC: $\pm 0.03\%$ of reading $\pm 0.03\%$ of range ²⁾ 0.5 Hz to 1 kHz: $\pm 0.04\%$ of reading 1 kHz to 5 kHz: $\pm 0.2\%$ of reading 5 kHz to 10 kHz: $\pm 0.5\%$ of reading 10 kHz to 50 kHz: $\pm (0.5\% + 0.05\% * f)$ of reading
Influence of power factor	Add $0.01\% \times f/50 \times \sqrt{(1/PF^2-1)}$

¹⁾ voltage and current channel have a minimum input of 1 % of range, otherwise individual uncertainty have to be calculated
²⁾ add 0.03 % of range with no zero level

Typical Signal-to-noise ratio, Spurious free SNR, Effective number of Bits¹⁾

	Voltage input 2000 V			20 A module			2 A module			1 A module			0.2 A module			Clamp input module 10 V		
	SNR	SFDR ²⁾	ENOB ³⁾	SNR	SFDR ²⁾	ENOB ³⁾	SNR	SFDR ²⁾	ENOB ³⁾	SNR	SFDR ²⁾	ENOB ³⁾	SNR	SFDR ²⁾	ENOB ³⁾	SNR	SFDR ²⁾	ENOB ³⁾
Sample rate	[dB]	[dB]	[Bit]	[dB]	[dB]	[Bit]	[dB]	[dB]	[Bit]	[dB]	[dB]	[Bit]	[dB]	[dB]	[Bit]	[dB]	[dB]	[Bit]
0.1 kS/s	129	142	21.1	105	137	17.2	110	128	18.1	134	149	22.0	106	124	17.3	129	146	21.1
1 kS/s	126	139	20.6	100	130	16.3	94	118	15.4	128	149	21.0	90	115	14.7	119	131	19.5
10 kS/s	121	136	19.8	99	127	16.1	93	117	15.1	119	144	19.5	89	112	14.4	109	124	17.8
100 kS/s	113	135	18.5	94	123	15.4	93	116	15.1	109	137	17.8	88	112	14.3	99	119	16.2
1000 kS/s	103	128	16.9	88	112	14.3	92	116	15.0	99	134	16.2	86	109	13.9	94	115	15.3
2000 kS/s	85	106	13.8	87	110	14.2	92	116	15.0	98	130	16.0	86	109	13.9	92	114	15.0

¹⁾ LP Filter in auto mode
²⁾ SFDR excluding harmonics
³⁾ ENOB calculated from SNR


Additional specifications

Typical channel to channel phase mismatch (Voltage-Voltage, Current-Current, Voltage-Current)	<250 ns (0.1° @ 1 kHz, 0.005° @ 50 Hz)
Typical board-to-board phase mismatch same board type different board type	<250 ns (0.1° @ 1 kHz, 0.005° @ 50 Hz) ± 1 Sample or 0.2° @ 1 kHz (whichever is higher)
Low pass filter (-3 dB, digital and analog combined) Filter order & characteristics	100 Hz to 1 MHz freely programmable or OFF 2 nd , 4 th , 6 th , 8 th Bessel or Butterworth
Filter delay compensation	up to 15 μ s the group delay of the selected filter will be automatically compensated. This works for: 2 nd order filter 15 kHz to 1 MHz 4 th order filter 30 kHz to 1 MHz 6 th order filter 60 kHz to 1 MHz

Signal connection

Voltage with fixed installed inputs

High voltage input for line voltage measurement.

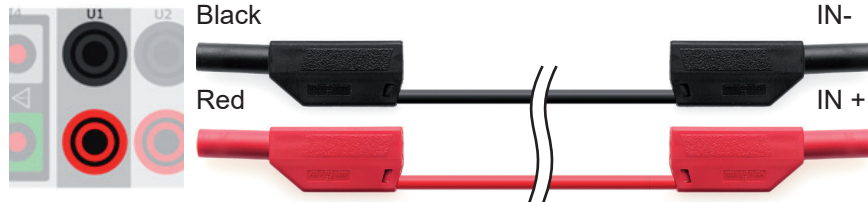

Voltage measurement up to ± 2000 V only with safety banana plug cords!


Voltage input module (TRION-SUB-xV)

This input is isolated and rated with CAT II 600 V. Modules with 5 V and 600 V are available.




Current input module (TRION-POWER-SUB-CUR-xA-1B)

Direct current input for measuring current directly. This input is isolated and rated with CAT II 600 V. Modules with 20 A, 2 A, 1 A and 0.2 A nominal current are available.

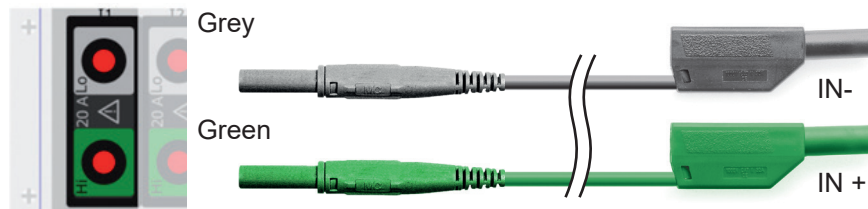

Clamp input module (TRION-POWER-SUB-dLV modules, for clamps ONLY)

NOT ISOLATED voltage input. This input can be used for isolated current clamps with voltage output.

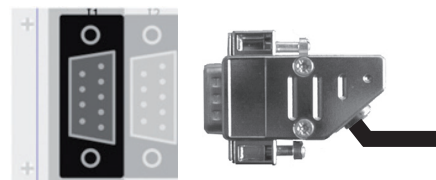

- Pin 1: TEDS
- Pin 2: IN+
- Pin 3: n.c.
- Pin 4: GND (not isolated)
- Pin 5: +9 V (40 mA max.)
- Pin 6: n.c.
- Pin 7: IN-
- Pin 8: n.c.
- Pin 9: -9 V (40 mA max.)




WARNING: *Those modules are not isolated! Do not connect any other appliances than isolated current transducers with voltage output.*

MAIN SYSTEM


Exchanging SUB-modules




Proper ESD precautions must be taken to avoid any damage to the unit.

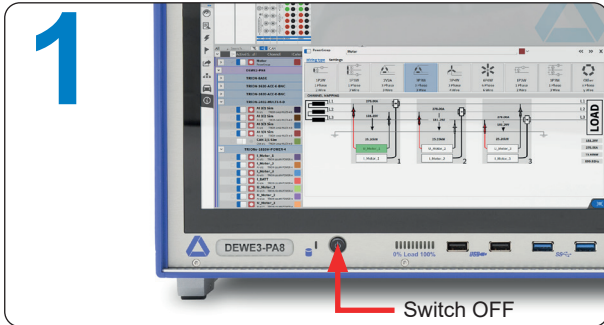


Switch off the instrument and unplug all connected cables including sensors from the TRION™ series modules.

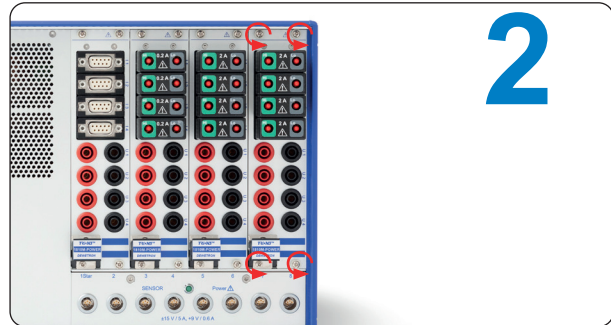


Loosen the screws at the top and bottom of the TRION3-1810M-POWER-4 module front panel (4x) and pull down the injector/ejector handle to release the module.

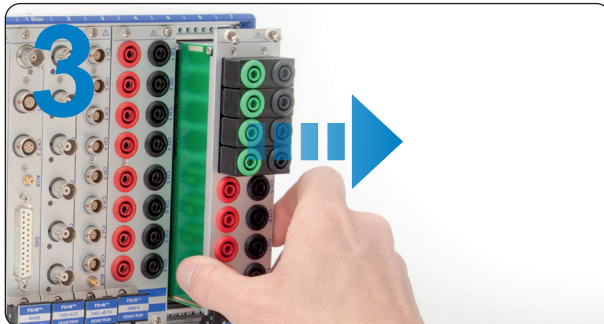


Remove the TRION3-1810M-POWER module from the housing.

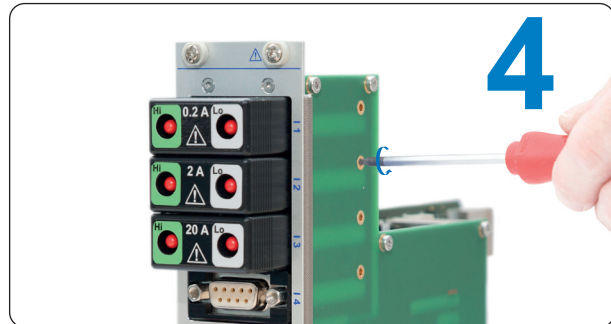


Loosen the torx screw (M2x4, TX6) which secures the sub-module of the channel you want to replace.

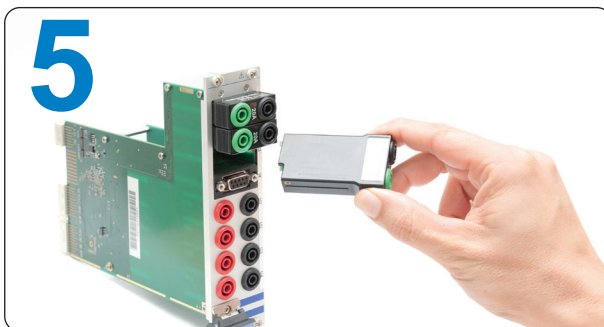


Replace the sub-module.

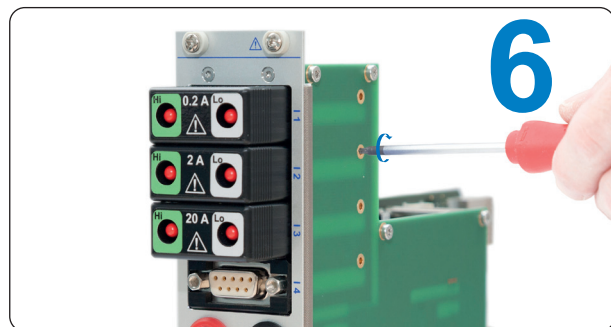

Secure the replaced sub-module with the torx screw (M2x4, TX6). Max. torque: 0.2 Nm

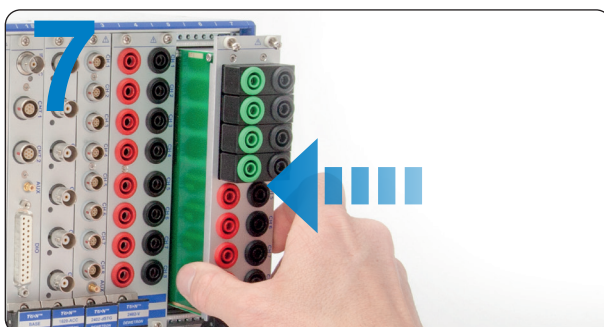


Insert the TRION3-1810M-POWER-4 module into the housing until a resistance appears.

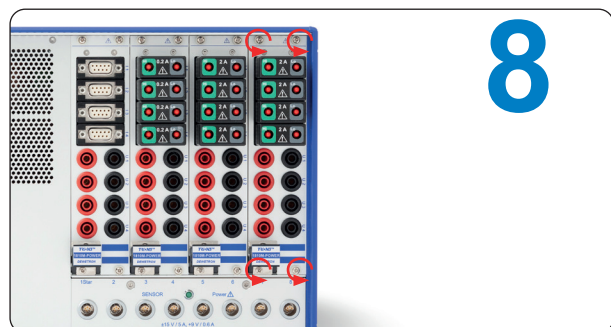

Pull up the injector/ejector handle to latch the module. Tighten the screws at the top and bottom of the TRION3-1810-POWER-4 module front panel (4x) to secure the module.

Block diagram

Base block diagram of the TRION3-1810M-POWER-4 module:

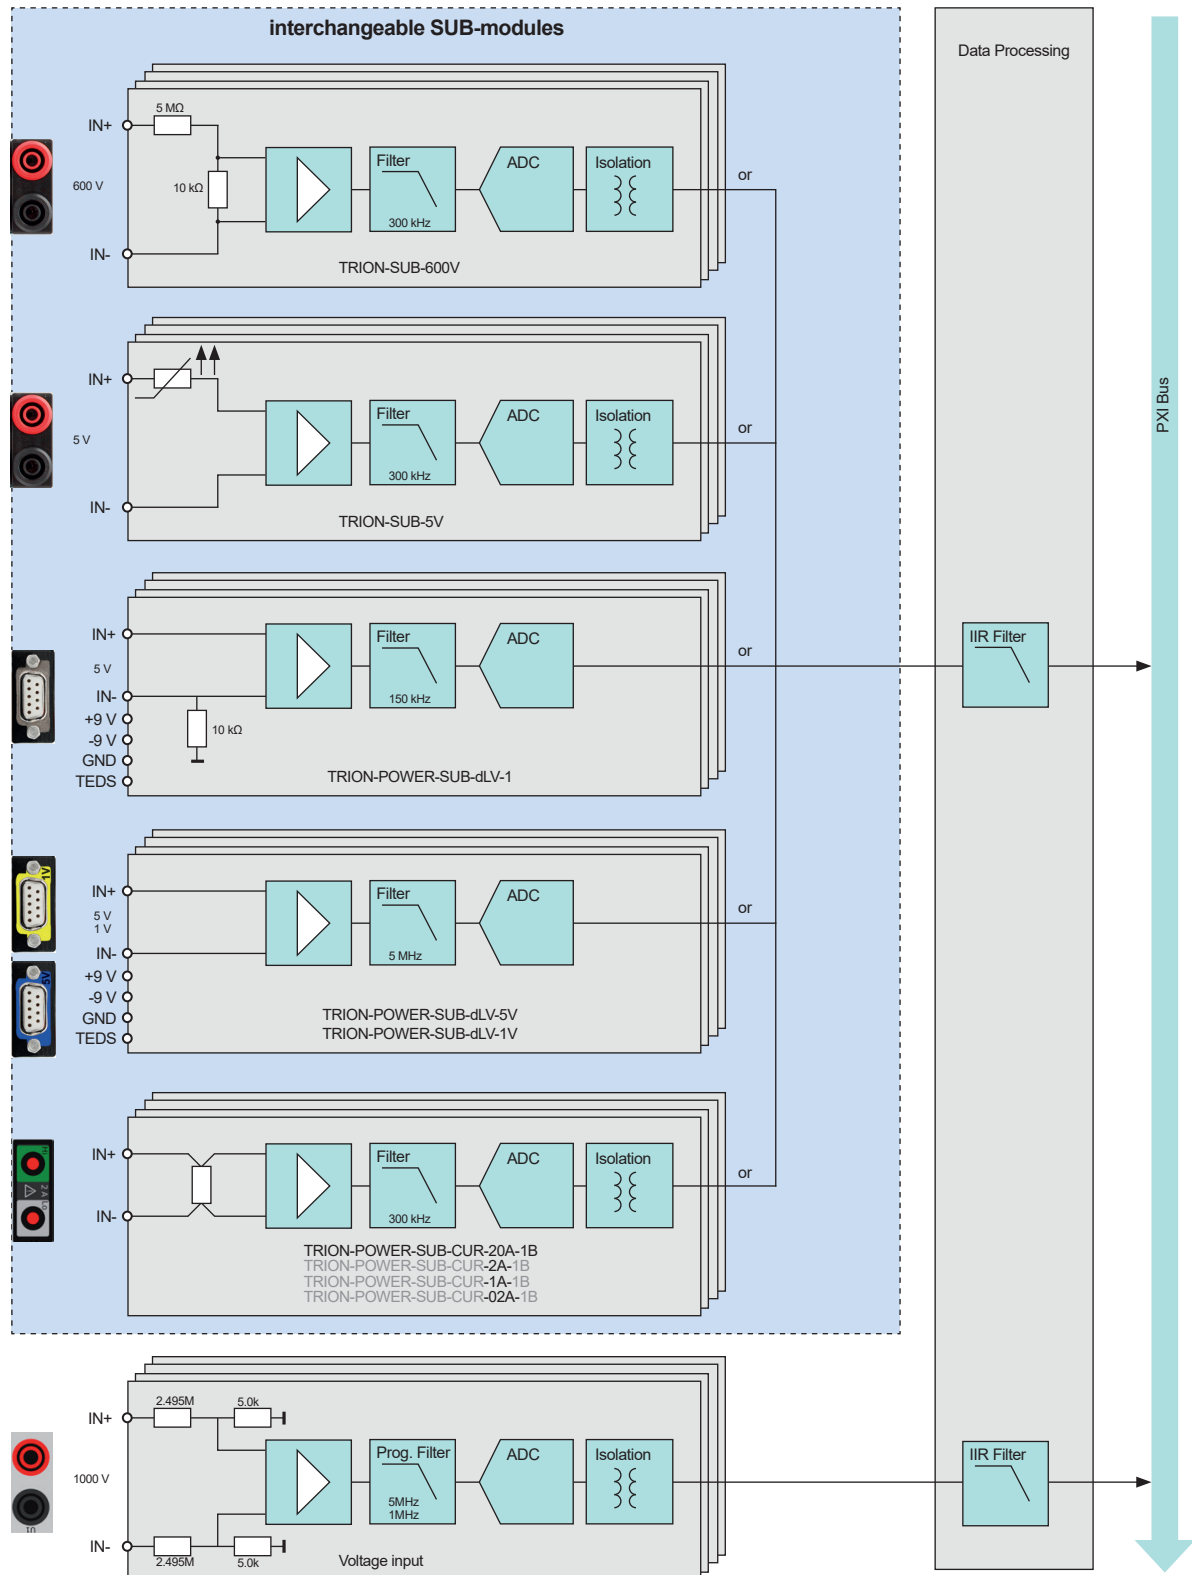

▼ MAIN SYSTEM

The TRION3-1810M-POWER-4 is an ultra-compact, 4-phase power data acquisition module with flexible current or voltage inputs for use in any DEWE3-chassis.

Voltage input (permanently installed):

Fast sampling, high bandwidth and minimum capacity to earth are just a few outstanding performance qualities of the high voltage inputs. The high input impedance allows high continuous voltage levels with a very low temperature drift. Although small outline, the safety category is on a very high level (CAT III 1000V).

Current input (interchangeable):


The TRION3-1810M-POWER-4 has 4 highly flexible voltage or current inputs. The 4 slots can be populated with four different direct current measurement modules or with three different SUBD-9 modules to connect almost any kind of current transducer. Alternatively, this connector can also be used to measure any auxiliary ± 10 V signal (e.g. such as windspeed or water flow).

Voltage input (interchangeable SUB-modules)


If more than 4 voltage inputs are required, the 4 slots can be also populated with our latest interchangeable voltage input sub-modules. Choose from a low-voltage, isolated 5 V or an isolated, 600 V CATII rated sub-module.

Connection examples


Three phase (3P3W) without neutral line

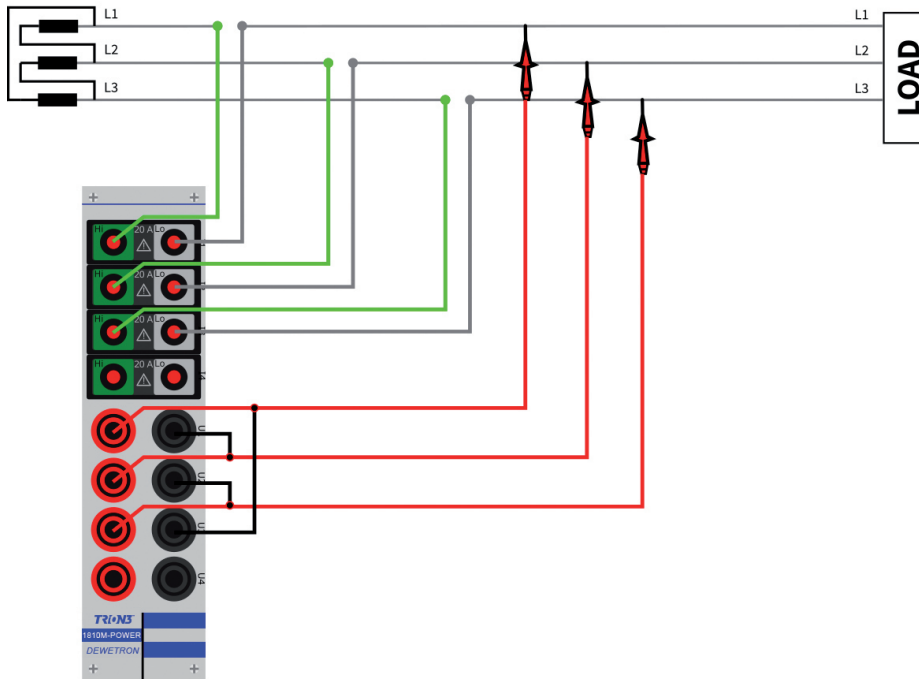


Group selection in OXYGEN Power:

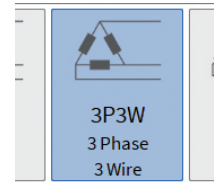

Three phase (3P3W) without neutral line, using current output transducer

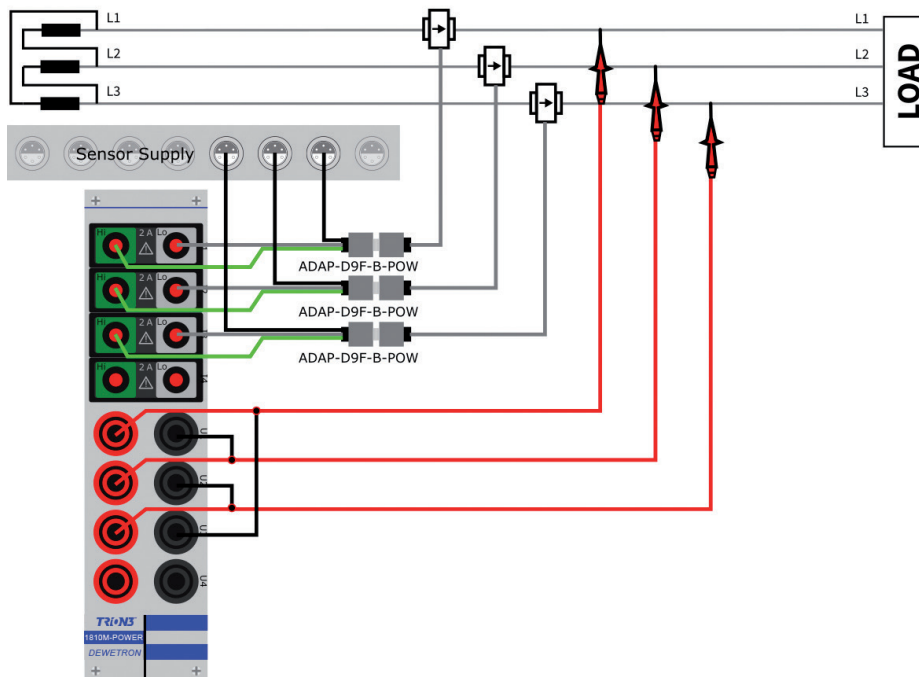


Group selection in OXYGEN Power:

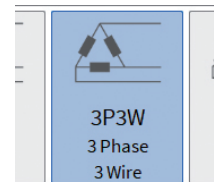


MAIN SYSTEM


Three phase (3P3W) without neutral line, using voltage output transducers

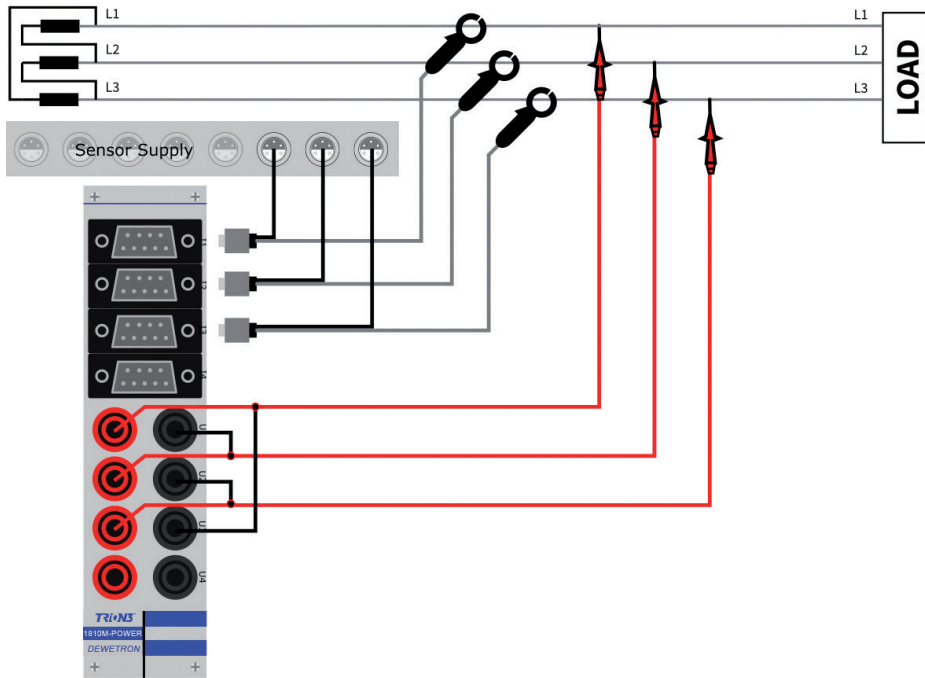


Group selection in OXYGEN Power:

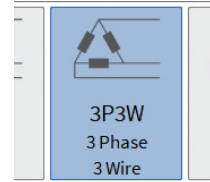


Three phase (3P4W) with neutral line

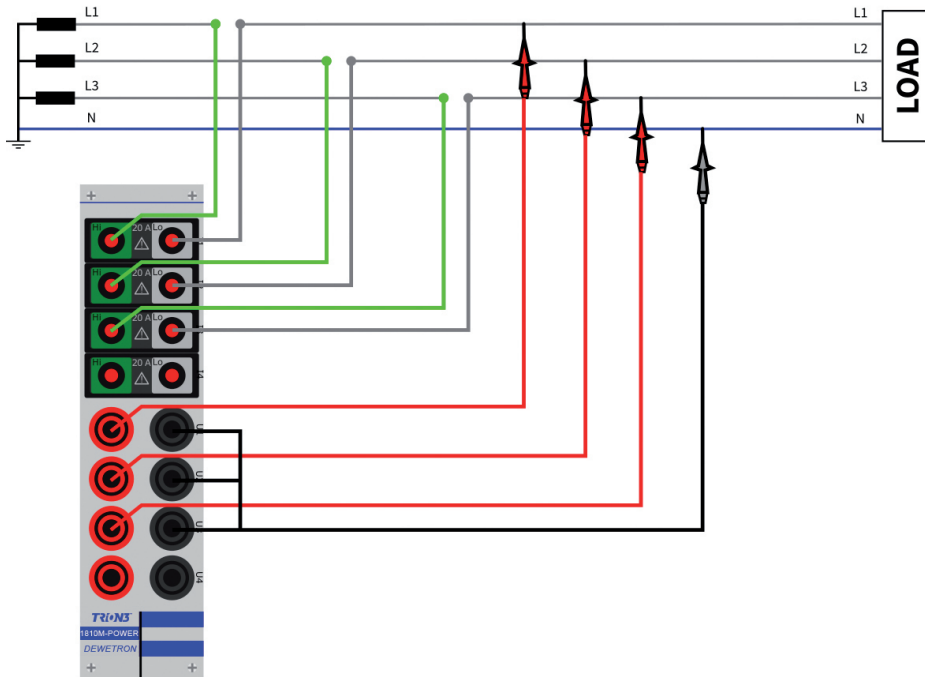


Group selection in OXYGEN Power:

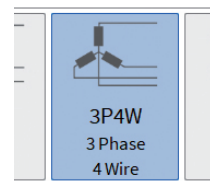


One phase (1P2W)

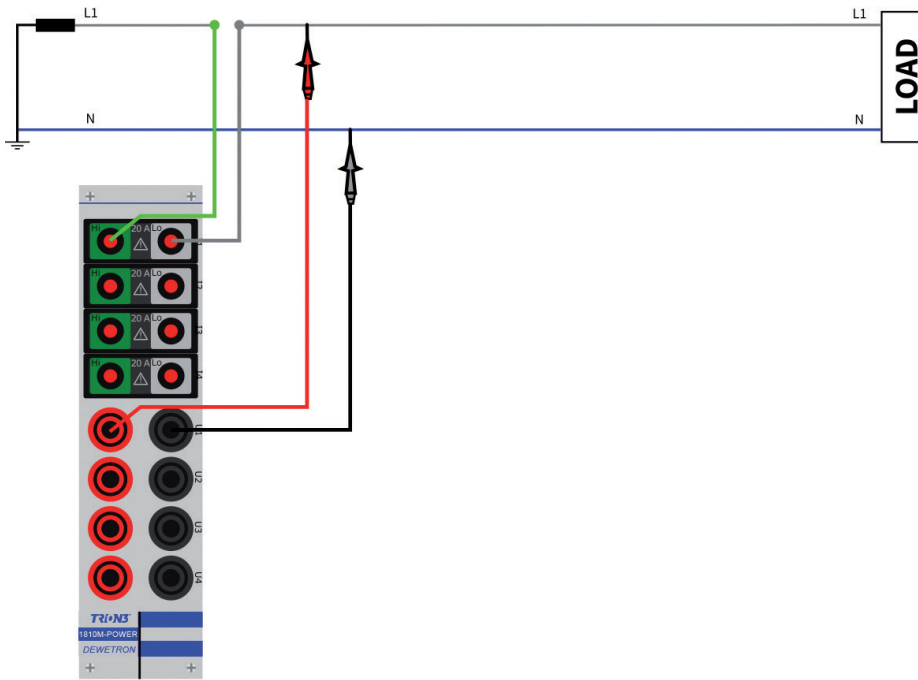


Group selection in OXYGEN Power:

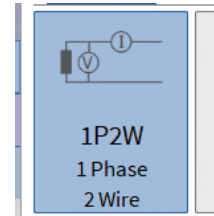

Three phase and one phase (3P3W and 1P2W)

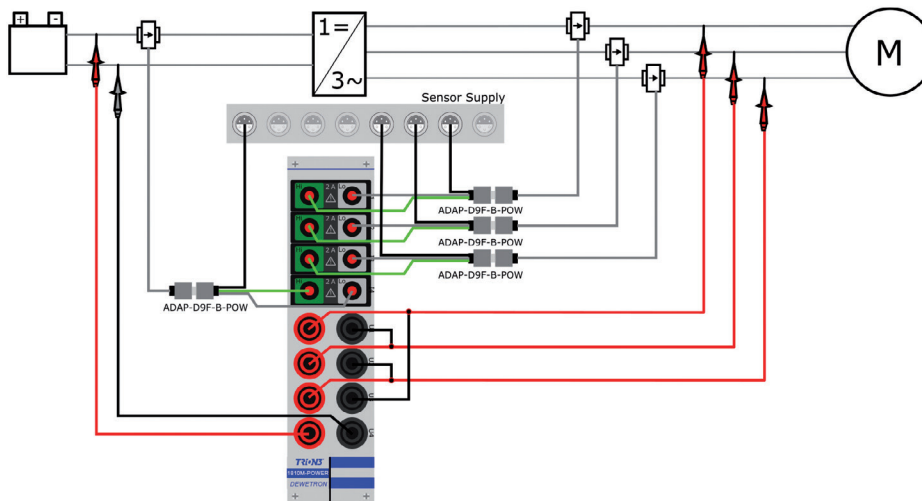

Group selection in OXYGEN Power:

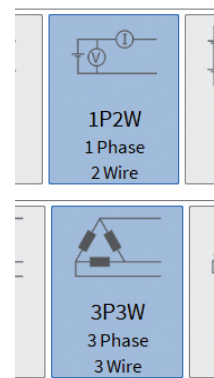

MAIN SYSTEM

Bessel/Butterworth filter characteristics for Power Analysis

The TRION family is equipped with DSP lowpass filters from 2nd to 8th order in Bessel or Butterworth configuration. The difference between these two filter types can be seen in the following figures.

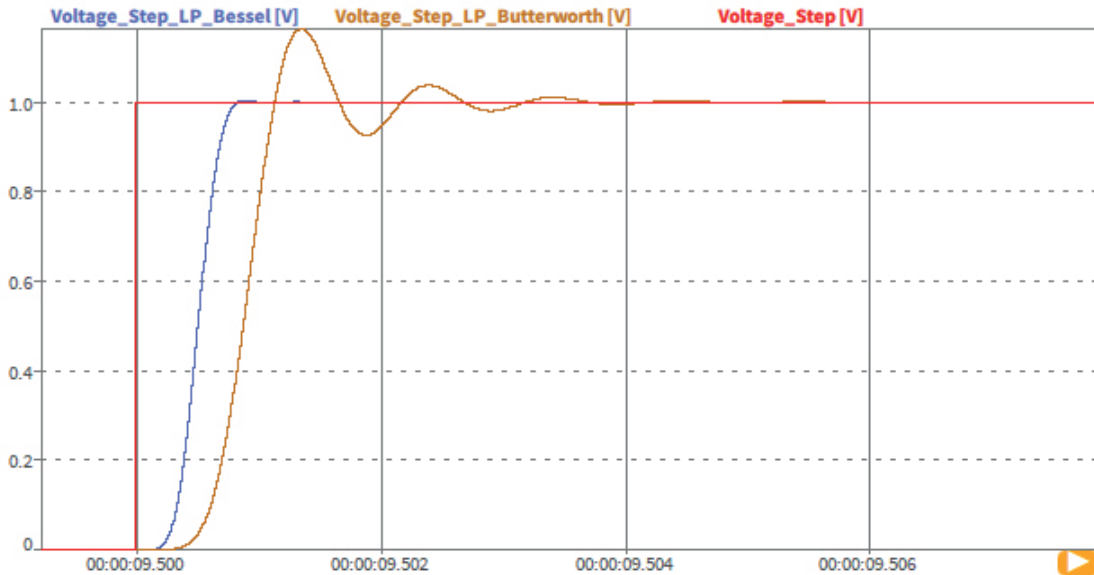


Figure 1: Step response of filter with 1000 Hz cutoff frequency and 8th order.

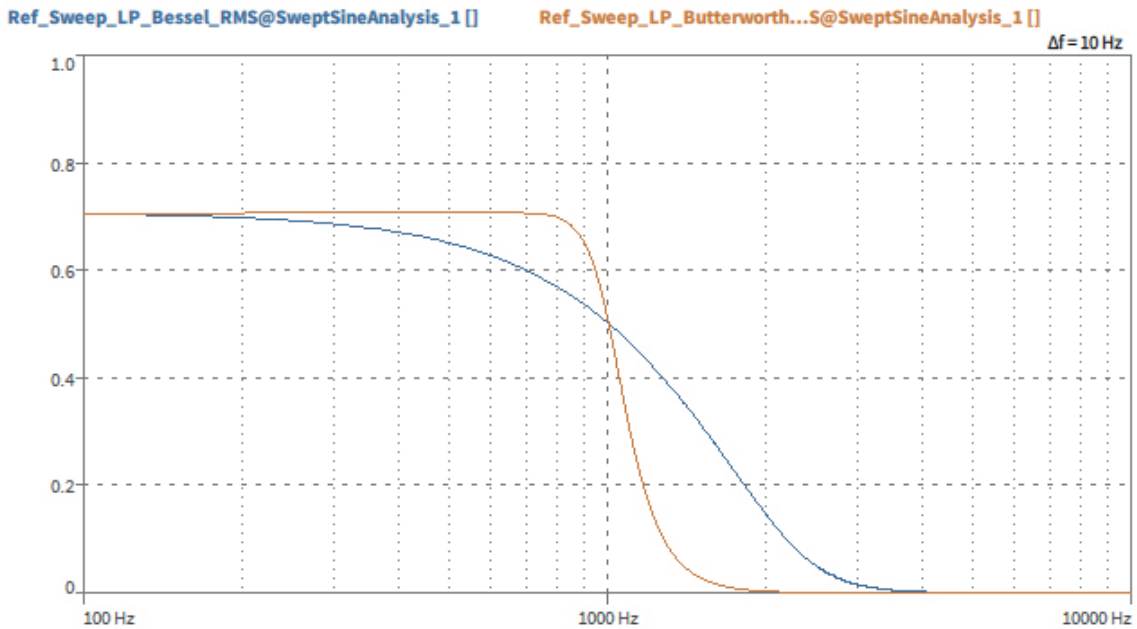


Figure 2: Frequency response of filter with 1000 Hz cutoff frequency and 8th order

	Bessel	Butterworth
Magnitude accuracy e.g. RMS-accuracy	☹️	☺️
Step response reproduction e.g. PWM signal observation	☺️	☹️

DEWE3-PA8 - Highspeed power analyzer

- > Modular, highspeed mixed signal power analyzer
- > 8 slots for TRION™/TRION3™ acquisition modules
- > Up to 16 power channels (U, I @ channel); expandable
- > Integrated 11.6" multi-touch full HD wide screen (1920 x 1080)
- > Sensor power supply (± 15 V / +9 V) with separate power supply



System specifications

	DEWE3-PA8
Input channels	up to 16 voltage, 16 current and auxiliary inputs
Input specification	Supports all TRION™/TRION3™ (highspeed) series interface modules. Optimized to operate with highspeed TRION3-1810M-POWER-4 series modules.
Open slots for TRION™/TRION3™ modules	8
High-speed channel expansion	Add TRIONet at any time by SYNC interfaces or other instruments via OXYGEN-NET
Low-speed channel expansion (100 Hz)	CPAD3 via TRION-CAN
Quasi-static channel expansion	EPAD2 interface connector, CPAD2 via TRION-CAN
Sensor power supply	8 power supply connectors for connecting current clamps and transducers (± 15 V / +9 V); redundant, dedicated power supply for sensor power supply installed into the chassis
Main system	
PC configuration	Intel® Core™ i7 processor, 16 GB RAM 6 x USB2.0, 4 x USB3.1 Gen 1, 2 x USB3.1 Gen 2, 2 x LAN Ethernet, 1 x external DVI socket, 1 x RS232, 2 x PS/2, 2 x display port, AUDIO interface 64-bit Microsoft® Windows® 10 operating system (incl. 64-bit OXYGEN data acquisition software)
Data storage drive bay at the front drive bay at the rear	1 TB SSD-PCIe dedicated for data storage (upgrade to 2 TB SSD-PCIe available) 120 GB SSD for operating system and application software
Display	full HD 11.6" multi-touch wide screen (1920 x 1080)
Main power supply Rated input voltage	100 to 240 VAC (max. 90 to 264 VAC), 600 W AC power supply
Redundant power supply Rated input voltage	100 to 240 VAC (max. 90 to 264 VAC), 200 W AC power supply for sensor power supply
Dimensions (W x D x H)	without feet: 442 x 435 x 222 mm (17.4 x 17.1 x 8.7 in.)
Weight w/o TRION™ modules	typ. 14 kg (30.9 lbs)
Power consumption incl. modules	typ. 220 W without sensor supply
Environmental specification	
Operating temperature	0 to +50 °C, down to -20 °C with prewarmed unit
Storage temperature	-20 to +70 °C
Humidity	10 to 80 % non cond., 5 to 95 % rel. humidity
Max. altitude	2000 m (10000 ft)
Sine vibration ¹⁾ (EN 60068-2-6)	Acceleration 20 m/s ² , Freq. 10 Hz - 150 Hz, Sweep 1 oct/min, 20 cycles
Shock ¹⁾ (EN 60028-2-27)	Acceleration 30 g, duration 11 ms, pulse form half sine, 3 pumps/direction, 6 directions
Random vibration ¹⁾ (EN 60721-3-2)	Class 2M2 (spectral acceleration density 1 m ² /s ³ , frequency range 10 Hz-200 Hz, duration 30 min/direction)
¹⁾ Tested with SSD	

MAIN SYSTEM

Power supply

The DEWE3-PA8 comes with two integrated power supplies. The reason for this is that some current sensors react extremely sensitive to power losses. To avoid that, an additional power supply was added to power the sensors, even when the mains power supply of the measurement device has a failure. It is possible to connect the additional supply to a second source (e.g. UPS) to ensure the permanent supply of sensors, within a very unstable power grid.

Mains power supply

VOLTAGE **V** 100 to 240 V_{AC} (max. 90 to 264 V_{AC})

FREQUENCY **Hz** 47 to 63 Hz

POWER **P** 600 W

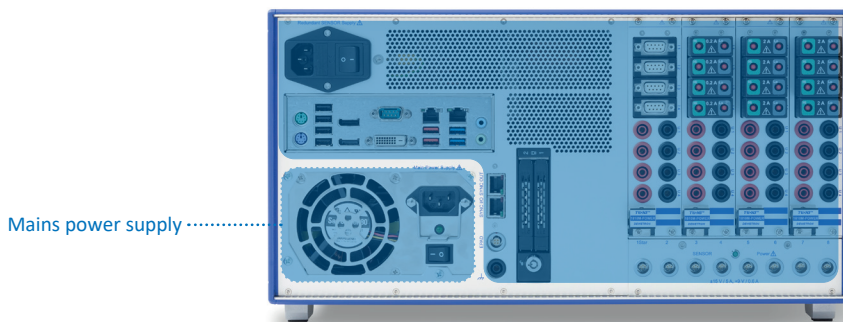


Figure 1: Mains power supply for the entire instrument

When switching off the main power supply, the power supply for the sensors will also be shut off. To avoid that, the DEWE3-PA8 comes with an independent, redundant power supply for sensor supply.

Redundant power supply for sensor supply

VOLTAGE **V** 100 to 240 V_{AC} (max. 90 to 264 V_{AC})

FREQUENCY **Hz** 47 to 63 Hz

POWER **P** 200 W

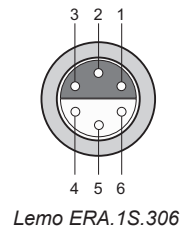


Figure 1: Redundant power supply for sensor supply

Sensor power supply



Output Power (SUM)	150 W
Output Current +15 V Line (Single/Sum)	1.5 A / 5 A
Output Current -15 V Line (Single/Sum)	1.5 A / 5 A
Output Current +9 V Line (Single/Sum)	0.6 A / 0.6 A
Output Current (Single Plug)	1.5 A



Pin assignment

- 1: +15 V
- 2: -15 V
- 3: +9 V
- 4: DGND
- 5: n.c.
- 6: DGND

Compatible sensors/transducers (selection)

PA-IT-60/65	±15 V	
PA-IT-200/205	±15 V	
PA-IT-400/405	±15 V	
PA-IT-700	±15 V	
PA-IT-1000	±15 V	
PA-IN-1000-S	±15 V	
PA-IN-2000-S	±15 V	
PA-LF-X	±15 V	
SE-CUR-CLAMP-150-DC	±15 V	
SE-CUR-CLAMP-200-DC	±15 V	
SE-CUR-CLAMP-500-DC	±15 V	
SE-CUR-CLAMP-1000-DC	±15 V	
SE-CUR-LFR	+9 V	

NOTE: Do not use the zero-flux transducer system without power supply. Induction of currents can damage the built-in electronics (see user manual).

NOTE: The maximum cable length from the transducer to the device is 5 m. Longer cable lengths may cause a too high voltage drop.

Known limitations PA-IT-1000 and PA-IN-2000-S

Due to the maximum aggregated output current of 5 A, not more than 4x PA-IT-1000 or PA-IN-2000-S can be supplied in the absolute worst case due to the concurrency factor of the applied power system. The following applications can be met (selection) with nominal current due to a concurrency factor less than one:

- > 4x 1-phase DC systems (4x PA-IT-1000 or PA-IN-2000-S transducers)
- > 4x 2-phase DC systems (8x PA-IT-1000 or PA-IN-2000-S transducers)
- > 2x 3-phase AC systems + 1x 1-phase DC system (7x PA-IT-1000 or PA-IN-2000-S transducers)
- > 1x 6-phase AC system + 1x 1-phase DC system (7x PA-IT-1000 or PA-IN-2000-S transducers)

MAIN SYSTEM

Maintenance




WARNING: *The DEWE3-PA8 must not be opened or disassembled except for cleaning the filter pad!
The filter pad has to be checked regularly depending on environmental condition!*

To access the filter pad simply loosen the knurled thumb screw and hinge down the intake vent on the front of the DEWE3-PA8.



To clean the filter pad use a dry velocity stream of air. Afterwards, make sure to reinstall the filter pad and tighten the knurled thumb screw.

Installing the optional 19" mounting kit

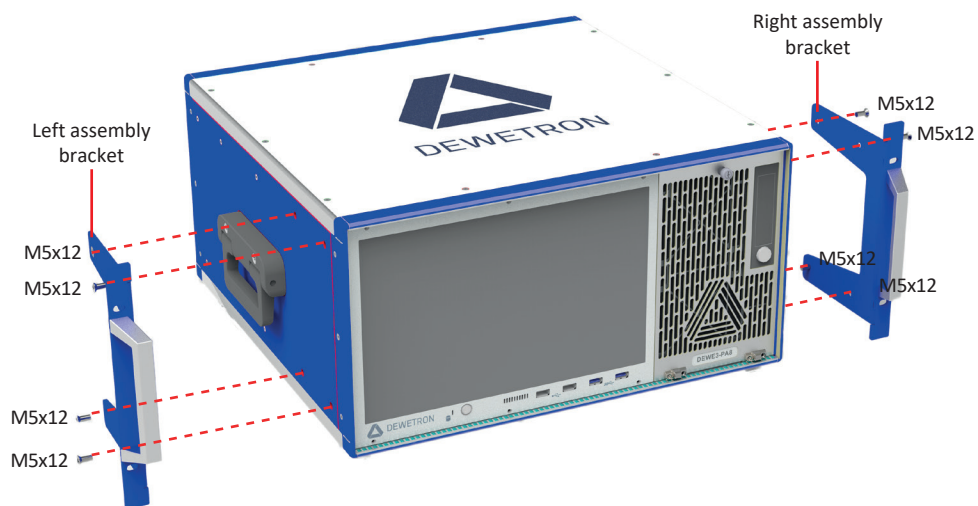


WARNING: *When installing the 19" mounting brackets, the maximum length for screws is 12 mm!
If a screw gets lost, replace it with M5x12 countersunk head screw only. Otherwise
the display or the powersupply could get damaged!*

Cooling considerations


The intake vent of the DEWE3-PA8 is at the front of the chassis, where the cooling exhaust vent for the DEWE3-PA8 is on the rear of the chassis.

CAUTION: Adequate clearance between the chassis and surrounding equipment or blockages must be maintained to ensure proper cooling of the chassis power supply as well as the modules plugged into the chassis!

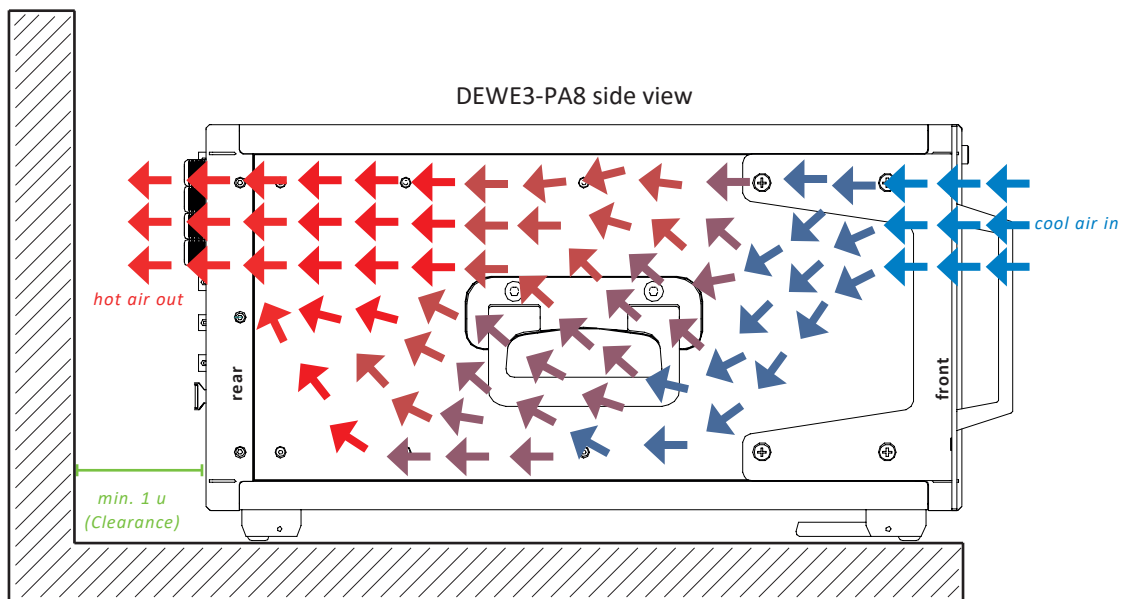

MAIN SYSTEM

Dimensions

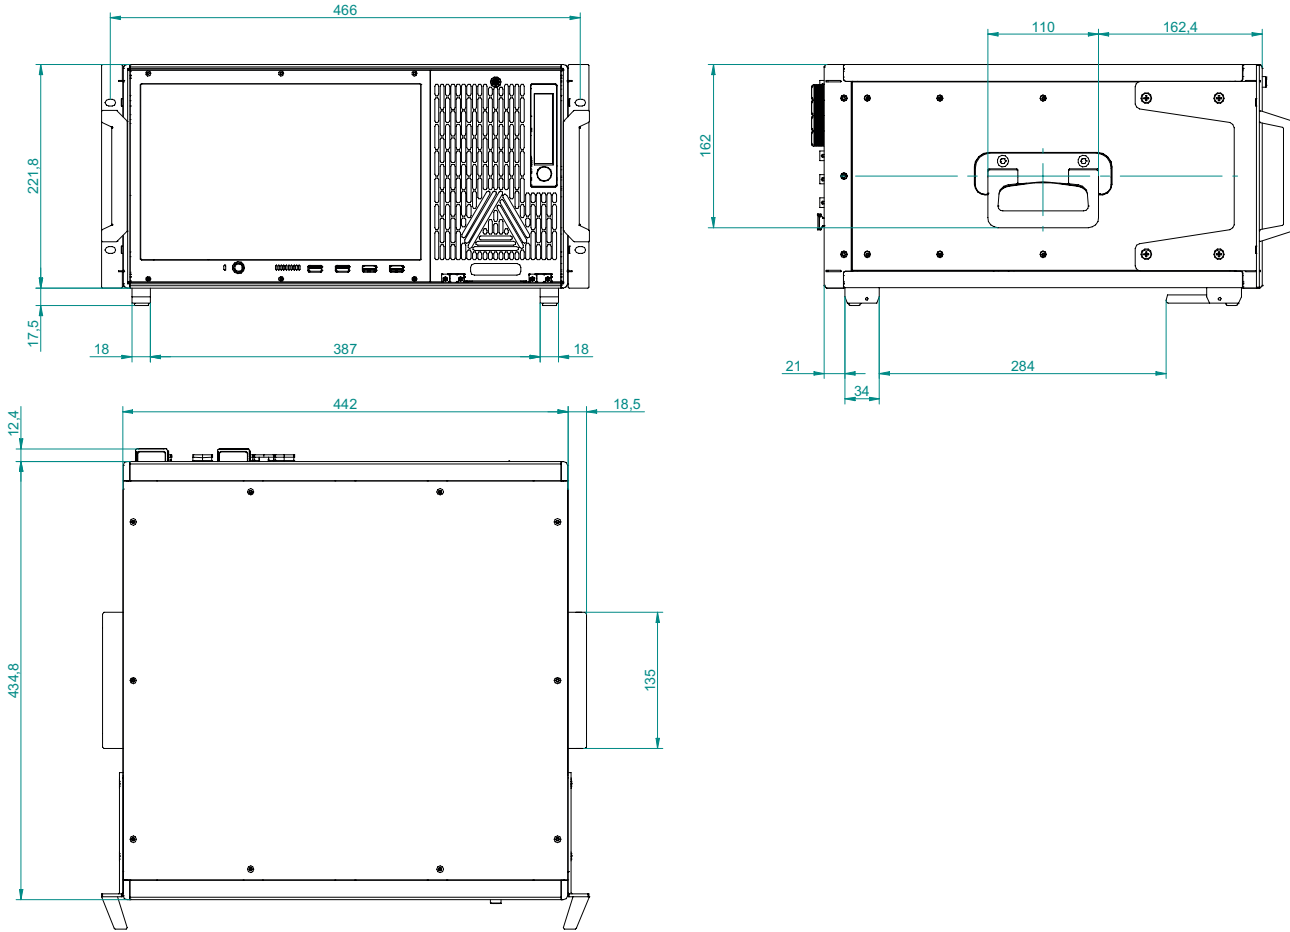

* Dimensions in mm
(1 inch = 25.4 mm)

CE-Certificate of Conformity



Manufacturer:

DEWETRON GmbH

Address:

**Parking 4
8074 Grambach, Austria**

Tel.: +43 316 3070 0

Fax: +43 316 3070 90

e-mail: sales@dewetron.com

http://www.dewetron.com

Name of product:

DEWE3-PA8

Kind of product:

Mixed signal power analyzer

The product meets the regulations of the following EC-directives:

2014/35/EU

"Directive of the European Parliament and of the Council of 26 February 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits"

2014/30/EU

"Directive of the European Parliament and of the Council of 26 February 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility (recast)"

The accordance is proved by the observance of the following standards:

L V E M C	Safety	IEC 61010-1:2020	
	Emissions	EN 61000-6-4	EN 55011 Class B
	Immunity	EN 61000-6-2	Group standard

Graz, June 27, 2019

Place / Date of the CE-marking

Ing. Thomas Propst / Manager Total Quality

▼
NOTES
