



DEWETRON

---

# DEWE2-M13s

## TECHNICAL REFERENCE MANUAL

---

### WELCOME TO THE WORLD OF DEWETRON!

Congratulations on your new device! It will supply you with accurate, complete and reproducible measurement results for your decision making.

Look forward to the easy handling and the flexible and modular use of your DEWETRON product and draw upon more than 25 years of DEWETRON expertise in measurement engineering.



CUSTOMIZED



MODULAR



COMPETENT



COMMITTED



APPROVED

Copyright © DEWETRON GmbH

This document contains information which is protected by copyright. All rights are reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

All trademarks and registered trademarks are acknowledged to be the property of their owners.  
DEWESoft™ is a trademark of Dewesoft d.o.o

## Thank you!

Thank you very much for your investment in DEWETRON's unique data acquisition systems. These are top-quality instruments which are designed to provide you years of reliable service. This guide has been prepared to help you get the most from your investment, starting from the day you take it out of the box, and extending for years into the future.

This guide includes important startup notes, as well as safety notes and information about keeping your DEWETRON system in good working condition over time.

We strongly suggest that you read this entire manual, especially the safety and care sections, as well as to avoid damaging your DEWETRON system.

## What is the DEWE2-M13s?

This product has 13 slots for user exchangeable TRION™ series modules and is used for measuring of different physical and/or electrical sizes (depending on model or configuration). The connection is depending on model or configuration and takes place via safety banana plugs, BNC connectors ( $\pm 50V$  max.), D-SUB connectors ( $\pm 50V$  max.), thermocouple connectors ( $\pm 50V$  max.), BINDER® connectors ( $\pm 50V$  max.), SMB connectors ( $\pm 50V$  max.),  $\mu$ dot connectors ( $\pm 50V$  max.), LEMO® connectors or RJ-45 connectors.

▼

---

# PREFACE

Notes

## **Content**

<b>General Information, Safety Instructions</b>	<b>7</b>
Training .....	7
Calibration .....	7
Support .....	7
Service/repairs .....	7
Warranty Information .....	8
Printing History .....	8
Safety conventions .....	9
General safety and hazard warnings for all DEWETRON systems .....	10
Maintenance .....	13
Windows updates and antivirus/security software .....	14
Problematic network stacks .....	14
Environmental Considerations .....	14
<b>Main System</b>	<b>15</b>
DEWE2-M13s portable data acquisition mainframe .....	15
System specifications .....	15
DEWE2-M13s at a glance .....	17
Installing a TRION™ module in the chassis .....	20
Power supply .....	21
Maintenance .....	23
System recovery .....	23
Cooling considerations.....	24
<b>CE-Certificate of conformity</b>	<b>C1</b>

▼

---

# TABLE OF CONTENT

Notes

## Training

DEWETRON offers training at various offices around the world several times each year. DEWETRON headquarters in Austria have a very large and professional conference and seminar center, where training classes are conducted on a regular basis starting with sensors and signal conditioning, A/D technology and software operation. For more information about training services, please visit:

<http://www.dewetron.com/services/dewetron-academy/>

Dewetron Inc. in the USA also has a dedicated training facility connected to its headquarters, located in Rhode Island. For more information about training services in the US, please visit:

<http://www.dewetron.us/service-support/system-training-usa/>

## Calibration

Every instrument needs to be calibrated at regular intervals. The standard norm across nearly every industry is annual calibration. Before your DEWETRON data acquisition system is delivered, it is calibrated at our DEWETRON headquarter. Each of this system is delivered with a certificate of compliance with our published specifications. Detailed calibration reports from our calibration system are available for purchase with each order. We retain them for at least one year, so calibration reports can be purchased for up to one year after your system was delivered.

## Support

DEWETRON has a team of people ready to assist you if you have any questions or any technical difficulties regarding the system. For any support please contact your local distributor first or DEWETRON directly.

For Asia and Europe, please contact:

DEWETRON GmbH  
Parkring 4  
8074 Grambach  
AUSTRIA  
Tel.: +43 316 3070  
Fax: +43 316 307090  
Email: [support@dewetron.com](mailto:support@dewetron.com)  
Web: <http://www.dewetron.com>

The telephone hotline is available  
Monday to Friday between  
08:00 and 17:00 CET (GMT +1:00)

For the Americas, please contact:

DEWETRON, Inc. (HQ USA)  
2850 South County Trail, Unit 1  
East Greenwich, RI 02818  
U.S.A.  
Tel.: +1 401 284 3750  
Toll-free: +1 866 598 3393  
Fax: +1 401 284 3755  
Email: [us.support@dewetron.com](mailto:us.support@dewetron.com)  
Web: <http://www.dewetron.us>

The telephone hotline is available  
Monday to Friday between  
08:00 and 4:30 EST

## Service/repairs

Only the team of DEWETRON is allowed to perform any kinds of repairs to your system to assure a safe and proper operation in future. For information regarding service and repairs please contact your local distributor first or DEWETRON directly.



Any spare parts (screws, backplanes, cables,...) must be obtained from DEWETRON only.

# ▼ NOTICE

---

The information contained in this document is subject to change without notice.

DEWETRON GmbH (DEWETRON) shall not be liable for any errors contained in this document. DEWETRON MAKES NO WARRANTIES OF ANY KIND WITH REGARD TO THIS DOCUMENT, WHETHER EXPRESS OR IMPLIED. DEWETRON SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. DEWETRON shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any other legal theory, in connection with the furnishing of this document or the use of the information in this document.

## **Warranty Information**

A copy of the specific warranty terms applicable to your DEWETRON product and replacement parts can be obtained from your local sales and service office.

## **Restricted Rights Legend**

Use austrian law for duplication or disclosure.

DEWETRON GmbH  
Parkring 4  
A-8074 Grambach / Austria

TRION™ is a trademark of DEWETRON GmbH.

Any other trademarks and registered trademarks are acknowledged to be the property of their owners.

## **Printing History**

Please refer to the page bottom for printing version.

Copyright © DEWETRON GmbH.

This document contains information which is protected by copyright. All rights are reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

## Safety conventions



*Observe precautions for handling electrostatic sensitive devices!*



*This icon denotes a caution, which advises you of precautions to take to avoid injury, data loss, or a system crash. When this symbol is marked on the product, refer to the technical reference manual.*



*Indicates hazardous voltages.*



*Indicates the chassis terminal*

**WARNING** *Calls attention to a procedure, practice, or condition that could cause bodily injury or death.*

**CAUTION** *Calls attention to a procedure, practice, or condition that could possibly cause damage to equipment or permanent loss of data.*

### WARNINGS

*The following general safety precautions must be observed during all phases of operation, service, and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the product. DEWETRON GmbH assumes no liability for the customer's failure to comply with these requirements.*

---

# SAFETY INSTRUCTIONS

**Your safety is our primary concern! Please be safe!**



## **General safety and hazard warnings for all DEWETRON systems**

- > Use this system under the terms of the specifications only to avoid any possible danger. If the unit is used in a manner not specified by the manufacturer the protection can be impaired!
- > This product is intended for use in industrial locations. As a result, this product may cause interference if used in residential areas. Such use must be avoided unless the user takes special measures to reduce electromagnetic emissions to prevent interferences to the reception of radio and television broadcasts.
- > Maintenance will be executed by qualified staff only.
- > During the use of the system, it might be possible to access another parts of a more comprehensive system. Please read and follow the safety instructions provided in the manuals of all other components regarding warning and security advices for using the system.
- > With this product, only use the power cable delivered or defined for the host country.
- > DO NOT connect or disconnect sensors, probes or test leads, as these parts are connected to a voltage supply unit.
- > The system is grounded via a protective conductor in the power supply cord. To avoid electric shocks, the protective conductor has to be connected with the ground of the power network. Before connecting the input or output connectors of the system, make sure that there is a proper grounding to guarantee potential free usage. For countries, in which there is no proper grounding, please refer to your local legally safety regulations for safety use.

DC systems: Every DC system has a grounding connected to the chassis (yellow/green safety banana plug).

- > Please note the characteristics and indicators on the system to avoid fire or electric shocks. Before connecting the system, please carefully read the corresponding specifications in the product manual.
- > The inputs are not, unless otherwise noted (CATx identification), for connecting to the main circuits of category II, III and IV. The measurement category can be adjusted depending on module configuration.
- > The power cord separates the system from the power supply. Do not block the power cord, since it has to be accessible for the users.
- > Supply overvoltage category is II.
- > DO NOT use the system if equipment covers or shields are removed.
- > If you assume the system is damaged, get it examined by authorised personnel only.
- > Any use in wet rooms, outdoors or in adverse environmental condition is not allowed!  
Adverse environmental conditions are:
  - > Moisture or high humidity
  - > Dust, flammable gases, fumes or dissolver
  - > Thunderstorm or thunderstorm conditions (except assembly PNA)
  - > Electrostatic fields, et cetera.
- > Any direct voltage output is protected with a fuse against short cut and reverse-polarity, but is NOT galvanically isolated (except it is explicit marked on the system).
- > The system must be connected and operated to an earthed wall socket at the AC mains power supply only (except for DC systems).
- > Any other use than described above may damage your system and is attended with dangers like shortcut, fire or electric shocks.

---

# SAFETY INSTRUCTIONS

- > The whole system must not be changed, rebuilt or opened (except for changing TRION™ modules).
  - > If you assume a more riskless use is not provided anymore, the system has to be rendered inoperative and should be protected against inadvertent operation. It is assumed that a more riskless operation is not possible anymore, if
    - > the system is damaged obviously or causes strange noises.
    - > the system does not work anymore.
    - > the system has been exposed to long storage in adverse environmental.
    - > the system has been exposed to heavy shipment strain.
  - > DO NOT touch any exposed connectors or components if they are live wired. The use of metal bare wires is not allowed. There is a risk of short cut and fire hazard!
  - > Warranty void if damages caused by disregarding this manual. For consequential damages NO liability will be assumed!
  - > Warranty void if damages to property or persons caused by improper use or disregarding the safety instructions.
  - > Unauthorized changing or rebuilding the system is prohibited due to safety and permission reasons (CE). Exception: changing TRION™ modules.
  - > The assembly of the system is equivalent to protection class I. For power supply, only the correct power socket of the public power supply must be used, except the system is DC powered.
  - > Be careful with voltages  $>25 V_{AC}$  or  $>35 V_{DC}$ ! These voltages are already high enough in order to get a perilous electric shock by touching the wiring.
  - > Maximum input voltage for measuring cards are  $70 V_{DC}$  and  $46.7 V_{PEAK}$
  - > The product heats during operation. Make sure there is adequate ventilation. Ventilation slots must not covered!
  - > Only fuses of the specified type and nominal current may be used. The use of patched fuses is prohibited.
  - > Prevent using metal bare wires! Risk of short cut and fire hazard!
  - > DO NOT use the system before, during or shortly after a thunderstorm (risk of lightning and high energy overvoltage). An advanced range of application under certain conditions is allowed with therefore designed products only. For details please refer to the specifications.
  - > Make sure that your hands, shoes, clothes, the floor, the system or measuring leads, integrated circuits and so on, are dry.
  - > DO NOT use the system in rooms with flammable gases, fumes or dust or in adverse environmental conditions.
  - > Avoid operation in the immediate vicinity of:
    - > high magnetic or electromagnetic fields
    - > transmitting antennas or high-frequency generators
- For exact values please refer to enclosed specifications.
- > Use measurement leads or measurement accessories aligned to the specification of the system only. Fire hazard in case of overload!
  - > Do not switch on the system after transporting it from a cold into a warm room and vice versa. The thereby created condensation may damage your system. Acclimatise the system unpowered to room temperature.
  - > Do not disassemble the system! There is a high risk of getting a perilous electric shock. Capacitors still might be charged, even the system has been removed from the power supply.

# SAFETY INSTRUCTIONS

---

- > Direct exposure of any DEWETRON product to strong sunlight or other heat radiation shall be prevented, as this could excessively heat up the product and lead to permanent damage of the product.
- > The electrical installations and equipments in industrial facilities must be observed by the security regulations and insurance institutions.
- > The use of the measuring system in schools and other training facilities must be observed by skilled personnel.
- > The measuring systems are not designed for use at humans and animals.
- > Please contact a professional if you have doubts about the method of operation, safety or the connection of the system.
- > Please be careful with the product. Shocks, hits and dropping it from already lower level may damage your system. For exact values please refer to enclosed specifications.
- > Please also consider the detailed technical reference manual as well as the security advices of the connected systems.

This product has left the factory in safety-related flawless and proper condition.

In order to maintain this condition and guarantee safety use, the user has to consider the security advices and warnings in this manual.

EN 61326-3-1:2008

IEC 61326-1 applies to this part of IEC 61326 but is limited to systems and equipment for industrial applications intended to perform safety functions as defined in IEC 61508 with SIL 1-3.

The electromagnetic environments encompassed by this product family standard are industrial, both indoor and outdoor, as described for industrial locations in IEC 61000-6-2 or defined in 3.7 of IEC 61326-1. Equipment and systems intended for use in other electromagnetic environments, for example, in the process industry or in environments with potentially explosive atmospheres, are excluded from the scope of this product family standard, IEC 61326-3-1.

Devices and systems according to IEC 61508 or IEC 61511 which are considered as “operationally well-tried”, are excluded from the scope of IEC 61326-3-1.

Fire-alarm and safety-alarm systems, intended for protection of buildings, are excluded from the scope of IEC 61326-3-1.

## Maintenance

The information in this section is designed for use by qualified service personal.

### Service interval:

Clean dust from the chassis exterior/interior and exchange filter foam based on the operating environment.

### Cleaning:

Clean surface of the chassis with dry lintfree cloth.

Use a dry velocity stream of air to clean the chassis interior.



- > Disconnect all cables before servicing the unit!
- > Many components within the chassis are sensitive to static discharge damage. Always wear a ground wrist strap and service the unit only in static-free environment.
- > Do not use harsh chemical cleaning agents!

# GENERAL INFORMATION

## CAUTION

- > The system BIOS is protected by password. Any change in the BIOS may cause a system crash. When the system is booting, do not press ESC-button on keyboard. This may clear the BIOS settings and cause system faults.
- > Any change in the file structure as deleting or adding files or directories might cause a system crash.
- > Before installing software updates contact DEWETRON or your local distributor. Use only software packages which are released by DEWETRON. Further informations are also available in the internet (<http://www.dewetron.com>).
- > After power off the system wait at least 10 seconds before switching the system on again. Otherwise the system may not boot correct. This prolongs also the life of all system components.

## Windows updates and antivirus/security software

Before installing Windows software updates consult with DEWETRON for compatibility guidance. Please also keep in mind that the use of any antivirus or other security software may slow down your system and may cause data loss.

## Problematic network stacks

Often intrusive IT software or network processes can interfere with the primary function of the DEWETRON system: to record data. Therefore we recommend strongly against the installation of IT/MIS software and running their processes on any DEWETRON data acquisition system, and cannot guarantee the performance of our systems if they are so configured.



## Environmental Considerations

Information about the environmental impact of the product.

## Product End-of-Life Handling

Observe the following guidelines when recycling a DEWETRON system:

## System and Components Recycling

Production of these components required the extraction and use of natural resources. The substances contained in the system could be harmful to your health and to the environment if the system is improperly handled at it's end of life! Please recycle this product in an appropriate way to avoid an unnecessary pollution of the environment and to keep natural resources.

This symbol indicates that this system complies with the European Union's requirements according to Directive 2002/96/EC on waste electrical and electronic equipment (WEEE). Please find further information about recycling on the DEWETRON website [www.dewetron.com](http://www.dewetron.com)

## Restriction of Hazardous Substances

This product has been classified as Monitoring and Control equipment, and is outside the scope of the 2011/65/EU RoHS Directive. This product is known to contain lead.

## DEWE2-M13s portable data acquisition mainframe

- > 13 slots for TRION™ acquisition modules
- > Up to 104 analog inputs
- > Optional battery operation (4 x battery bay with option DW2-PS-BAT)
- > SSD for high data throughput
- > Included external power supply




## System specifications

DEWE2-M13s	
Data acquisition:	13 slots for TRION™ acquisition modules
Standard power supply:	240 W, external AC power supply included;
Rated input voltage:	11 to 32 V <sub>DC</sub> (max. 10 to 36 V <sub>DC</sub> )
option DW2-PS-DC-BUFFER:	Internal UPS battery for <5 minutes (depending on system and configuration)
Optional power supply (option DW2-PS-BAT):	240 W, external AC power supply and cable included 18 to 21 V <sub>DC</sub> isolated DC input (3 batteries for appr. 2 hours operation included)
Typical power consumption:	300 W
Operating temperature:	0 °C to +50 °C
Operating temperature with option DW2-PS-BAT:	0 °C to 50 °C when discharging batteries 0 °C to 45 °C when charging batteries
Storage temperature:	-20 °C to +70 °C
Humidity (operating):	10 % to 80 %, non condensing 5 % to 95 % rel. humidity
Altitude:	up to 2000 m
Sine vibration test <sup>1)</sup> : EN 60068-2-6	Shape Sine Frequency range 10 - 150 Hz Acceleration 20 m/s <sup>2</sup> Sweep rate 1 oct./min. Duration 20 Cycles Test in 3 directions
Random vibration test <sup>1)</sup> : EN 60721-3-2 Class 2M2	Shape Random Frequency range 10 - 200 Hz Spectral acceleration density 1 m <sup>2</sup> /s <sup>3</sup> Duration 30 Minutes/direction
Shocktests <sup>1)</sup> : EN 60068-2-27	Acceleration amplitude 15 g
Dimensions (W x H x D):	without feet: 441 x 230 x 177 mm (17.4 x 9.1 x 7 in.)
Weight w/o TRION™ modules:	typ. 10 kg (22 lbs)

<sup>1)</sup> Tested with SSD

# MAIN SYSTEM


## Dimensions\*

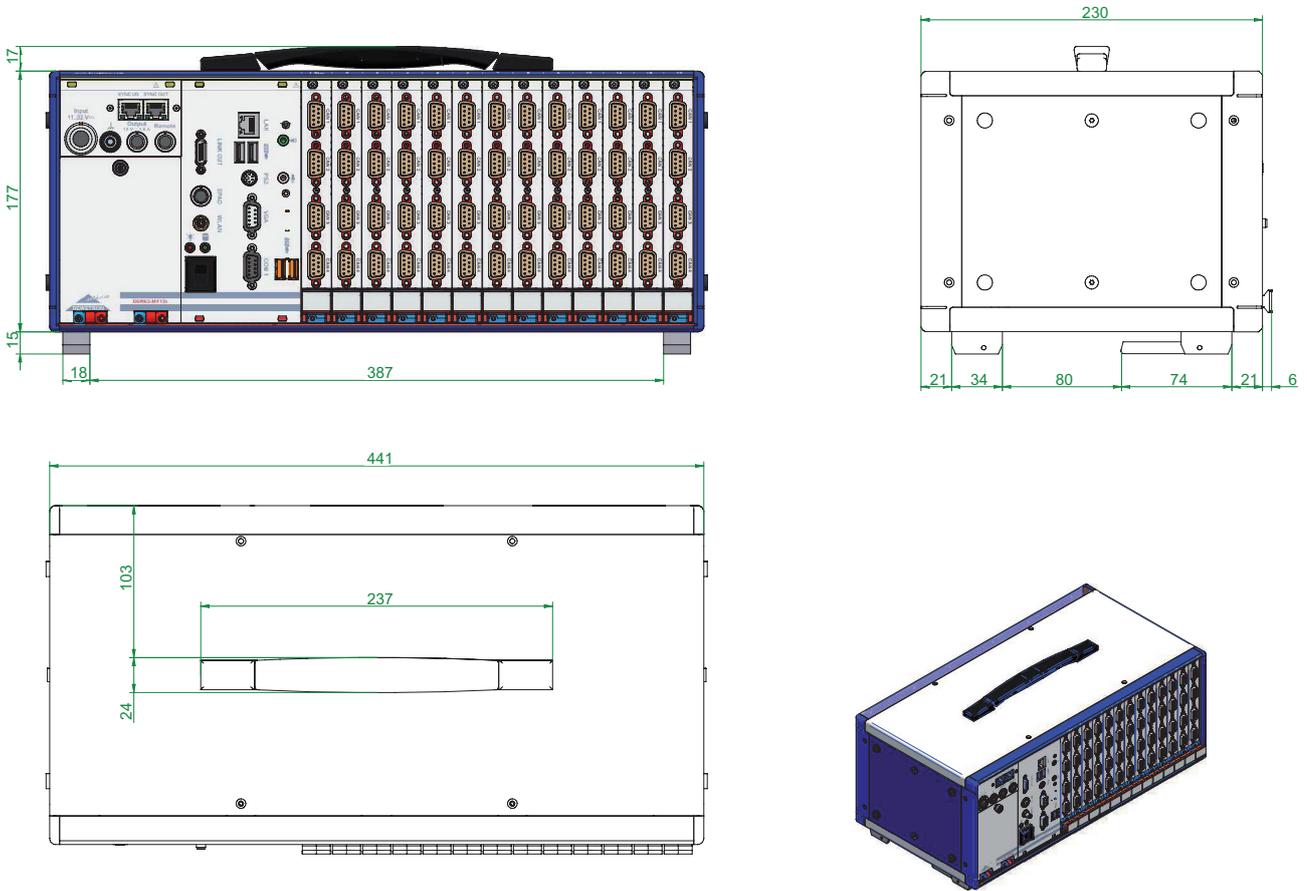

\* Dimensions in mm  
(1 inch = 25.4 mm)

## DEWE2-M13s at a glance

- 1 Power supply input connector
- 2 Chassis terminal
- 3 TRION™-SYNC-BUS
- 4 Power supply for accessories (12 V<sub>DC</sub> / 1.5 A)
- 5 Remote power-on connector (optional)
- 6 PCI express X1 interface
- 7 USB interface connectors
- 8 GBit Ethernet LAN connector
- 9 Audio interface (MIC, SPEAKER)
- 10 TRION™ series module slots
- 11 RS232 interface connector (COM 1)
- 12 VGA interface connector
- 13 PS/2 connector
- 14 Power-on button
- 15 WLAN antenna
- 16 EPAD interface connector
- 17 Slot for battery packs (optional)

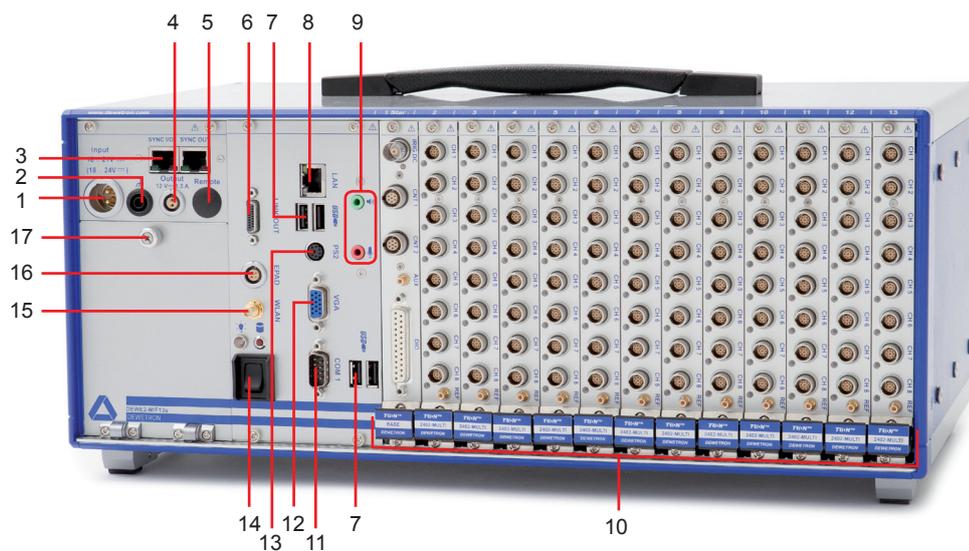

Typical DEWE2-M13s front view

---

**NOTE:** *The amount and location of the connectors might vary from system to system and depends on system configuration.*

---

---

# MAIN SYSTEM

## 1 Power supply input connector

For details see chapter power supply.

## 2 Chassis terminal

For some kind of measurements, it's necessary to provide the system with an additional ground connection.

## 3 TRION™-SYNC-BUS

The DEWE2-M13s is equipped with two TRION™-SYNC-BUS interface connectors by default for synchronization to further systems in combination with the PCI express X1 interface.

Sync cable has to be ordered separately:

- DEWE2-CBL-SYNC-01: Sync cable with RJ45 plugs, 1 m.
- DEWE2-CBL-SYNC-03: Sync cable with RJ45 plugs, 3 m.
- DEWE2-CBL-SYNC-07: Sync cable with RJ45 plugs, 7 m.

Further information regarding synchronizing DEWE2 units see chapter '*Synchronization of multiple DEWE2- devices*'.

## 4 Power supply for accessories

To supply your accessories with 12 V<sub>DC</sub>. Fused with an 1.5 A self-recovering fuse.



Lemo EGG.1B.302

Mating connector:

LEMO FGG.1B.302.CLAD52Z (for cable diameter 4.1 to 5.0 mm)

LEMO FGG.1B.302.CLAD62Z (for cable diameter 5.1 to 6.0 mm)

## 5 Remote power on connector (optional)

## 6 PCI express X1 interface (Upstream / Downstream)

The DEWE2-M13s is equipped with a PCI express X1 interface by default to enable daisy-chaining of units in combination with the TRION™-SYNC-BUS interface. Further information regarding synchronizing DEWE2 units see chapter '*Synchronization of multiple DEWE2- devices*'.

## 7 USB2.0 interface connectors (Universal Serial Bus)

The USB2.0 interface connectors meet standard USB pin assignment.

## 8 GBit ethernet LAN connector

The DEWE2-M13s system supports 10/100/1000 BaseT Ethernet with standard RJ45 connector.

## 9 Audio Device


Audio interface connectors (Speaker, Microphone)

## 10 TRION™ series module slots


Slots for TRION™ series modules. For more information about the various modules see chapter "TRION™ series modules overview".

## 11 RS-232 interface connector (COM1)

The RS-232 interface connector (male) is located on the front side of the DEWE2-M13s. It is configured as standard RS-232 interface COM 1 and can be used for mouse or other peripheral units.

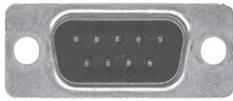

9-pin SUB-D connector (male)

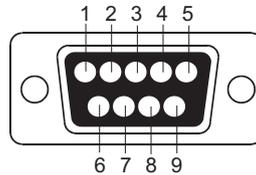

Schematic

### Pin assignment

- 1: DCD (Data Carrier Detector)
- 2: RD (Received Data)
- 3: TD (Transmitted Data)
- 4: DTR (Data Terminal Ready)
- 5: GND (Ground)
- 6: DSR (Data Set Ready)
- 7: RTS (Request To Send)
- 8: CTS (Clear To Send)
- 9: RI (Ring Indicator)

## 12 VGA connector

The VGA connector offers the possibility to connect a standard VGA displays to the system. The VGA connector meets standard VGA pin assignment.

## 13 PS/2 connector

The PS/2 connector is used to connect a mouse / keyboard to the DEWE2-M13s. The connector meets standard PS/2 pin assignment.

## 14 Power-on switch


The power-on switch has to be used to switch on the system.

## 15 WLAN antenna

The DEWE2-M13s supports 802.11 b/g/n WLAN standards.

## 16 EPAD connector (LEMO)

To connect DEWETRON EPAD modules to the system.

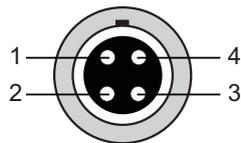

Lemo EGG.1B.304

### Pin assignment

- 1: RS-485 A
- 2: RS-485 B
- 3: +12 V
- 4: GND

Shield is connected on housing

Mating connector:


- LEMO FGG.1B.304.CLAD52Z (for cable diameter 4.1 to 5.0 mm)
- LEMO FGG.1B.304.CLAD62Z (for cable diameter 5.1 to 6.0 mm)

## 17 Slot for battery packs (optional)

The DEWE2-M13s with option DW2-PS-BAT supports a slot for up to 4 smart battery packs. Standard shipment includes 3 smart batteries, more can be ordered additionally (option BAT-89WH). Further information see chapter 'Power supply'.

# MAIN SYSTEM

## Installing a TRION™ module in the chassis

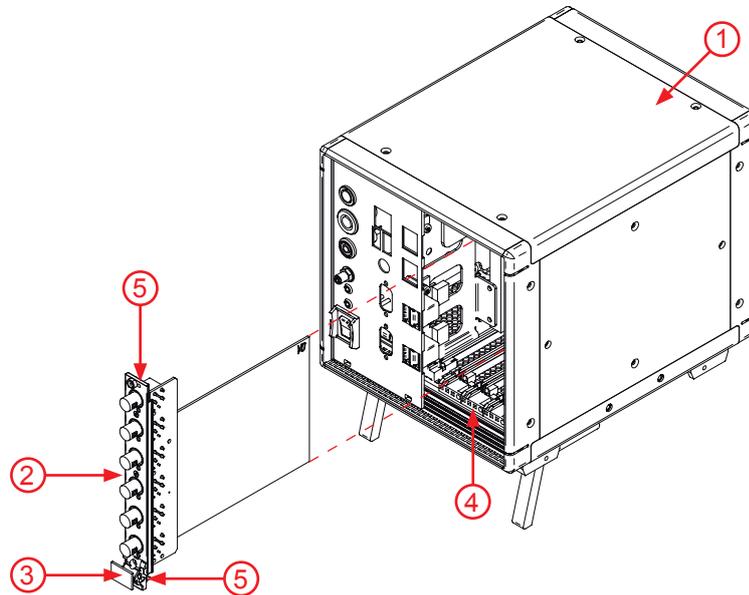

- 1 DEWE2 chassis
- 2 TRION™ series module
- 3 Injector/ejector handle
- 4 Module guides
- 5 Mounting screws

Step 1:  Proper ESD precautions must be taken to avoid any damage to the unit.

Step 2: Power off and unplug all connected cables including sensors from the DEWE2 chassis and TRION™ series modules.

Step 3: Identify a supported TRION™ peripheral slot.  
Some modules require a TRION™ STAR-slot. For more information please see chapter: "STAR-slot for TRION™ modules.

Step 4: Remove the filler panel of an unused TRION™ peripheral or STAR-slot.

Step 5: Place the module edges of the TRION™ modules into the module guides at the top and bottom of the chassis.

Step 6: Insert the TRION™ module to the rear of the chassis until a resistance appears.

Step 7: Pull up on the injector/ejector handle to latch the device

Step 8: Secure the installed TRION™ front panel to the chassis using the mounting screws.

---

**WARNING:** *Unused TRION slots must not remain uncovered! Make sure to reinstall the filler panels of unused TRION™ slots to guarantee proper cooling of the installed modules. WARRANTY VOID if the modules overheat due to missing filler panels!*



## Power supply


### Standard DC power supply

240 W DC power supply	
Input:	
Rated Input range:	18 to 21 V <sub>DC</sub> (max. 18 to 24 V <sub>DC</sub> , nom. 18 V <sub>DC</sub> )
Input frequency:	DC
Max. input current:	12 A
External AC power supply: 90 to 260 V <sub>AC</sub> (DEWE-POW-24-350 included as standard accessory)	
Output:	
Output power:	240 W
Output voltages:	+3.3 V (max. 10 A)
	+5 V (max. 10 A)
	+12 V (max. 10 A)

### Internal battery power supply: option DW2-PS-BAT

240 W DC power supply with XP-04 battery management	
Input:	
Rated Input range:	18 to 21 V <sub>DC</sub> (max. 18 to 24 V <sub>DC</sub> , nom. 18 V <sub>DC</sub> )
Input frequency:	DC
Max. input current:	12 A
External AC power supply: 90 to 260 V <sub>AC</sub> (DEWE-POW-24-350 included as standard accessory)	
Output:	
Output power:	300 W with XP-04 battery management
Output voltages:	+3.3 V (max. 10 A)
	+5 V (max. 10 A)
	+12 V (max. 10 A)

Power supply pin assignment:

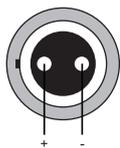

Connector type  
2-pin. male  
LEMO EGJ.2B.302

If option DW2-PS-BAT is installed, there are 4 slots for hot-swappable smart batteries available in the system. Standard shipment includes 3 smart batteries, more can be ordered additionally (option BAT-89WH).

Included cables:

#### **POW-CBL-3B302F-B-2:**

DC power supply cable LEMO FGJ.3B.302 to two male 4 mm banana plugs, 2 m.  
(used for connecting DEWE2-M13s to DEWE-POW-24-350 or to DEWE-DCDC-24-300-ISO)

**NOTE:**



*If the system is powered by batteries, please take care that there are at least 3 batteries installed! In some special applications 4 batteries are necessary! (Hot swap of the batteries not possible)*

**WARNING:**



*It is only allowed to use battery packs from **Inspired Energy** with the labelling: "NH2054HD34"! Otherwise the system won't work or could get damaged!*

**NOTE:**




*Some dedicated modules (TRION-A429, TRION-M1553, TRION-MA4) require additional -12 V<sub>DC</sub> voltage which is not supported with **DC powered DEWE2 instruments** by default. Please ask your local dealer or factory for more information.*

# MAIN SYSTEM

## External AC/DC power supply (standard accessory)

AC/DC power supply	DEWE-POW-24-350
<b>Input:</b>	
Rated input voltage:	100 to 240 V <sub>AC</sub> (max. 90 to 264 V <sub>AC</sub> )
Input frequency:	47 to 63 Hz
Input current (typ.):	2 A @ 230 V <sub>AC</sub> / 4 A @ 115 V <sub>AC</sub>
Inrush current (typ.):	44 A @ 230 V <sub>AC</sub> / 22 A @ 115 V <sub>AC</sub>
Leakage current:	<2 mA @ 240 V <sub>AC</sub>
P.F.C. (typ.):	0.95 @ 230 V <sub>AC</sub> / 0.98 @ 115 V <sub>AC</sub>
<b>Output:</b>	
Output voltage:	24 V
Min. load:	0 A
Rated load (free / fan):	12.5 A / 14.6 A
Output tolerance:	±2 %
Ripple & Noise (max.):	150 mV
Efficiency (typ.):	88 %
Output connector:	Banana jacks and LEMO EGG.2B.302
<b>Protection:</b>	
Overload:	105 % to 130 % constant current limiting, auto recovery
Over voltage:	26.7 to 32.4 V; Hiccup mode, auto recovery after fault has been removed
Over temperature:	> 80°C ±5°C detect on heat sink of power transistor Shutdown, auto recovery after temp. has fallen
Short circuit:	Yes
Setup time:	<2000ms @ 230V <sub>AC</sub> / 4000ms @ 115V <sub>AC</sub>
Rise time:	<100ms @ 230 V <sub>AC</sub> / 100ms @ 115 V <sub>AC</sub>
Holdup time:	16ms @ 230 V <sub>AC</sub> / 16ms @ 115 V <sub>AC</sub>
Withstand voltage:	I/P-O/P: 3 KV <sub>AC</sub> ; I/P-FG: 1.5 KV <sub>AC</sub> ; O/P-FG: 0.5 KV <sub>AC</sub> / 1 minute
Isolation resistance:	I/P-O/P, I/P-FG, O/P-FG: 500 V <sub>DC</sub> / 100 MOhm
Switching frequency:	100 kHz
<b>Temperature:</b>	
Operating:	-10 to 65°C
Derating:	45 to 60°C: 2 %/°C (3.5 & 5 V: 40 to 65°C: 2 %/°C)
Storage:	-40 to 85°C
<b>Humidity:</b>	
Operating:	20 to 90 % RH
Storage:	10 to 95 % RH (non condensing)
M.T.B.F.:	> 106 K hours ( according to MIL-HDBK-217F at 25°C environment)
Safety:	Approved: UL 60950-1 / TÜV EN60950-1
<b>EMC:</b>	
EMI	EN55022 Class B / EN61000-3-2,3
EMS	EN61000-4-2,3,4,5,6,8,11 / ENV50204
Dimensions (W x D x H):	248 x 106 x 62 mm (9.8 x 4.2 x 2.4 in.)
Weight:	1.7 kg (3.7 lbs)

## DEWE2-M13s with option DW2-PS-BAT and external AC/DC power supply

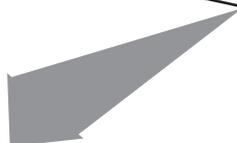

Cable POW-CBL-3B302F-B-2

DEWE-POW-24-350  
90 to 260 VAC IN

## Maintenance


### Replacing the fuse

The DEWE2-M13s-BAT is protected by a user replaceable 20 A ATO fuse.



*The fuse has to be replaced by the same type!*

### Installing the optional 19" mounting kit

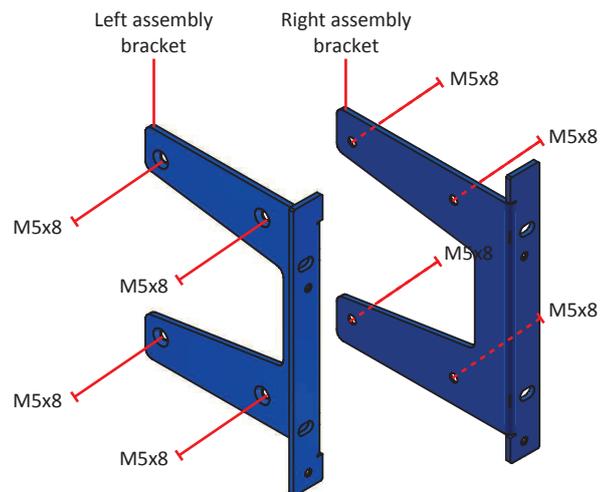

---

**WARNING:** *When installing the 19" mounting brackets, the maximum length for screws is 8 mm! If any screw get lost replace it with M5x8 countersunk head screw only. Otherwise the TRION™ series cards or the powersupply could get damaged!*

---

## System recovery

For more information regarding a total recovery please refer to the corresponding total recovery technical reference manual shipped with your DEWE2 system.


# MAIN SYSTEM

## Cooling considerations

The intake vent of the DEWE2-M13s is on the bottom of the chassis, where the cooling exhaust vent for the DEWE2-M13s is on the rear of the chassis.

**CAUTION:**

*Adequate clearance between the chassis and surrounding equipment or blockages must be maintained to ensure proper cooling of the chassis power supply as well as the modules plugged into the chassis!*

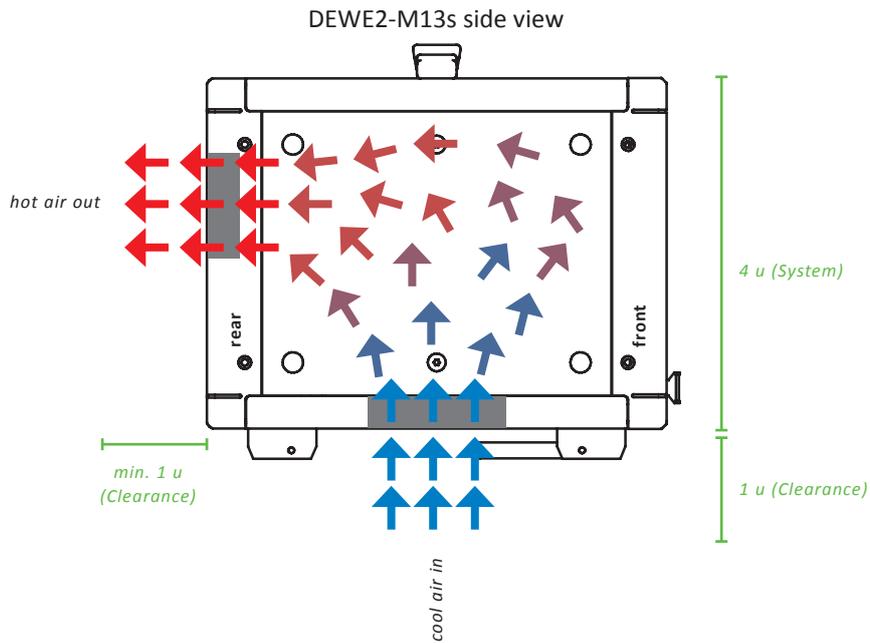

**NOTE:**

*When installing the DEWE2-M13s into a 19" cabinet please keep in mind that the unit is siphoning air from the bottom (see schematic above). Due to this circumstances 5 u are required for one system (4 u = system + 1 u = cooling)! Otherwise the system may overheat and could get damaged!*



---

# CE-Certificate of Conformity



Manufacturer:

**DEWETRON GmbH**

Address:

**Parking 4  
8074 Grambach, Austria**

Tel.: +43 316 3070 0

Fax: +43 316 3070 90

e-mail: sales@dewetron.com

http://www.dewetron.com

Name of product:

**DEWE2-M13s**

Kind of product:

*Signal conditioning instrument*

The product meets the regulations of the following EC-directives:

**2014/35/EU**

**"Directive of the European Parliament and of the Council of 26 February 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits"**

**2004/108/EC**

**"Directive on the approximation of the laws of the Member States relating to electromagnetic compatibility amended by the directives 89/336/EWG."**

The accordance is proved by the observance of the following standards:

<b>L V E M C</b>	<b>Safety</b>	IEC 61010-1:2011 300 V CATII, Pol. Deg. 2	
	<b>Emissions</b>	EN 61000-6-4	EN 55011 Class B
	<b>Immunity</b>	EN 61000-6-2	Group standard

**Graz, February 13, 2015**

Place / Date of the CE-marking

Ing. Thomas Propst / Manager Total Quality

▼  
NOTES

---